


N706 / N707

Part Catalog

1. EXTERIOR 1
2. EXTERIOR 2
3. OPERATION PANEL
4. OPTICS SECTION 1
5. OPTICS SECTION 2
6. OPTICS SECTION 3
7. OPTICS SECTION 4
8. LASER UNIT
9. PAPER FEED SECTION 1
10. PAPER FEED SECTION 2
11. PAPER FEED SECTION 3
12. PAPER REGISTRATION
13. PAPER TRAY
14. FUSING UNIT 1
15. FUSING UNIT 2
16. PAPER EXIT1

17. PAPER EXIT2
18. DUPLEX UNIT1
19. DUPLEX UNIT2
20. DUPLEX UNIT3
21. DRIVER UNIT
22. TRANSFER UNIT
23. ELECTRICAL SECTION1
24. ELECTRICAL SECTION2
25. ARDF-EXTERIOR
26. ARDF-PAPERTRAYSECTION
27. ARDF-FEEDSECTION1
28. ARDF-FEEDSECTION2
29. ARDF-TRANSFERSECTION
30. ARDF-DRIVE SECTION
31. ARDF-FRAME SECTION
32. ARDF-DECAL SAND DOCUMENTS

1. EXTERIOR 1

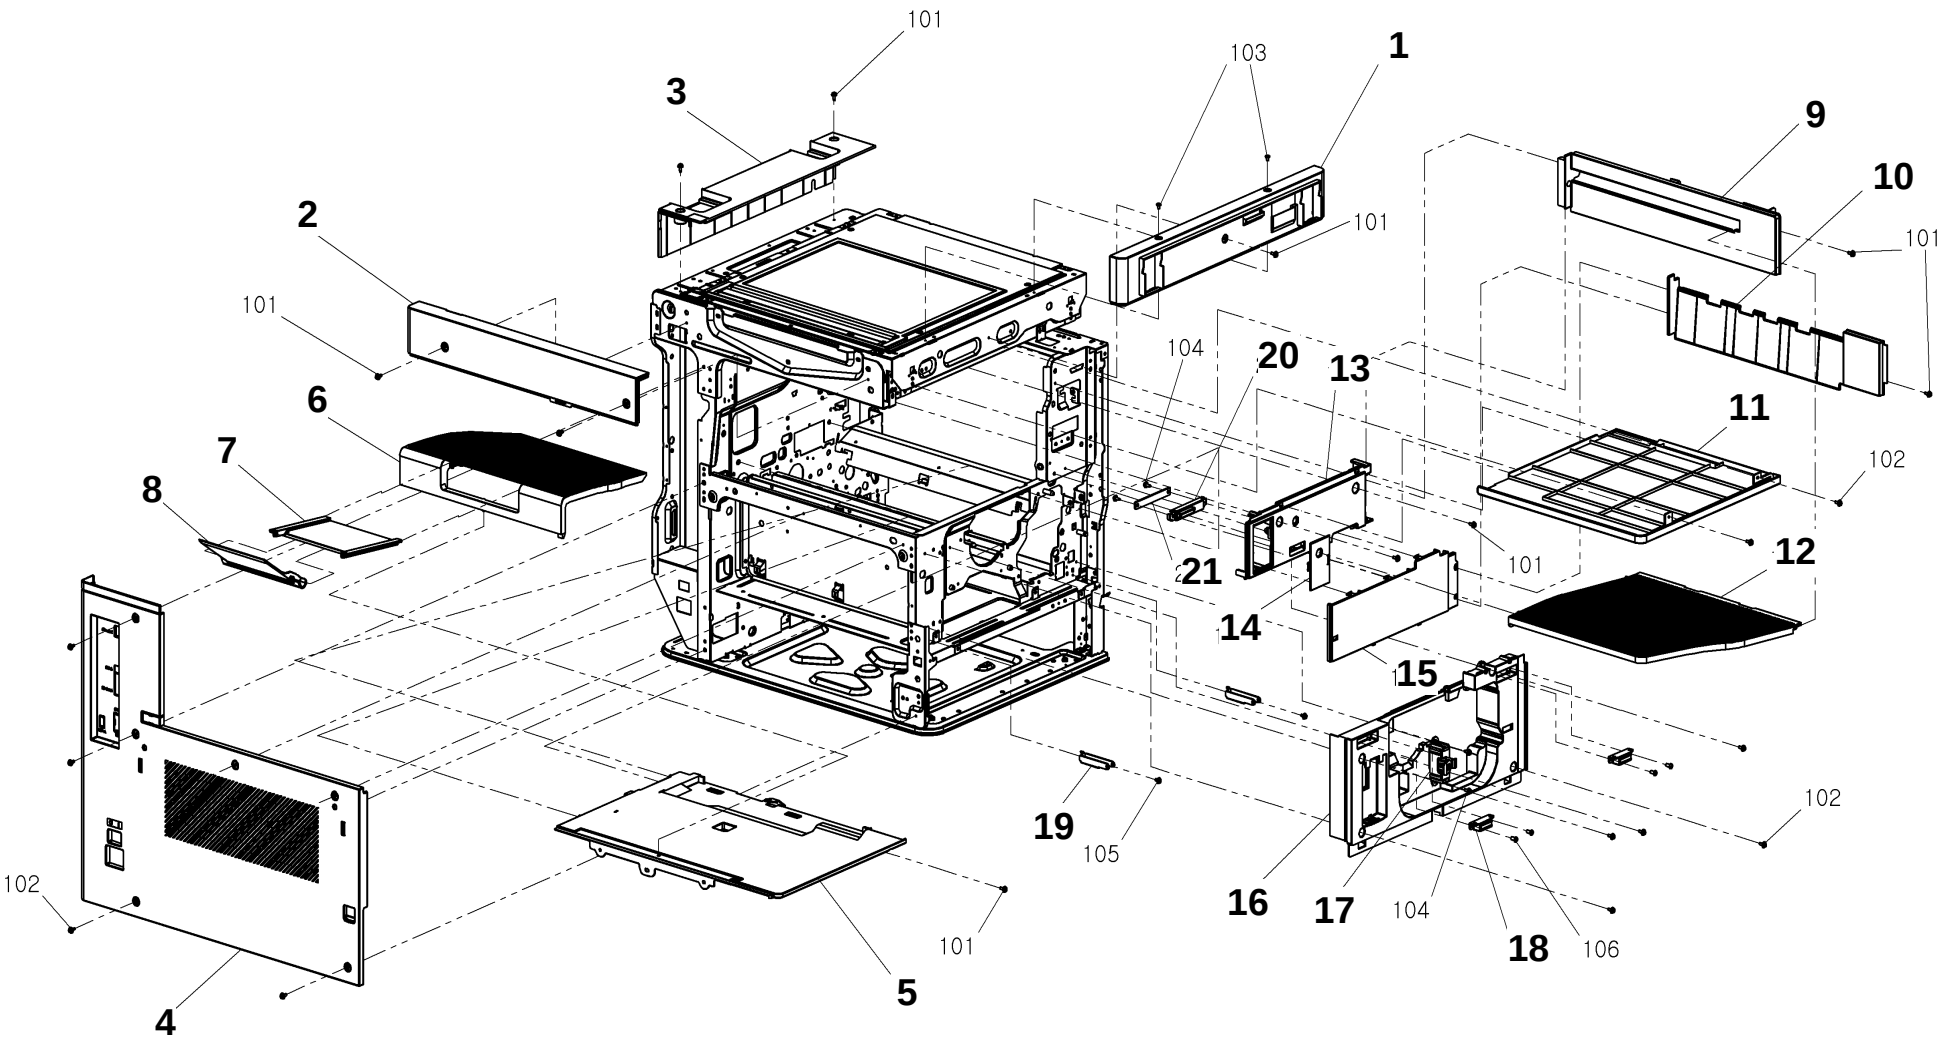


1. EXTERIOR 1

Index No.	Part No.	Description	Q'ty
1	N0011251	COVER:SCANNER:FRONT	1
2	N0011252	COVER:SCANNER:LEFT	1
3	N0011253	COVER:SCANNER:REAR	1
4	N0011257	COVER:LEFT	1
5	N0011265	COVER:EXIT:LEFT	1
6	N0011268	TRAY:EXIT	1
7	N0011283	TRAY:EXIT:ASSIST:BASE	1
8	N0011269	TRAY:EXIT:ASSIST:EXTANTION	1
9	N0011275	COVER:EXIT:UPPER	1
10	N0011264	COVER:EXIT:LOWER	1
11	N0011256	COVER:SCANNER:BOTTOM	1
12	N0013998	TRAY:REVERSE	1
13	N0011266	COVER:EXIT:REAR:UPPER	1
14	N0011267	COVER:EXIT:REAR:1-BIN	1
15	N0011276	COVER:EXIT:REAR:LOWER	1
16	N0011274	COVER:FRONT:INNER	1
17	N0011280	LEVER:TONER SUPPLY:FRONT	1
18	AG070504	MAGNET:ASS'Y:4.4KGF	2
19	N0011398	DOOR:HINGE	2
20	N0011284	CAP:LED:EXIT	1
21	N0015096	PCB : EXIT LED	1

Index No.	Part No.	Description	Q'ty
101	04513008P	SCREW:FLANGE:M3.0*8 BLACK	10
102	04513008N-K	SCREW:TAP:M3X8	11
103	03530050P	BIND SCREW M3*5 BLACK	2
104	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	4
105	04513006N-K	SCREW:FLANGE:M3.0*6	2
106	04340082N	SCREW:ROUND:M4.0*:8	4

2. EXTERIOR 2

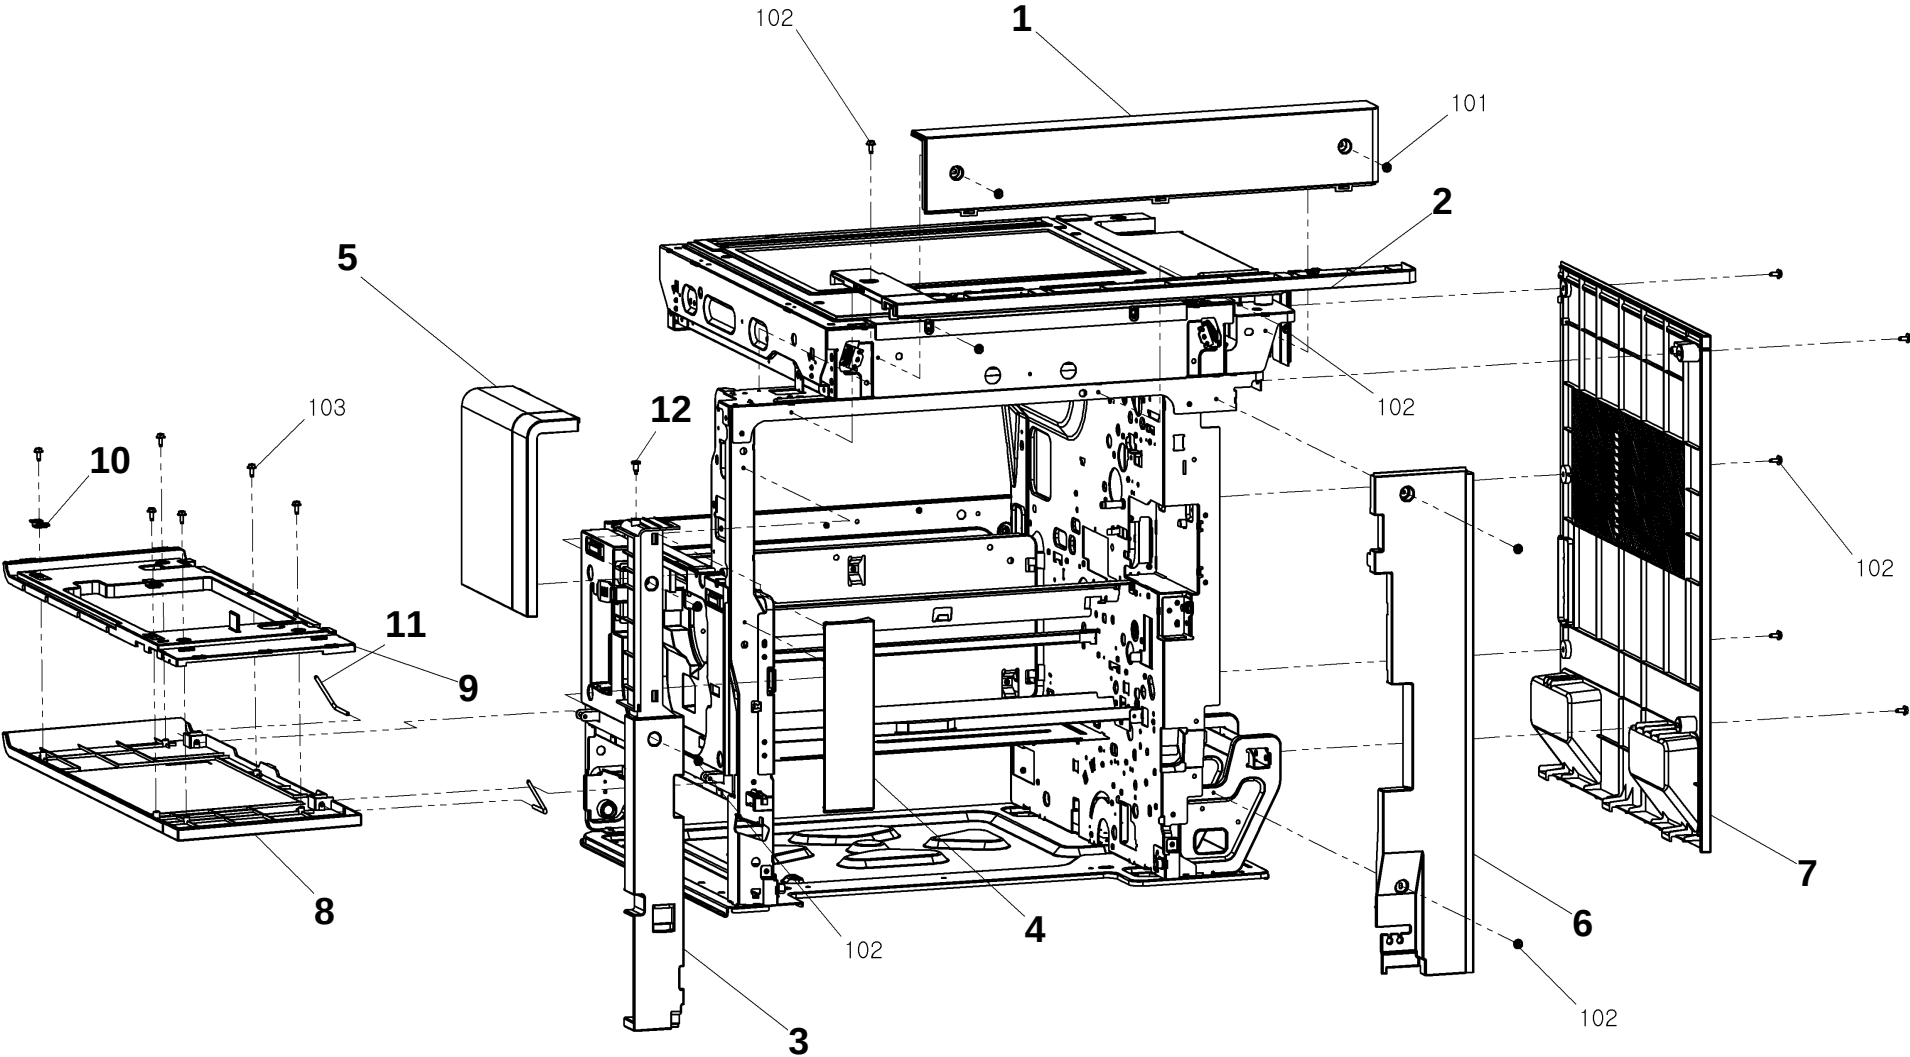


2. EXTERIOR 2

Index No.	Part No.	Description	Q'ty
1	N0011254	COVER:SCANNER:RIGHT	1
2	N0011258	COVER:RIGHT	1
3	N0011279	COVER:RIGHT:FRONT:LOWER	1
4	N0011259	COVER:RIGHT:FRONT:UPPER	1
5	N0011261	COVER:FRONT	1
6	N0011281	COVER:REAR:RIGHT	1
7	N0011260	COVER:REAR	1
8	N0011270	COVER:DOOR	1
9	N0011271	COVER:DOOR:INNER	1
10	N0011397	MAGNET BRACKET:DOOR:FRONT	2
11	N0011399	SHAFT:HINGE	2
12	N0011396	STUD SCREW:COVER:RIGHT:FRONT	1

Index No.	Part No.	Description	Q'ty
101	04513008P	SCREW:FLANGE:M3.0*8 BLACK	2
102	04513008N-K	SCREW:TAP:M3X8	12
103	04503008N-K	BIND SCREW M3*5 BLACK	6

3. OPERATION PANEL

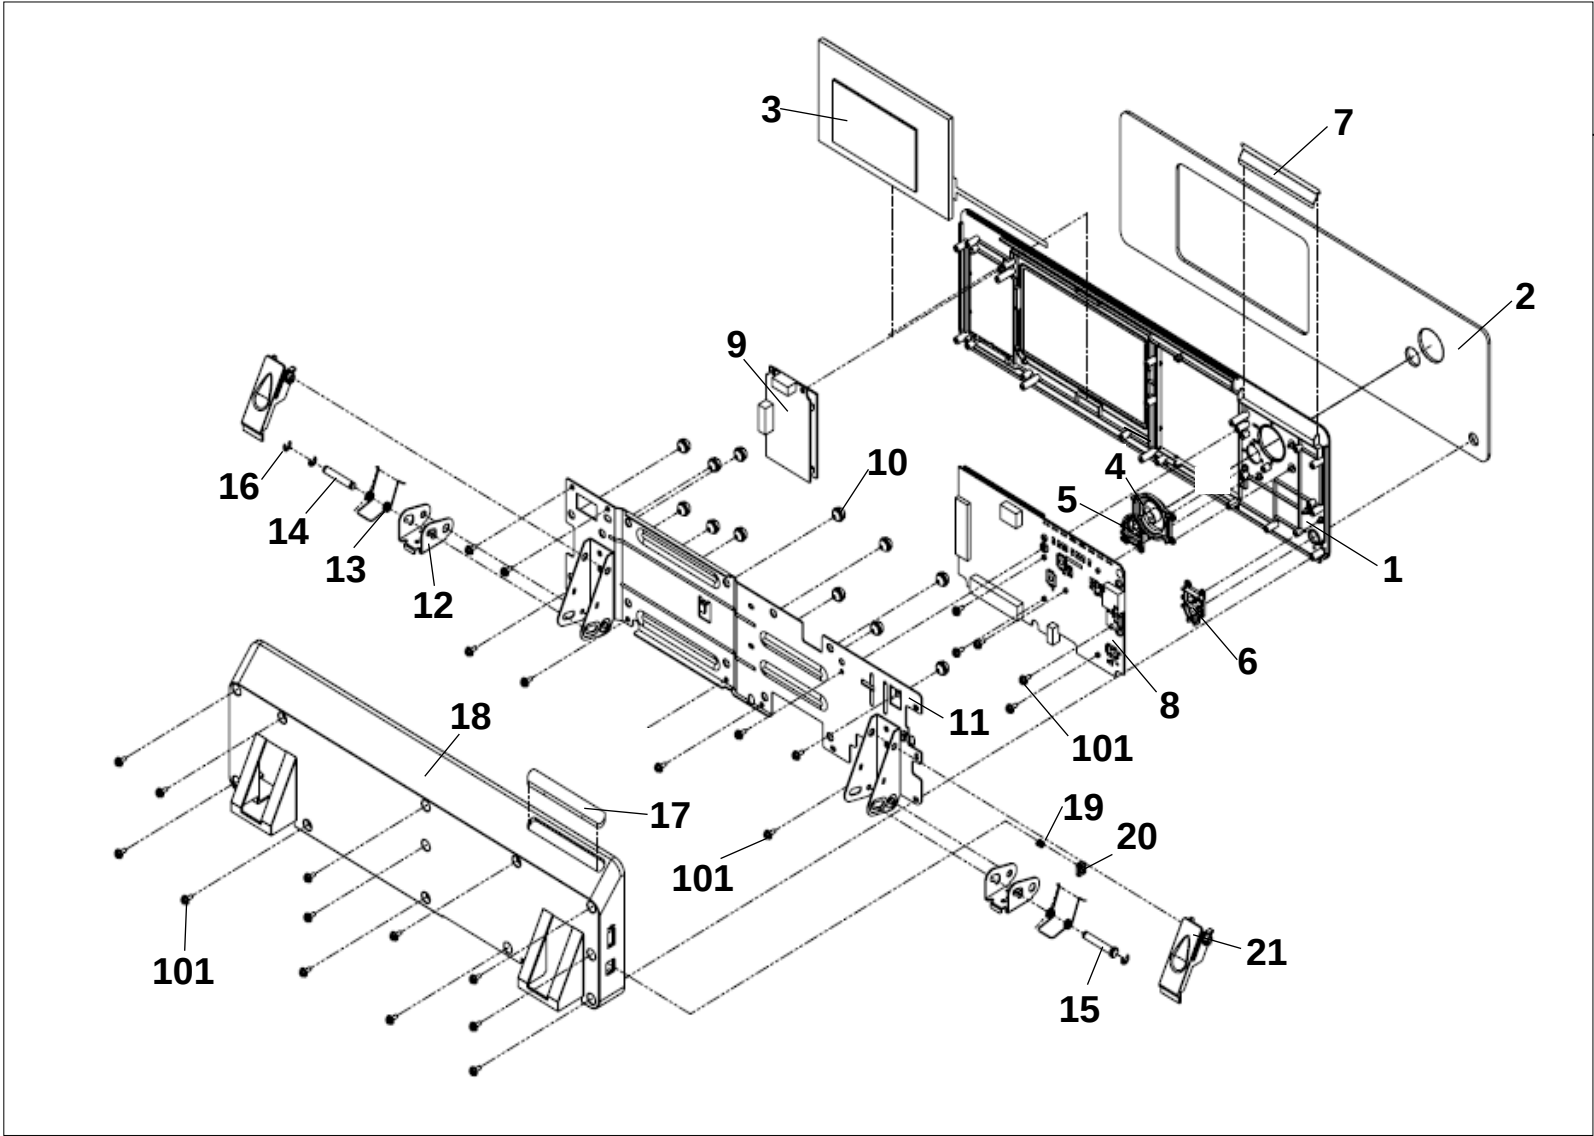


3. OPERATION PANEL

Index No.	Part No.	Description	Q'ty
*	NN010050	OPERATION UNIT:NA	1
1	N0011432	COVER:OP:UPPER	1
2	NN011429	COVER:OP:ASSY:NA	1
3	N0015870	ASSY : LCD	1
4	N0011451	KEY TOP : START: ASSY	1
5	N0011452	KEY TOP: CLEAR STOP:ASSY	1
6	N0011453	KEY TOP:MAIN: POWER S/W:ASSY	1
7	N0011440	MYLAR:REFLECTOR:OP:ASSY	1
8	N7025060	PCB:UICC_MAIN:NA	1
9	N0015062	PCB:UICC_TK3_LED	1
10	N0011497	RUBBER:OP	12
11	NC021495	BRACKET:OP:ASSY;CHN	1
12	N0011517	BRACKET:HINGE:SCANNER	2
13	N0011520	SPRING:OP	2
14	N0011519	SHAFT:HINGE:OP	1
15	N0011521	SHAFT:HINGE:OP:RIGHT	1
16	07200040E	E-RING M4	3
17	N0011436	LED:WINDOW:COVER:OP	1
18	N0011433	COVER:OP:BOTTOM	1
19	N0011466	SPRING:RESET	1
20	N0011465	BUTTON:RESET	1
21	N0011471	LEVER:HINGE:COVER:OP	1

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	26

4. OPTICS SECTION 1

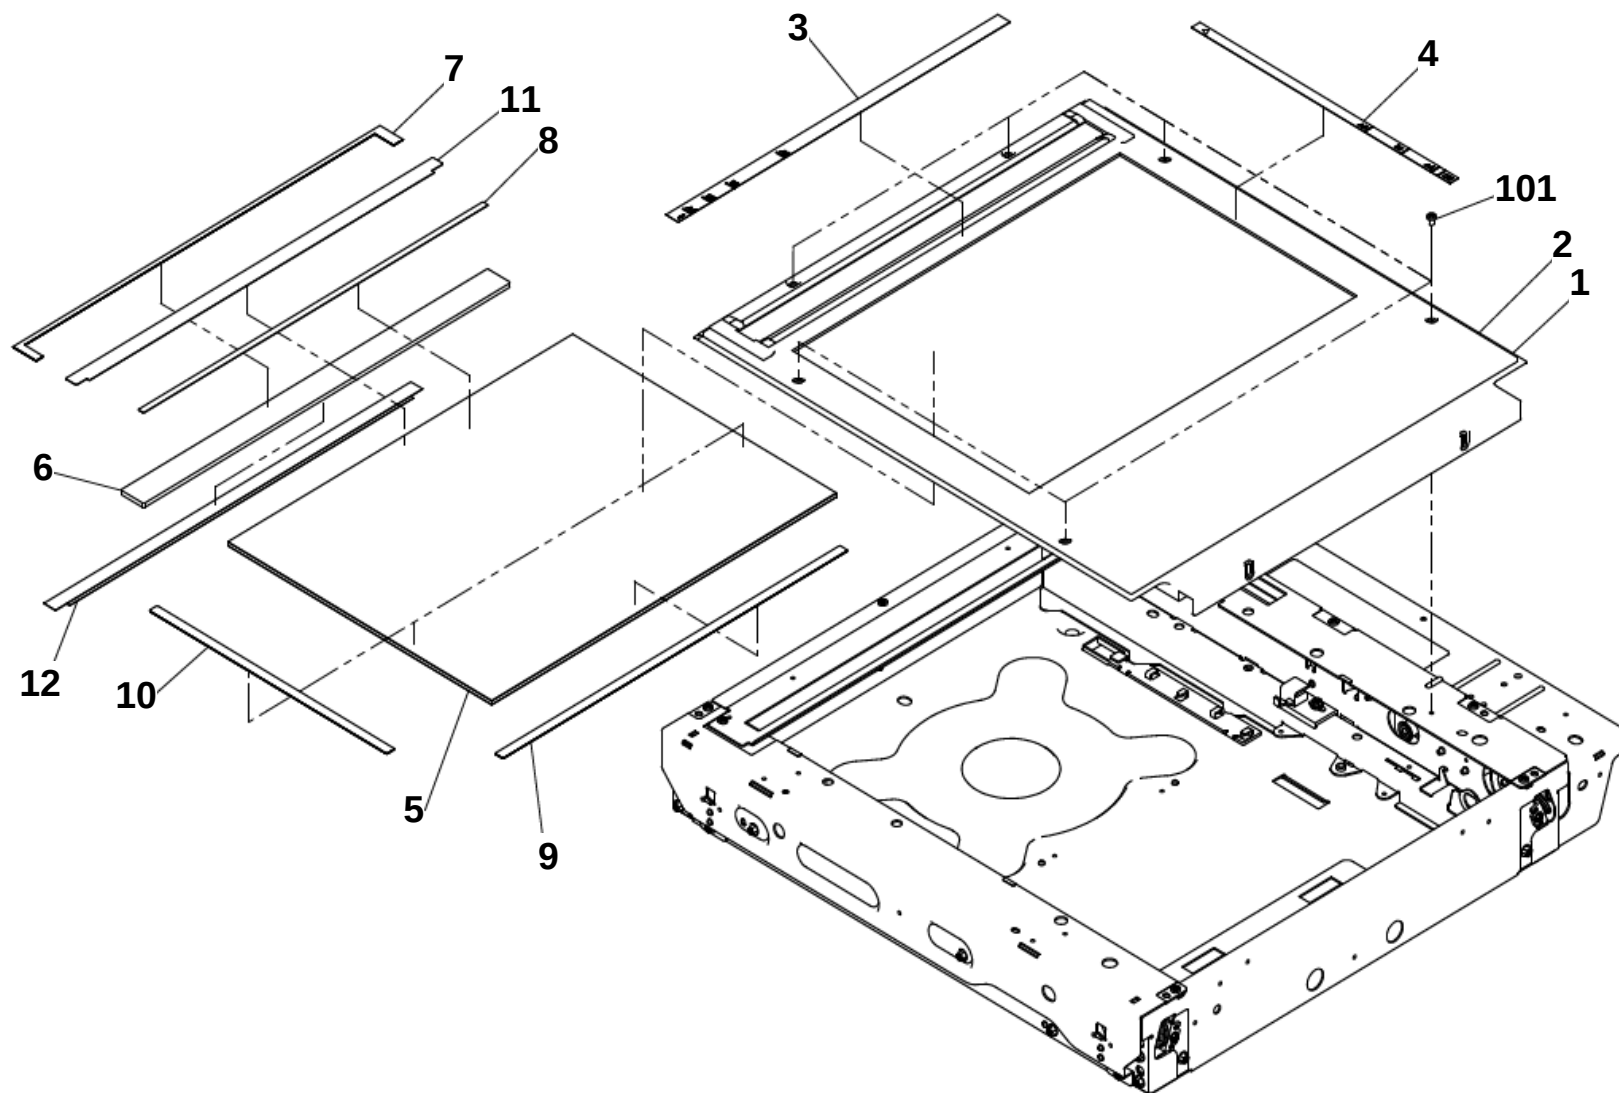


4. OPTICS SECTION 1

Index No.	Part No.	Description	Q'ty
1	N0011680	Scanner Cover Ass'y	1
2	N0011640	Scanner Cover	1
3	N0011647	Scale Decal : Left	1
4	N0011648	Scale Decal : Rear	1
5	N0011643	Exposure Glass : Flatbed	1
6	N3301795	Exposure Glass : ADF	1
7	N0011641	Tape : Glass : ADF	1
8	N0011644	Tape : Glass : Left	1
9	N0011642	Tape : Glass : Right	1
10	N0011645	Tape : Glass : H	2
11	N0011646	Calibration Strip	1
12	N0011648	Dust Proof Mylar	1

Index No.	Part No.	Description	Q'ty
101	03530050P	BIND SCREW M3*5 BLACK	6

5. OPTICS SECTION 2

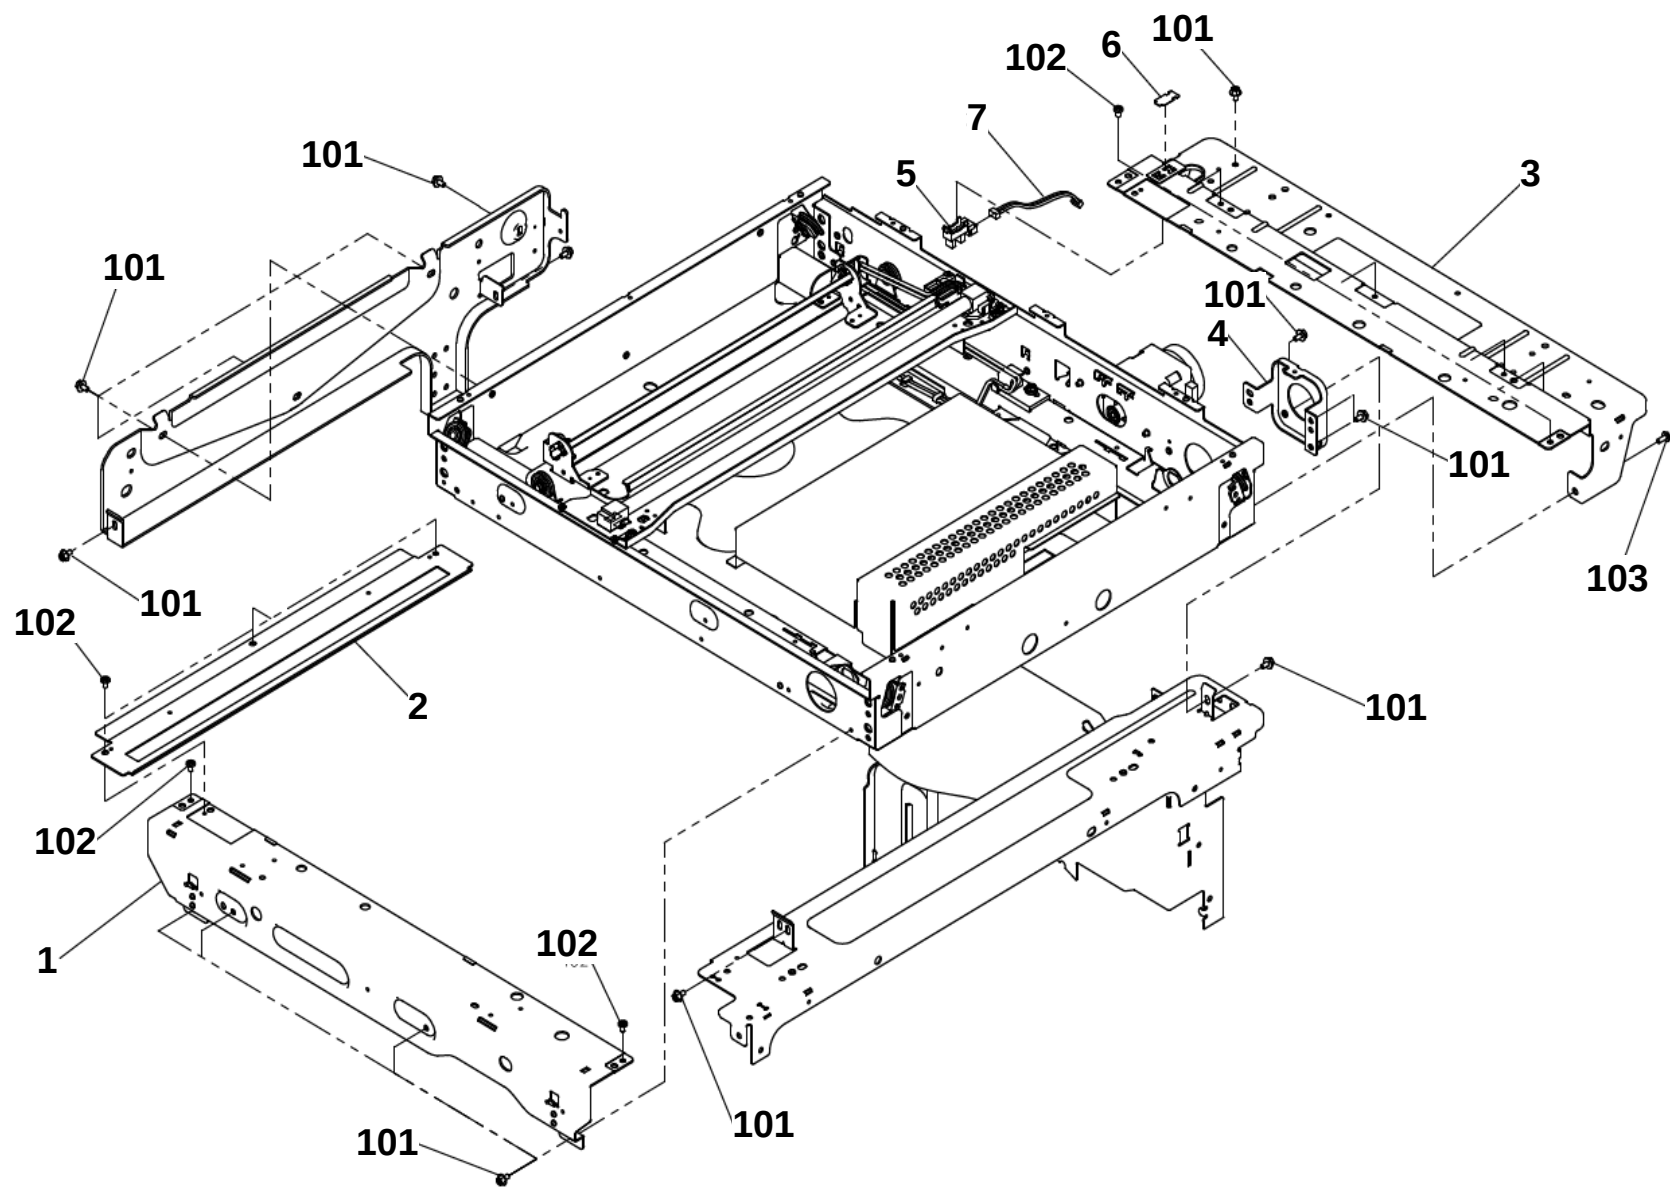


5. OPTICS SECTION 2

Index No.	Part No.	Description	Q'ty
1	N0011631	Front Frame	1
2	N0011639	ADF Bracket	1
3	N0011636	Rear Frame	1
4	N0011601	Support Bracket : Rear	1
5	AW020145	Photointerruptor : Flat	1
6	G5701225	Sensor Shielding Plate	1
7	N0015261	Home Seneor Harness	1

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	15
102	03530050N	BIND SCREW M3*5	11
103	04513008N-K	SCREW:TAP:M3X8	1

6. OPTICS SECTION 3

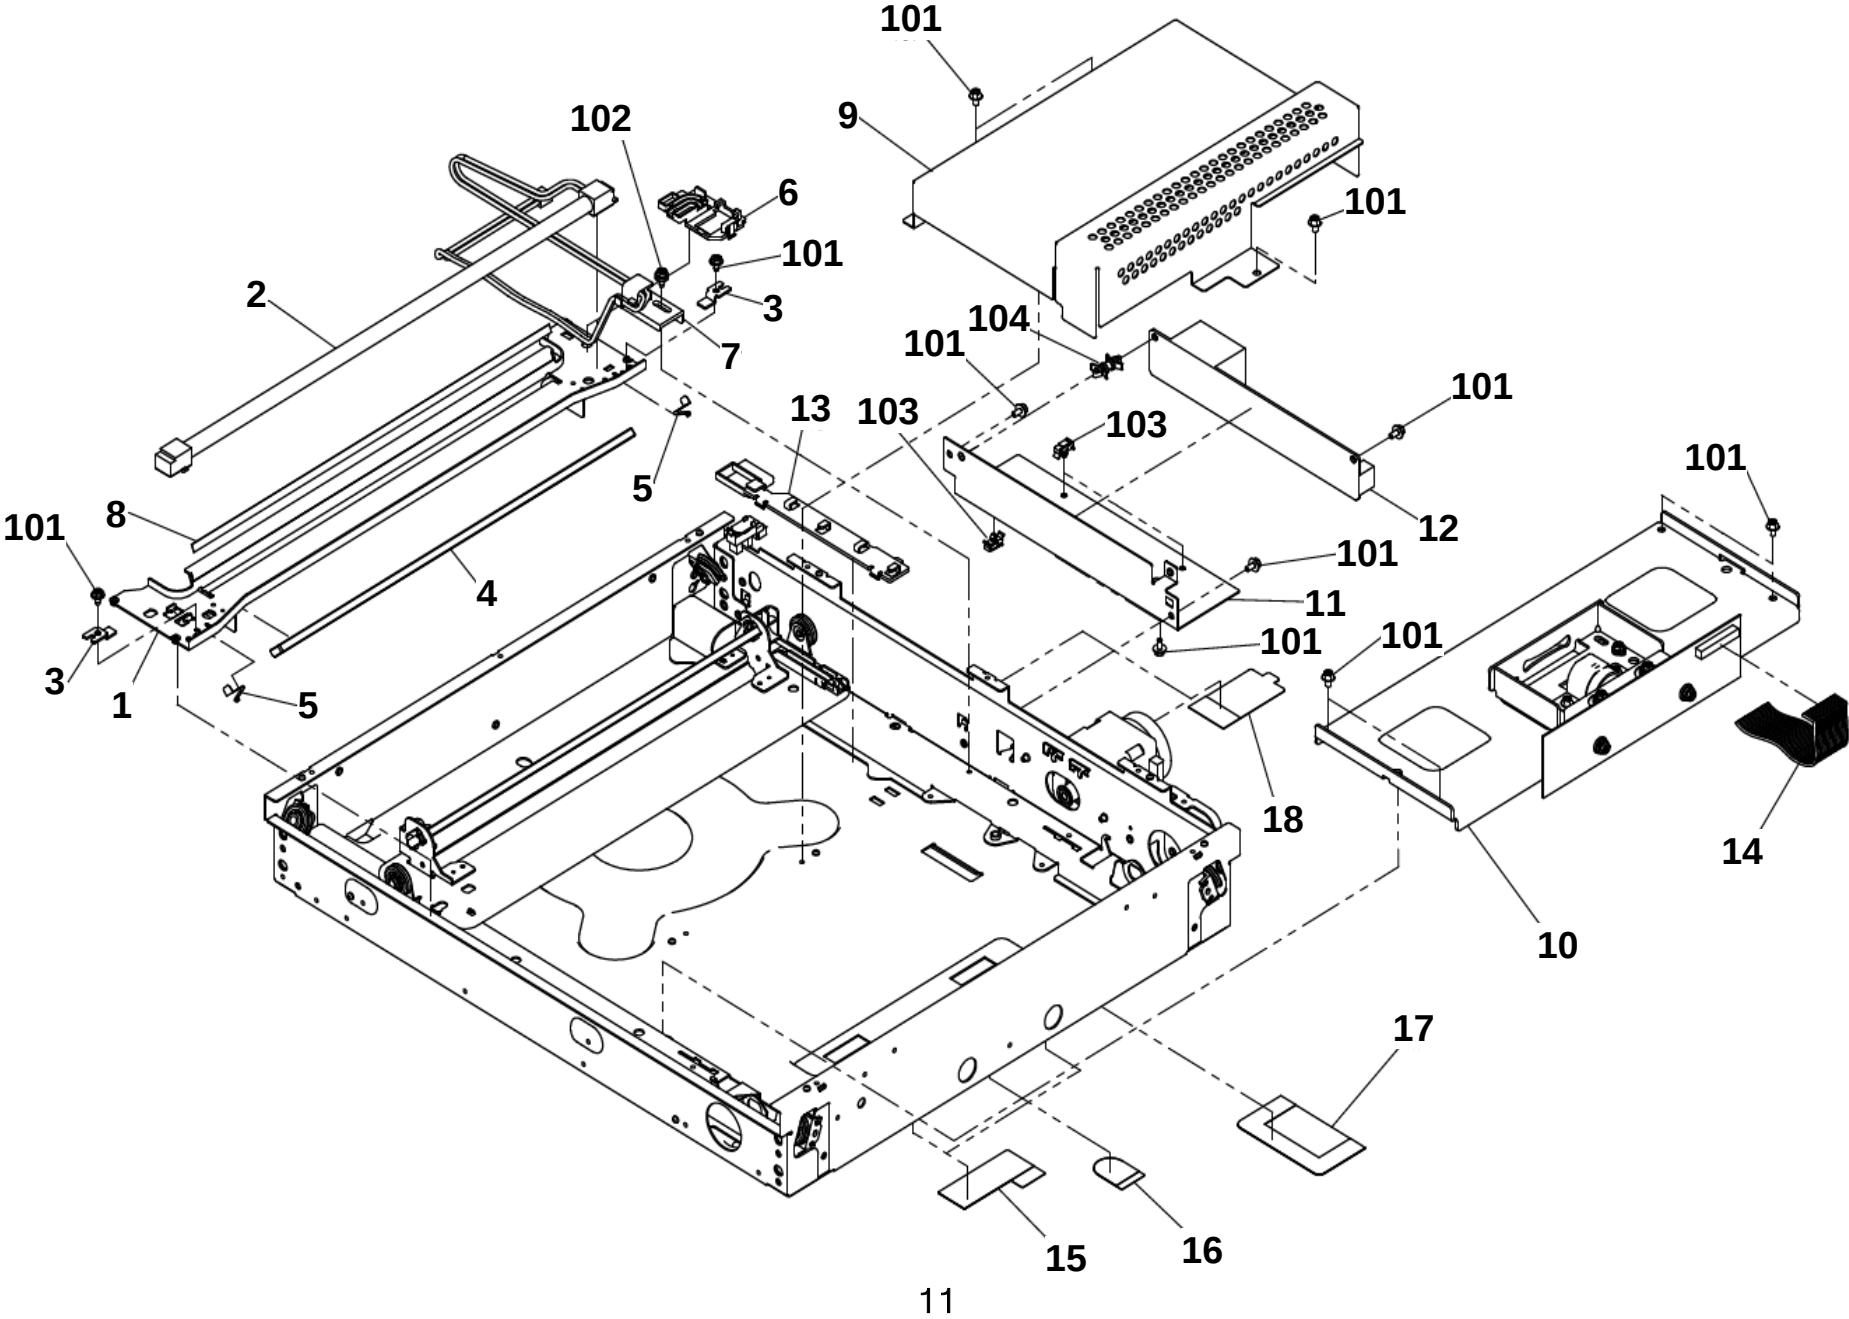


6. OPTICS SECTION 3

Index No.	Part No.	Description	Q'ty
1	N0011700	1st Scanner Ass'y	1
2	N0011723	Xenon Lamp	1
3	N0011721	Wire Clip	2
4	AC030142	1st Mirror	1
5	N0011728	1st Mirror Clamp	2
6	N0011722	1st Lamp Holder	1
7	N0011682	Lamp Harness Holder	1
8	A1001714	Reflector	1
9	N0011806	Inner Cover – Scanner	1
10	N0011800	Lens Unit	1
11	N0011726	Stabilizer Holder Bracket	1
12	N0011724	Stabilizer	1
13	N0011682	Lamp Harness Holder 2	1
14	N0015228	SBU FFC Cable	1
15	N0011626	Mylar Lens 1	2
16	N0011627	Mylar Lens 2	1
17	N0011625	Mylar SBU 1	1
18	N0011688	Mylar SBU 2	2

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	13
102	08025299	(+)TAPPING SCREW M3X8	1
103	11050511	CLAMP:HARNESS CLAMP: LWS-0306ZC	3
104	N0011727	SUPPORT:INVERTER	1

7. OPTICS SECTION 4

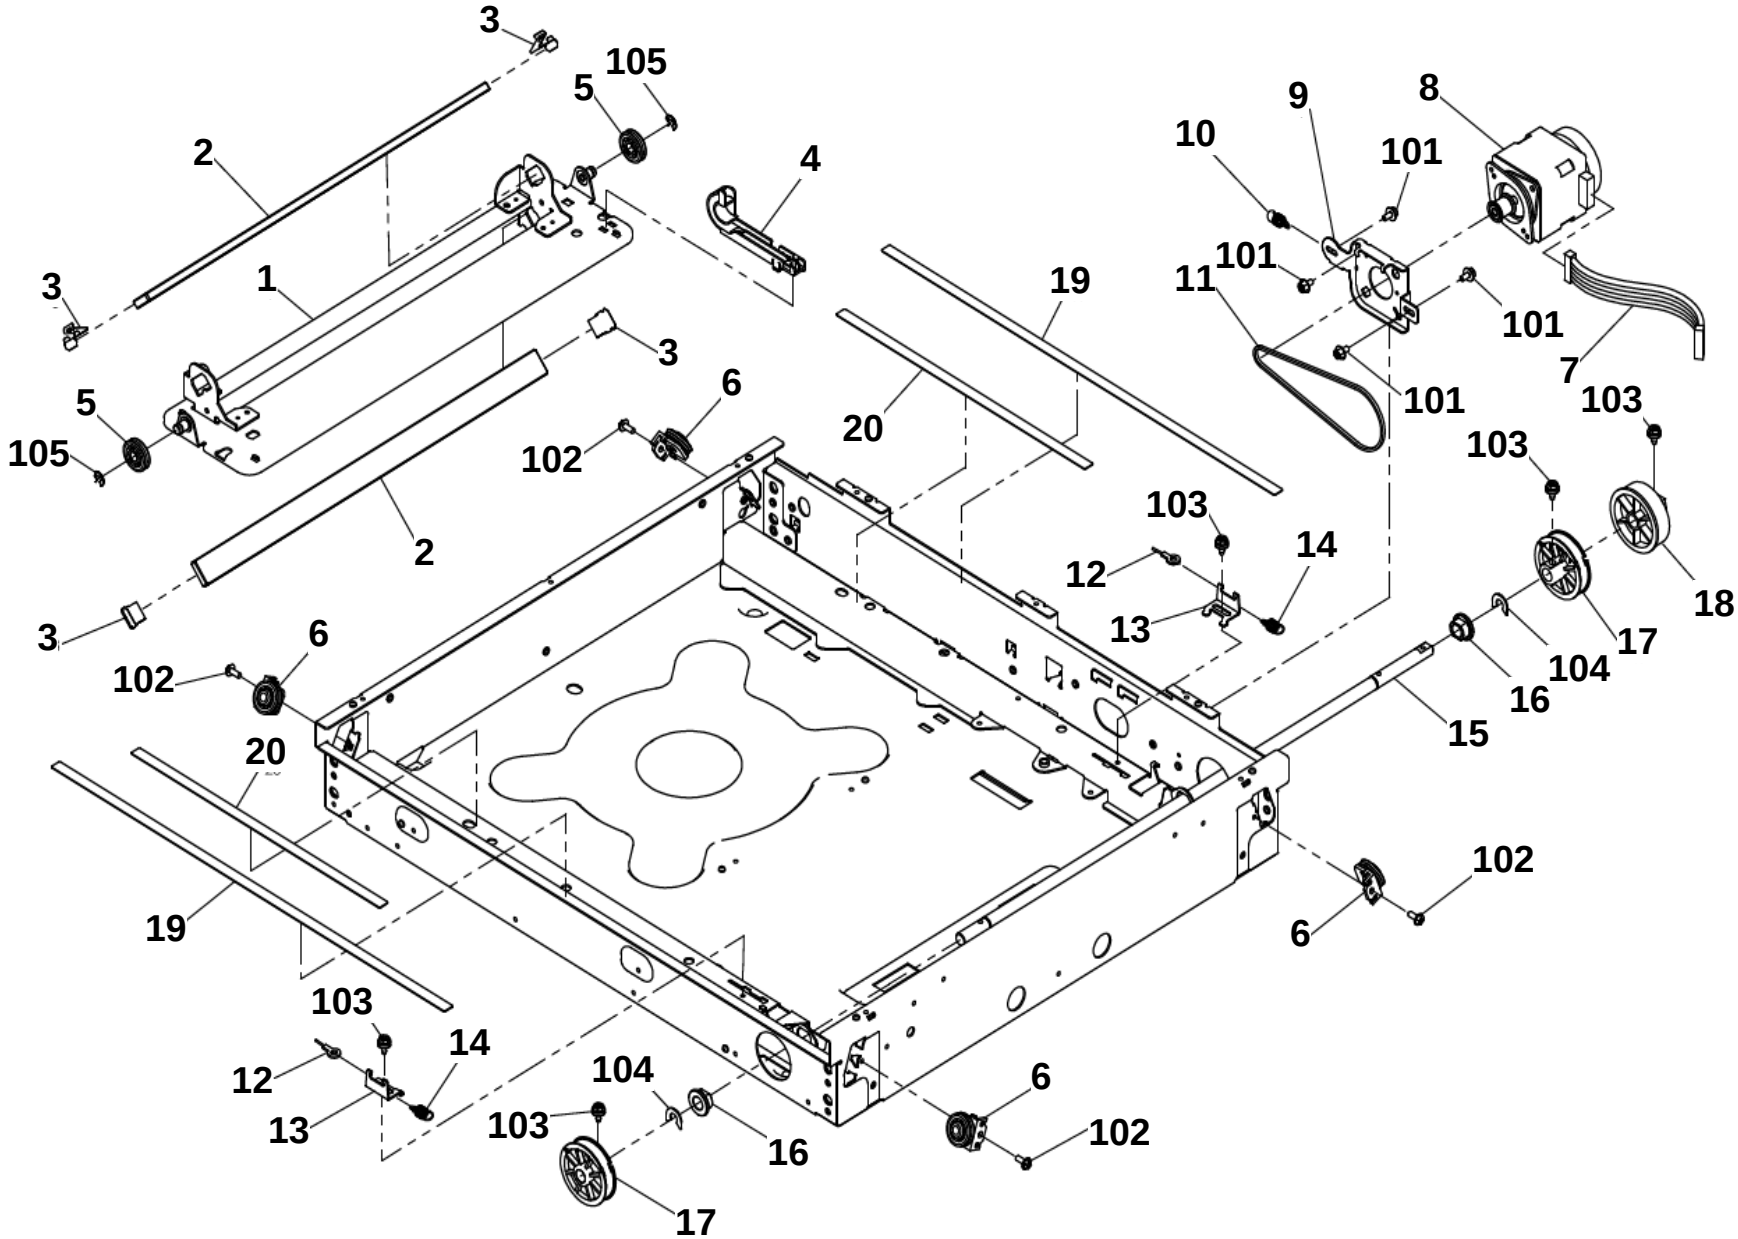


7. OPTICS SECTION 4

Index No.	Part No.	Description	Q'ty
1	N0011740	2nd Scanner Ass'y	1
2	AC030162	2nd Mirror	2
3	N0011739	2nd Mirror Clamp	4
4	N0011737	2nd Lamp Harness Holder	1
5	B2381807	2nd Pulley	2
6	B2381806	Idler Pulley	4
7	N0015292	Harness - STM	1
8	B2381715	Stepping Motor : M42	1
9	N0011666	Bracket : Scanner Motor	1
10	N0011667	Tension Spring:Scanner Motor	1
11	AA043572	Timing Belt : 249ST1.5	1
12	N0011675	Drive Wire	2
13	N0011677	Bracket : Tensioner	2
14	AA060980	Tension Spring:11300mN	2
15	N0011670	Scanner Drive Shaft	1
16	50530223	Bushing - 8 × 12 × 7	2
17	N0011674	Pulley : Drive Wire	2
18	AB030709	Timing Pulley : 73	1
19	N0011621	1st Slide Rail	2
20	N0011617	2nd Slide Rail	2

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	4
102	04513008N-K	SCREW:TAP:M3X8	4
103	08025299	(+)TAPPING SCREW M3X8	5
104	08050088	E-RING:M6(ZN5)	2
105	07200040E	E-RING M4	2

8. LASER UNIT

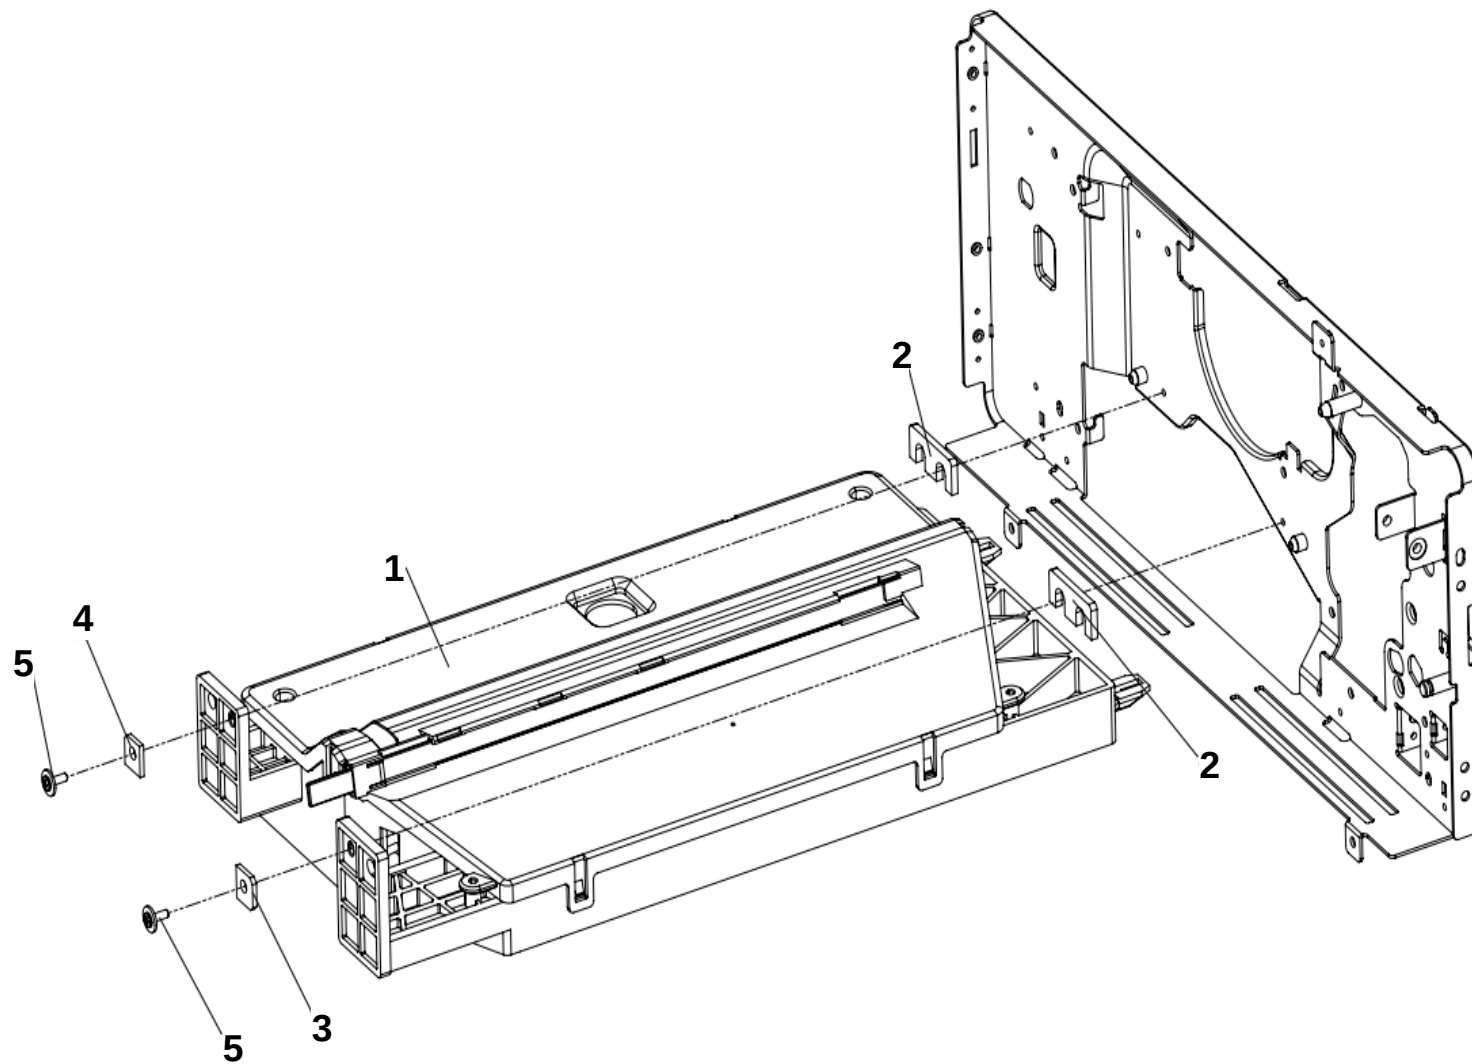


8. LASER UNIT

Index No.	Part No.	Description	Q'ty
1	N0011850	LSU UNIT : TOTAL ASS'Y : EPIN FIRST	1
2	N0011851	PAD : LSU	2
3	N0011852	PAD : LSU : RIGHT	1
4	N0011853	PAD : LSU : LEFT	1
5	LA251656	SCREW : M3X8 : PR : WASHER	2

Index No.	Part No.	Description	Q'ty

9. PAPER FEED SECTION 1

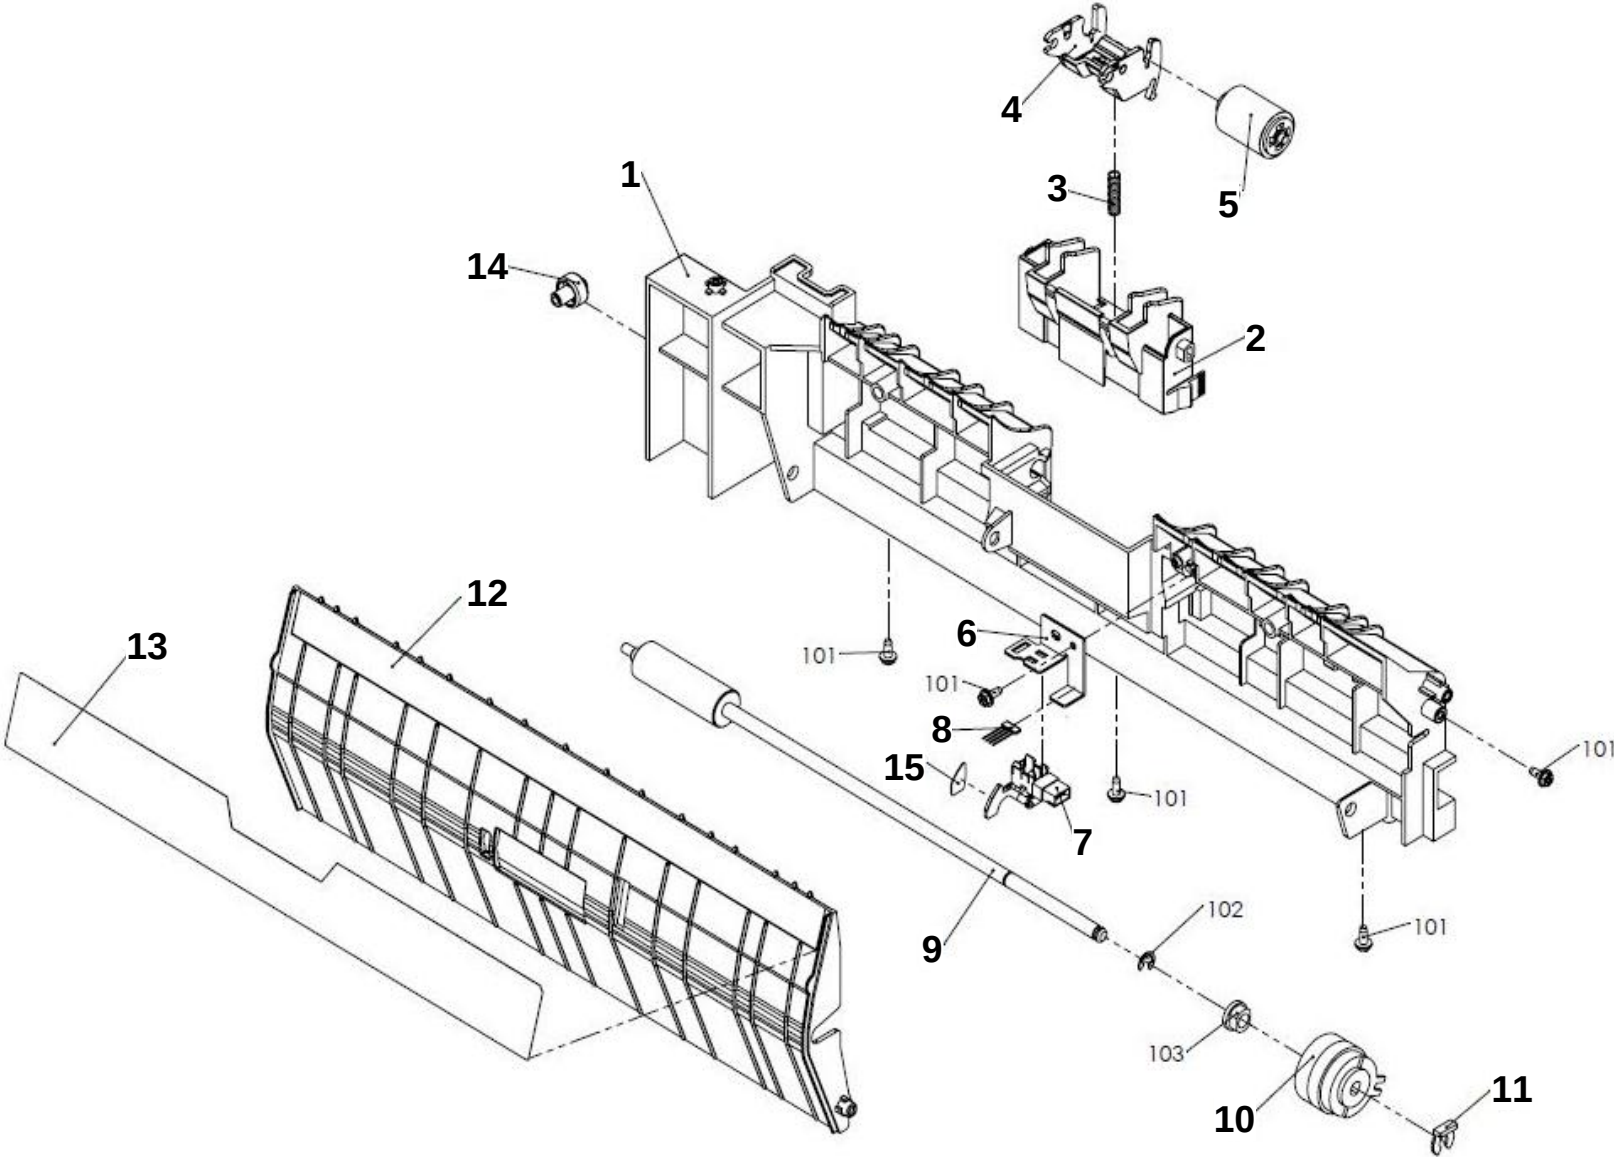


9. PAPER FEED SECTION 1

Index No.	Part No.	Description	Q'ty
1	N0012804	FEED FRAME:RIGHT	1
2	N0012768	GUIDE:RETARD ROLLER	1
3	N0012769	SPRING:RETARD ROLLER GUIDE	1
4	N0012767	HOUSING:RETARD ROLLER	1
5	N0012761	RETARD ROLLER:ASSY	1
6	N0012660	BKT:PHOTO INTERRUPTER:TRANS	1
7	N0012173	PHOTO INTERRUPTER:TRANS.	1
8	N0012661	ANTI STATIC BRUSH:TRANS	1
9	N0012782	ROLLER:TRANS:DRIVE	1
10	N0012617	CLUTCH(TRANSPORT)	1
11	B0912607	SNAP-RING:5	1
12	N0012746	GUIDE:PLATE:ENTRANCE:LOW	1
13	N0012588	MYLAR:FEED:EXIT	1
14	N0012636	ROLLER:FEED FRAME:RIGHT	1
15	N0012662	SEAL:SENSOR FEELER	1

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	5
102	07200040E	E-RING M4	1
103	08053480	BUSHING:PHI 6	1

10. PAPER FEED SECTION 2

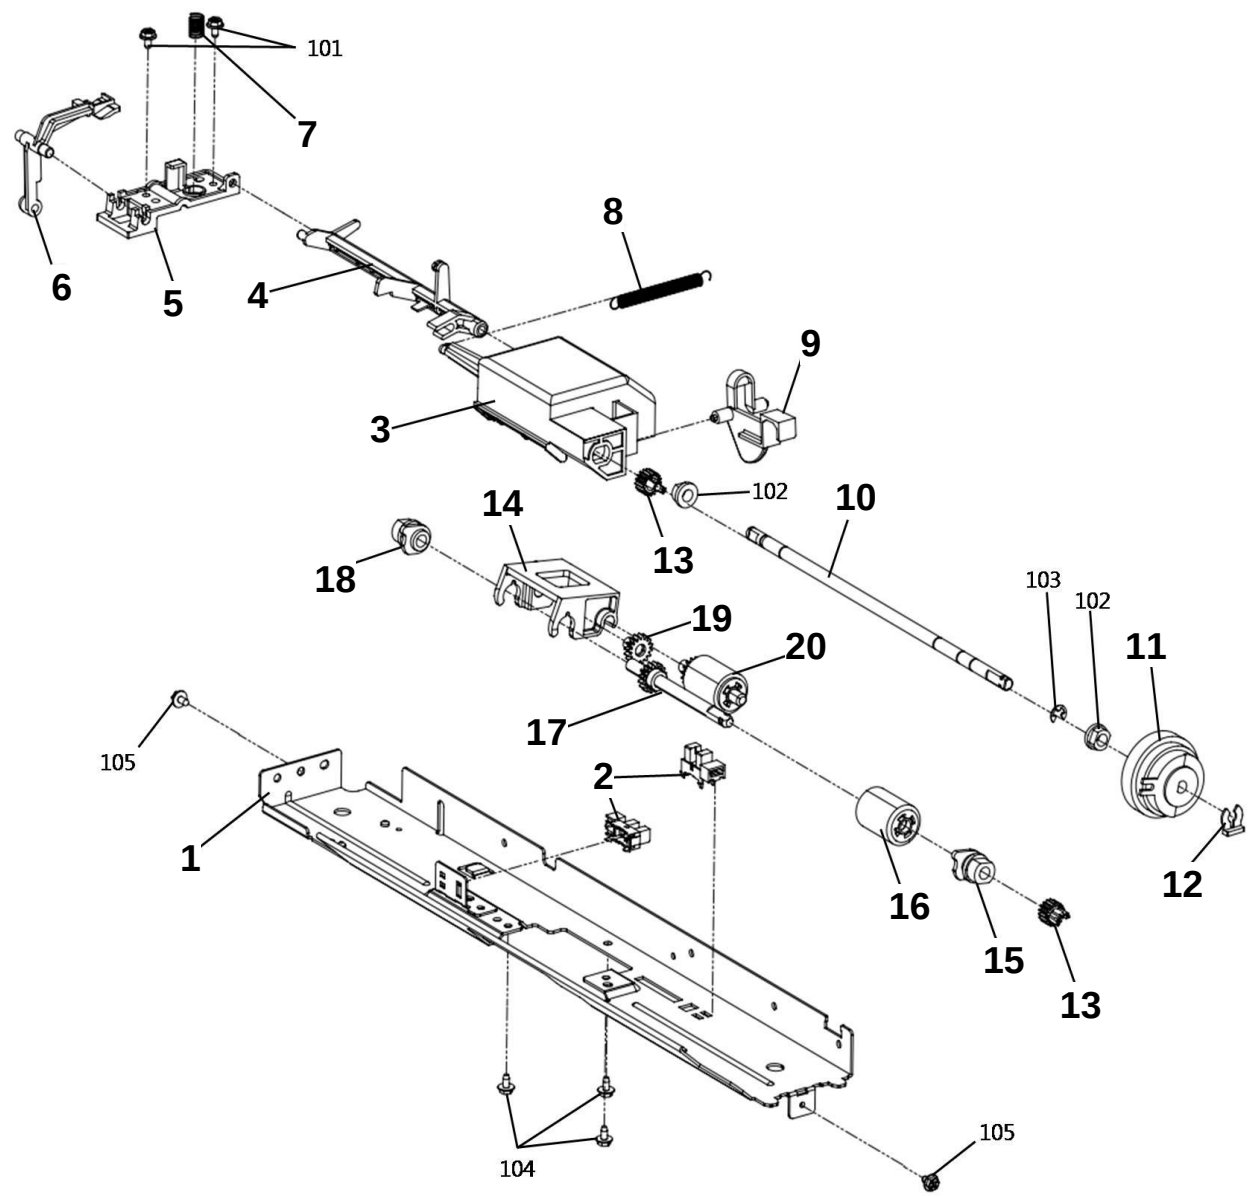


10. PAPER FEED SECTION 2

Index No.	Part No.	Description	Q'ty
1	N0012800	PLATE:GUIDE:FEED:ASSY	1
2	N0012141	PHOTOINTERRUPTER	2
3	N0012808	HOLDER:FEED ROLLER	1
4	N0012739	ACTUATOR	1
5	N0012744	HOLDER:LINK:PICK UP	1
6	N0012805	LINK:PICK UP	1
7	N0012932	SPRING:LINK:PICK UP	1
8	N0012931	SPRING:ACTUATOR	1
9	N0012803	FEELER:PAPER END DETECT	1
10	N0012754	SHAFT:FEEDDRIVE	1
11	N0012616	CLUTCH(FEED)	1
12	B0912607	SNAP-RING:5	1
13	N0012735	GEAR:FEED ROLLER	2
14	N0012732	FRAME:FEED ROLLER	1
15	N0012734	BUSHING:SNAP:REAR	1
16	N0012750	FEED ROLLER ASSY	1
17	N0012933	SHAFT:FEED ROLLER:ASSY	1
18	N0012733	BUSHING:SNAP:FRONT	1
19	N0012757	IDLE GEAR:FEED ROLLER	1
20	N0012740	PICK ROLLER ASSY	1

Index No.	Part No.	Description	Q'ty
101	04543006Q-K	TAPPING SCREW:M3*6:T3	2
102	08053480	BEARING:Φ6	2
103	07200030E	E-RING:Φ3	2
104	04503008N-K	TAPPING SCREW:M3X8	3
105	04513006N-K	TAPPING SCREW:M3X6	4

11. PAPER FEED SECTION 3

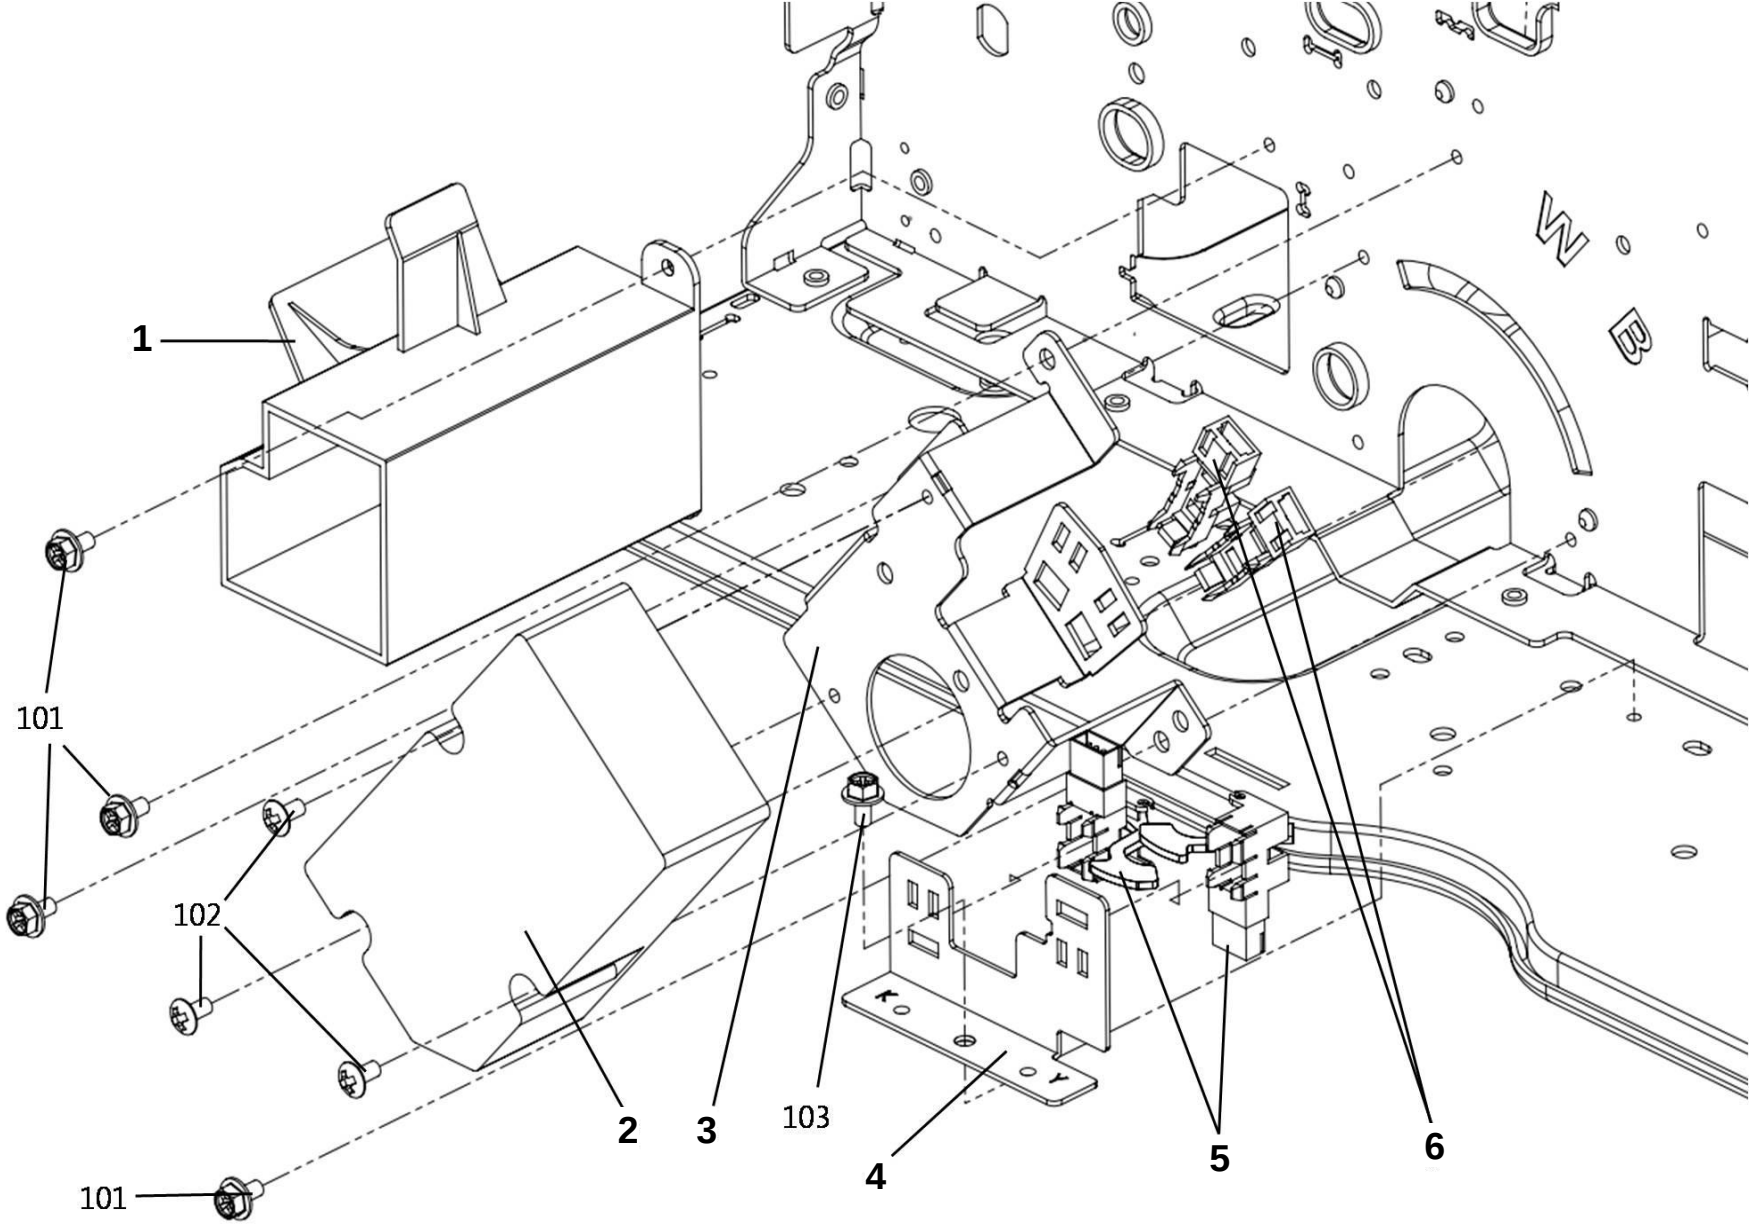


11. PAPER FEED SECTION 3

Index No.	Part No.	Description	Q'ty
1	N0012592	COVER:REAR:TRAY:FEED	1
2	N0012220	DCMOTOR	1
3	N0012837	BRACKET:DCMOTOR	1
4	N0011084	BRACKET:SIZESENSING:BODY	1
5	N0012173	PHOTOINTERRUPTER:TRANS	2
6	N0012141	PHOTOINTERRUPTER	2

Index No.	Part No.	Description	Q'ty
101	04543006Q-K	TAPPING SCREW:M3*6:T3	4
102	04533008N	BINDING SELF TAPPING SCREW:3X8	3
103	04513006N-K	TAPPING SCREW:M3X6	1

12. PAPER REGISTRATION

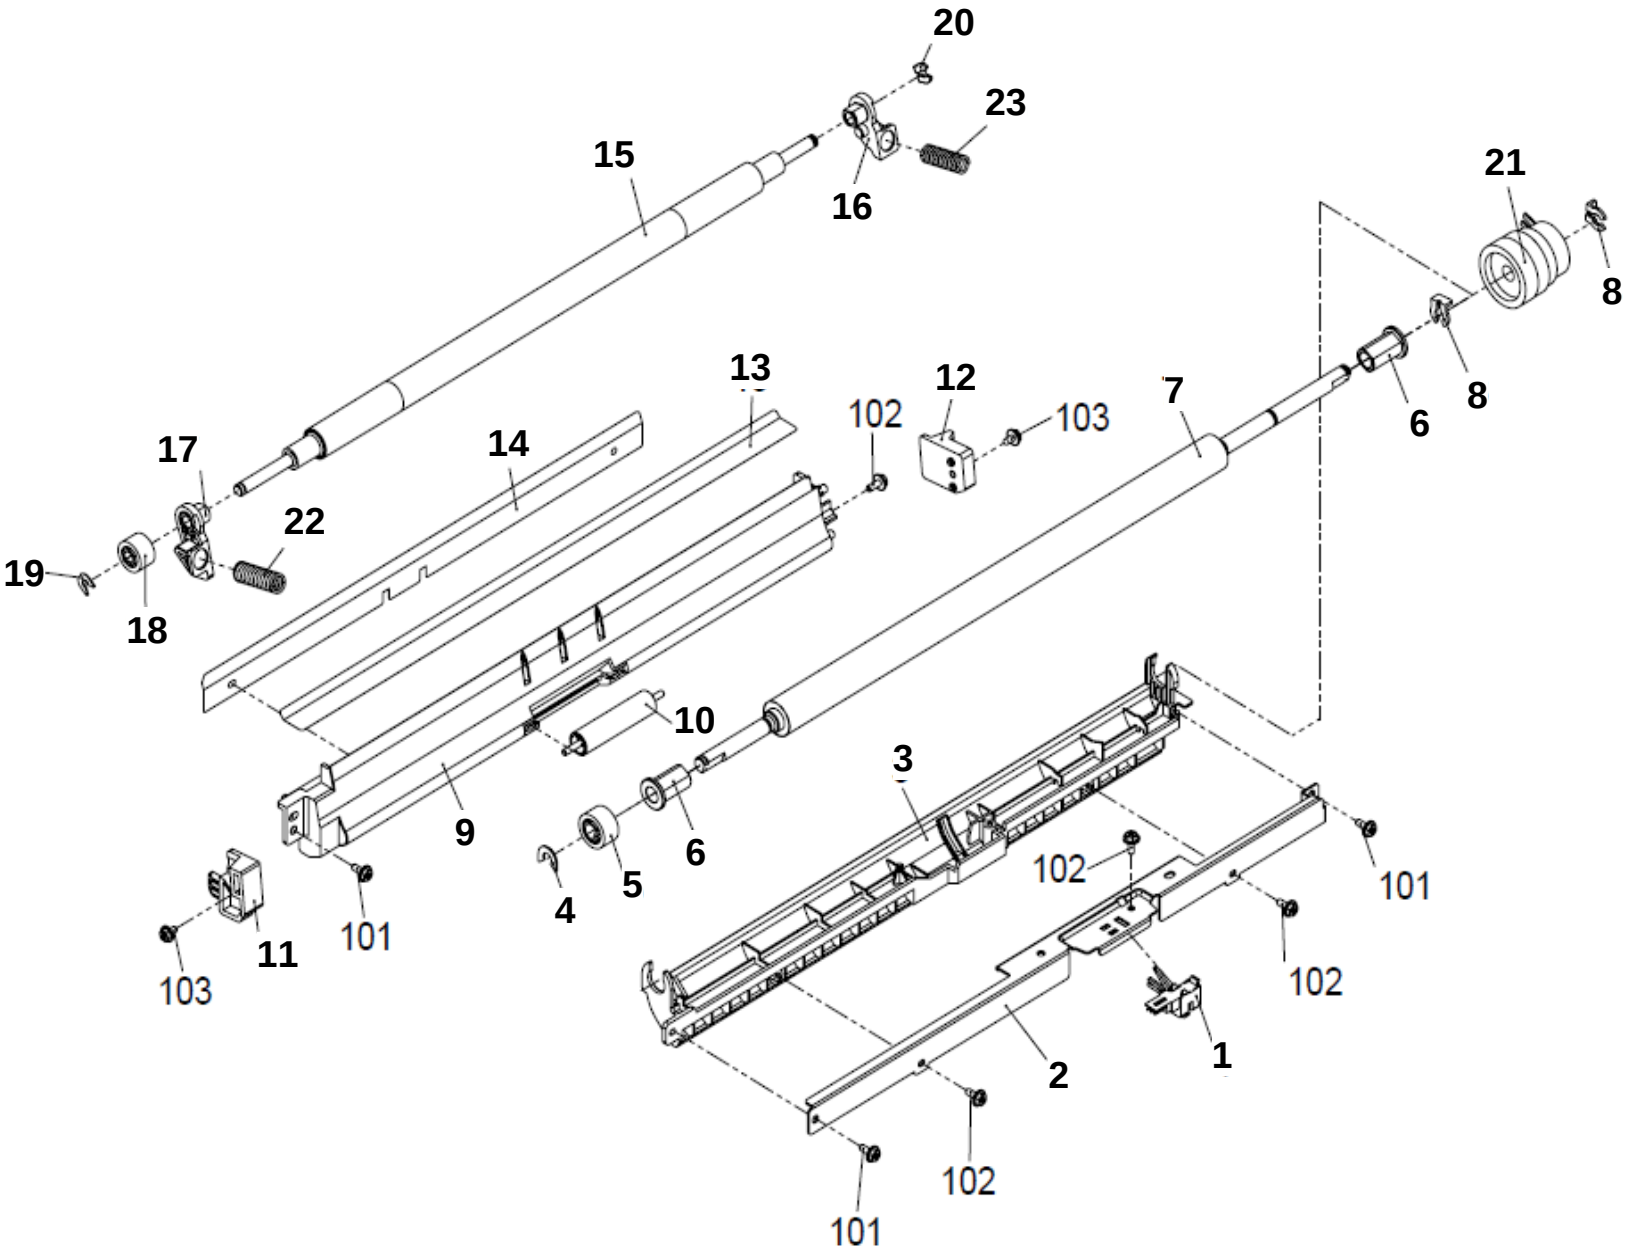


12. PAPER REGISTRATION

Index No.	Part No.	Description	Q'ty
1	SP011555	SENSOR:KODENSI:KIA0005C	1
2	N0012573	BKT:REGIST:REINFORCEMENT	1
3	N0012568	GUIDE PLATE:REGIST:DRIVE	1
4	08050088	E-RING:M6(ZN5)	1
5	N0012311	GEAR:REGIST ROLLER:18Z	1
6	AA082110	BUSHING:MM8:22	2
7	N0012562	REGIST ROLLER:DRIVEN	1
8	52152621	SNAP RING:M6	2
9	N0012572	GUIDE PLATE:REGIST:DRIVEN	1
10	N0012558	ROLLER:TURN	1
11	N0012541	HOLDER:REGIST:SPRING:FRONT	1
12	N0012542	HOLDER:REGIST:SPRING:REAR	1
13	N0012545	MYLAR_RESISTRATION_DRIVEN	1
14	N0012560	CLEANER:REGISTRATION:DRIVEN	1
15	N0012571	REGIST ROLLER:DRIVEN	1
16	N0012343	BUSHING:PRESSURE:REAR	1
17	N0012342	BUSHING:PRESSURE:FRONT	1
18	N0012312	GEAR:REGIST ROLLER:DRIVEN	1
19	08050088	E-RING PI 4	1
20	54472681	SANP RING	1
21	N0011188	CLUTCH:0.5NM:Z39	1
22	N0012543	SPRING:REGIST BUSHING:33N	1
23	N0012544	SPRING:REGIST BUSHING:REAR	1

Index No.	Part No.	Description	Q'ty
101	04513008N-K	SCREW:FLANGE:M3.0*6	3
102	04503008N-K	SCREW:TAP:M3X8	4
103	04543006Q-K	TAPPING SCREW:M3*6:T3	2

13. PAPER TRAY

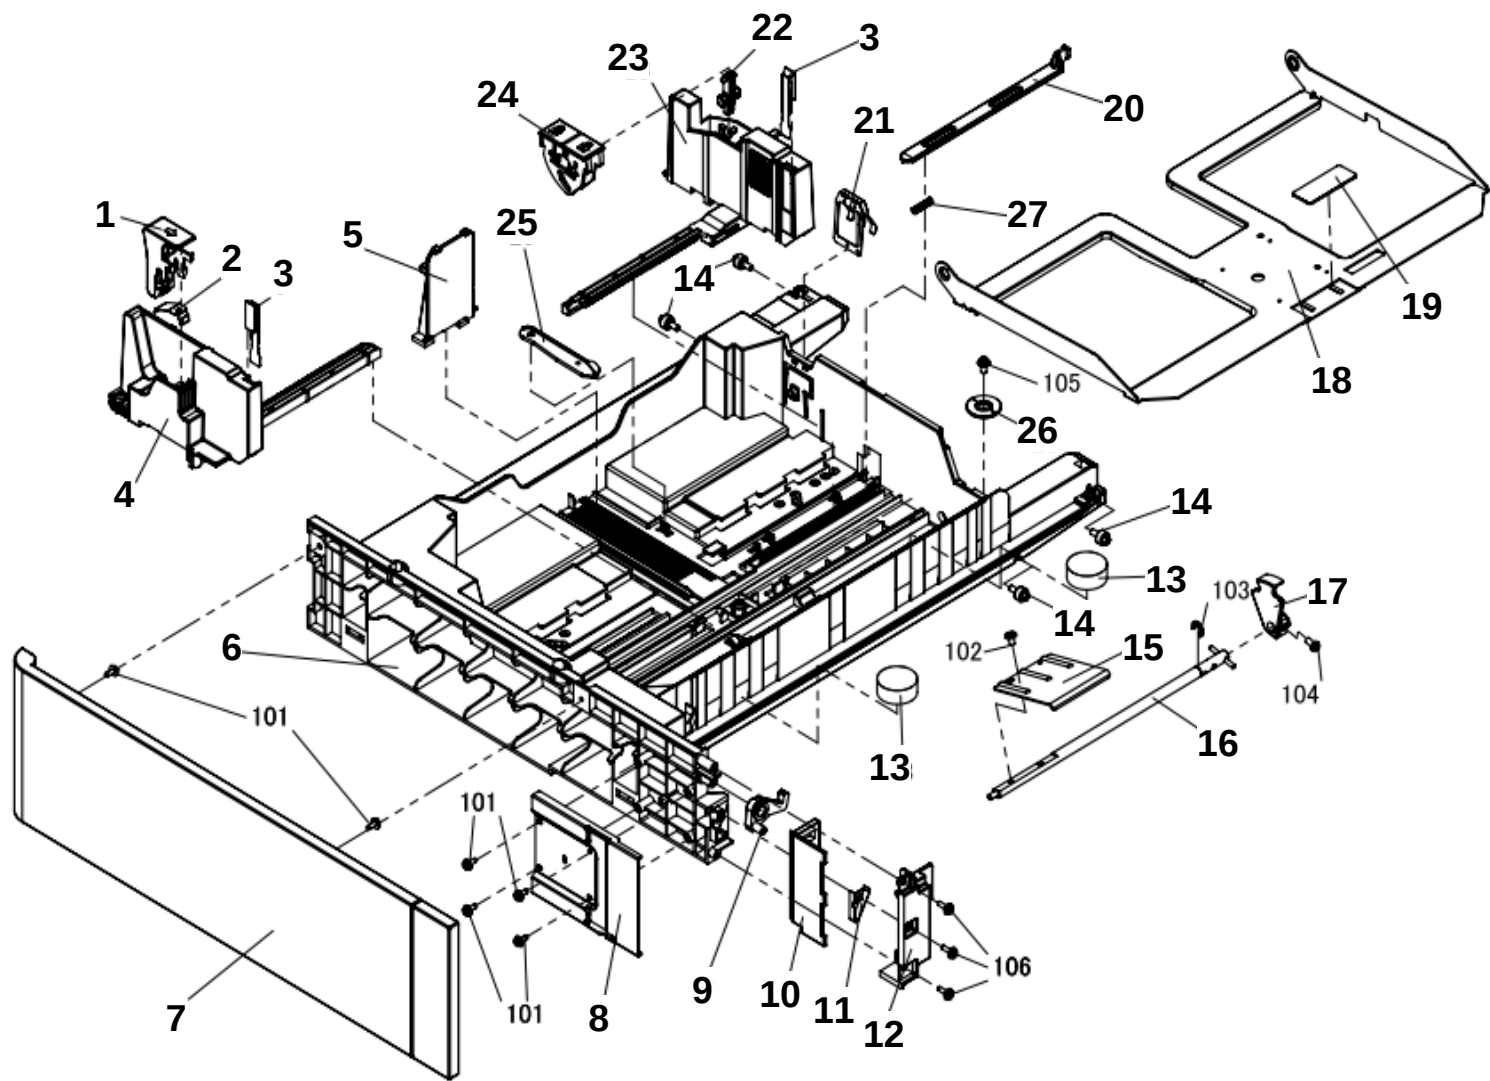


13. PAPER TRAY

Index No.	Part No.	Description	Q'ty
*	N0012531	Paper tray Assy	1
1	N0012858	LEVER:STOPPER:POSITION	1
2	N0012677	SPRING:PLATE:SIDE FENCE	1
3	D0102897	SEAL:SIDE FENCE	2
4	N0012851	FENCE:SIDE:FRONT	1
5	N0012853	FENCE:END	1
6	N0012850	CASSETTE:TRAY: A4-BANK	1
7	N0012958	COVER:CASSETTE:TRAY	1
8	N0012951	SUPPORTING PLATE_GRIP_TRAY	1
9	N0012953	LEVER:RELEASE	1
10	N0012957	INNER COVER:GRIP	1
11	N0012952	PLATE SPRING_GRIP_TRAY	1
12	N0012955	HOLDER:GRIP	1
13	A2672899	CUSHION:FEED TRAY	2
14	B0902987	ROLLER:PAPER:TRAY	4
15	N0012856	GUIDE:BKT:LOADING	1
16	N0012854	INSERT:PIN:LOADING TRAY	1
17	N0012777	LEVER:LOADING:ASSY:REMAIN CHECK	1
18	N0012910	BOTTOM PLATE:ASSY	1
19	N0012861	PAD:BOTTOM PLATE	1
20	N0012873	PAPER SIZE SENSING PLATE	1
21	N0012878	SPRING:PLATE:EARTH:BOTTOM PLATE	1
22	N0012864	STOPPER_POSITIONING_REAR SIDE FENCE	1
23	N0012852	FENCE:SIDE:REAR	1
24	N0012863	LEVER_STOPPER_REAR SIDE FENCE	1
25	N0012867	LINK: PAPER SIZE SENSING	1
26	B0902869	GEAR:SPUR:16Z	1
27	N0012870	SPRING: PAPER SIZE SENSING	1

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:M3.0*:8:T3	6
102	03540060N	BIND SCREW:M4X6	1
103	07200060E	E-RING Ø6	1
104	09504008Z	SCREW SPRING WASHER M4X8	1
105	04504008N	SCREW:HEXA:W.F:M4*8:T2	1
106	04503010N-K	SCREW:M3.0*:10:T2	3

14. FUSING UNIT 1

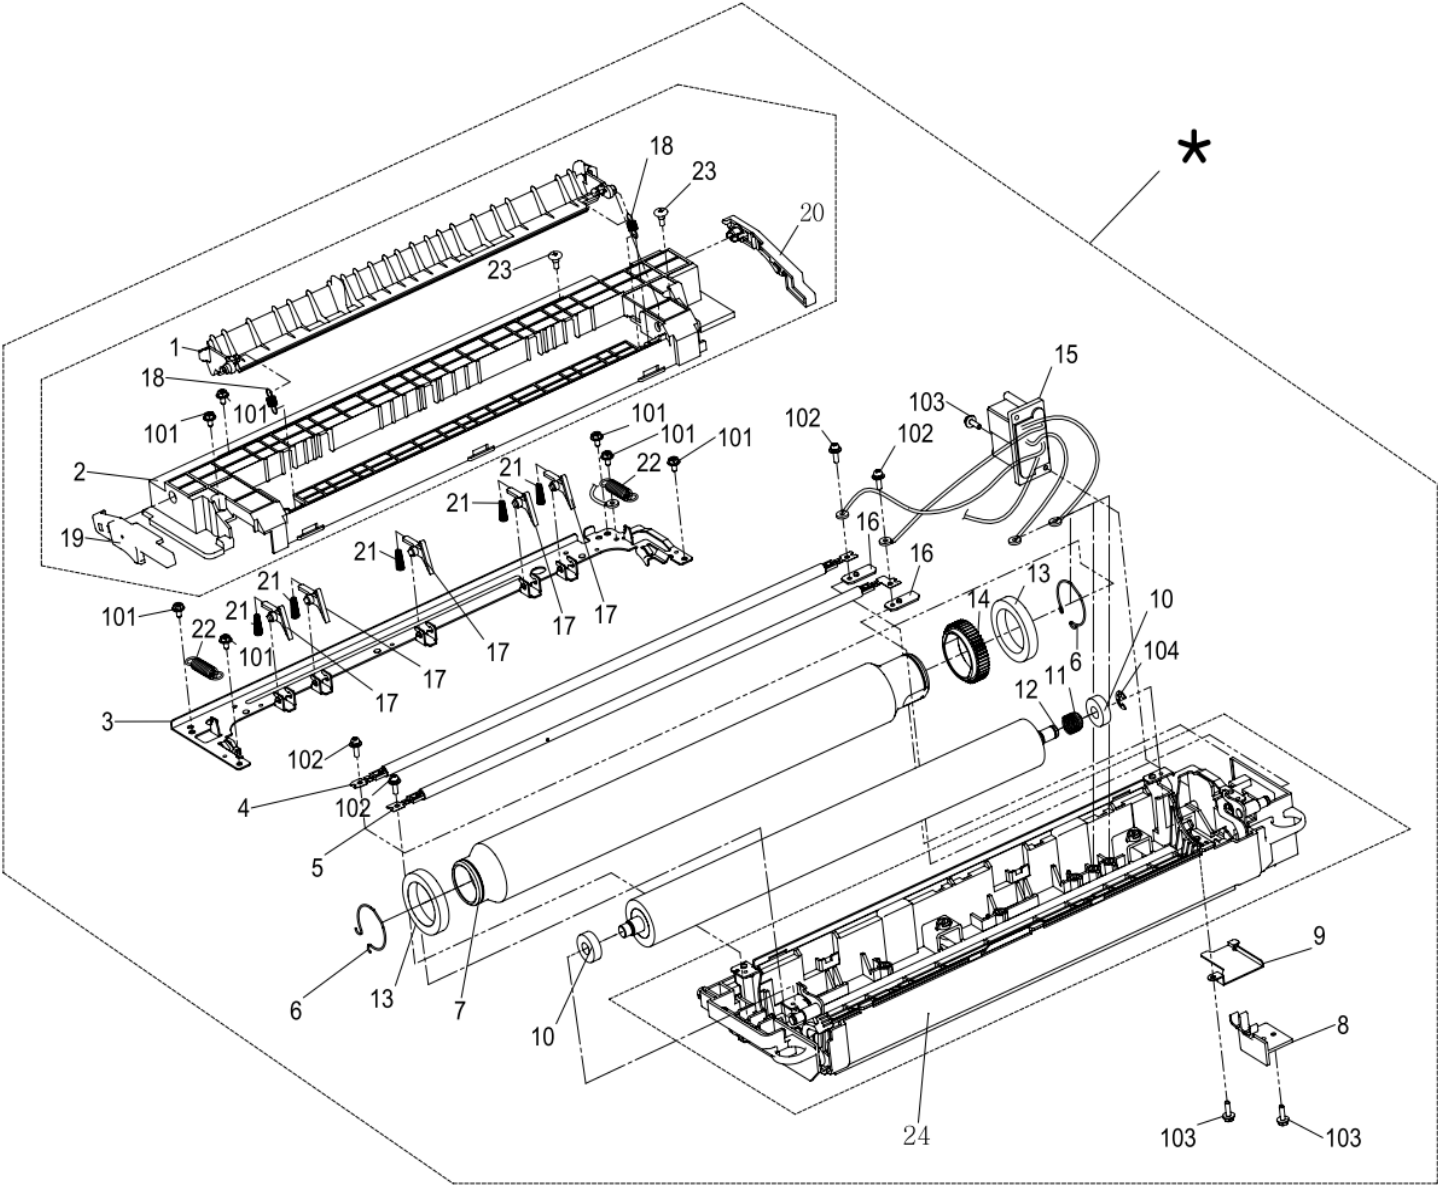


14. FUSING UNIT 1

Index No.	Part No.	Description	Q'ty
*	N0010212	FUSING UNIT:EU	1
1	N0014156	GUIDE:ENTRANCE:GUIDE PLATE:FUSING:UPPER	1
2	N0014151	COVER : FUSING : FRAME : UPPER	1
3	N0014101-MPS	BKT : FUSING SEPARATION PAWL	1
4	N0014145	HEATER:220V:MAIN:USHIO	1
5	N0004146	HEATER:220V:SUB:USHIO	1
6	B0314056	C-RING:FUSING ROLLER	2
7	N0014103	FUSING ROLLER:Φ40	1
8	B2094071	STOPPER:C-RING:FUSING	1
9	N0014077	GUIDE:HARNESS:INSERT	1
10	AE030030	BALL BEARING:8*19*6	2
11	B0914066	SPRING:FLANGE:PRESSURE ROLLER	1
12	N0014061	PRESSURE ROLLER:Φ32	1
13	G0524618	BALL BEARING:30*42*7	2
14	N0014104	GEAR:FUSING ROLLER	1
15	N0015262	DRAWER:FUSING:220V	1
16	B0904092	PLATE:SOCKET:HEATER	2
17	AE044025	SEPARATION PAWL:FUSING	5
18	D0194158	SPRING:GUIDE PLATE:OPEN,CLOSE	2
19	N0014133	LEVER:FUSER:FRONT	1
20	N0014134	LEVER:FUSER:REAR	1
21	A2674103	COMP.SPRING:FUSING SEPARATION PAWL	5
22	N0014114	SPRING: PRESSURE	2
23	AA143219	SHAFT:SCALE:REAR:COVER	2
24	N0014022	FRAME:FUSING:LOWER:ASSY	1

Index No.	Part No.	Description	Q'ty
101	04523006N-B	SCREW:M3X6	7
102	08046127	HEXAGONAL BOLT:DOUBLE SCREW:M3X8	4
103	04503010N-K	SCREW:HEXA:W.F:M3.0*10:T2	3
104	07200060E	E-RING PIE6	1

15. FUSING UNIT 2

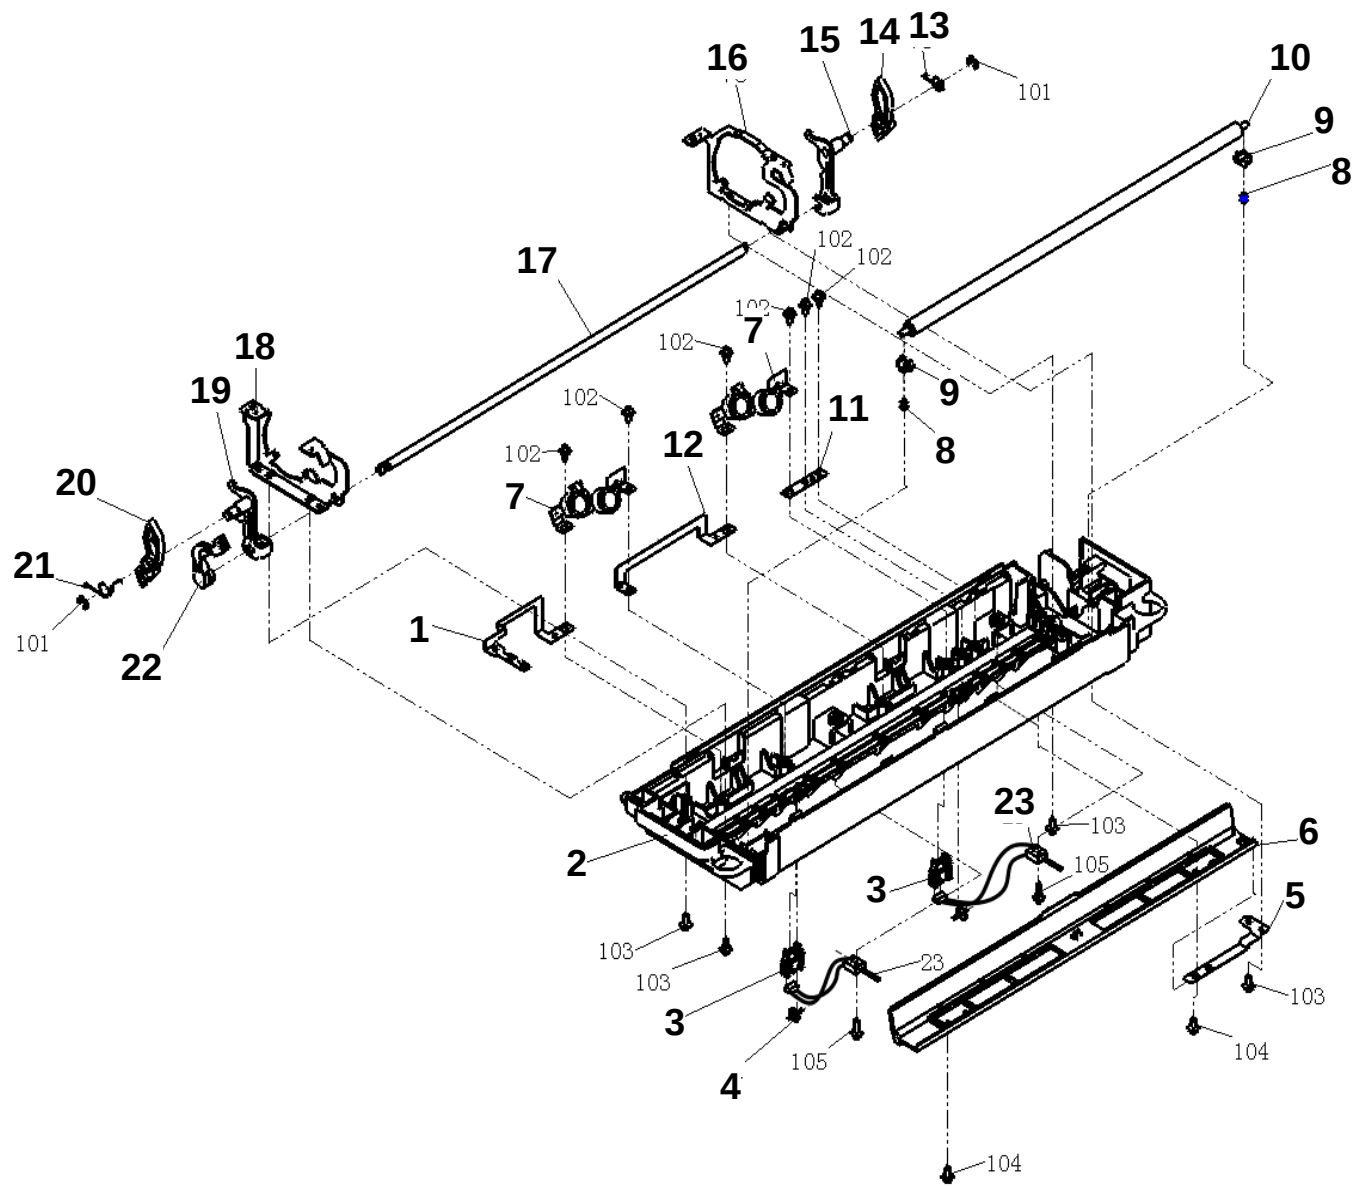


15. FUSING UNIT 2

Index No.	Part No.	Description	Q'ty
1	N0014091	PLATE:THERMOSTATS:FRONT	1
2	N0014072	COVER:FUSING:FRAME:LOWER	1
3	11026260	I/F CON:3P:R	2
4	N0014105	GUIDE:PAPER:RAIL:PCU	2
5	N0014086	PLATE:EARTH:FUSING ENTRANCE GUIDE PLATE	1
6	N0014085	GUIDE:ENTRANCE:FUSING:RIGHT	1
7	N0014095	THERMOSTATS:ASSY	2
8	B0914084	SPRING:COMPRESSION:CLEANING ROLLER:5N	2
9	N0014073	BEARING:FUSING CLEANING ROLLER	2
10	AE042029	ROLLER:CLEANING:FUSING	1
11	N0014093	PLATE:THERMOSTATS:REAR	1
12	N0014092	PLATE:THERMOSTATS:MIDDLE	1
13	N0014193	SPRING:PRESSURE RELEASE:REAR	1
14	N0014191	LEVER:PRESSURE RELEASE:REAR	1
15	N0014117	LEVER:PRESSURE ROLLER:REAR:ASSY	1
16	N0014125	PLATE:SIDE PLATE:FUSING:REAR	1
17	N0014111	SHAFT:PRESSURE RELEASE	1
18	N0014121	PLATE:SIDE PLATE:FUSING:FRONT	1
19	N0014116	LEVER:PRESSURE ROLLER:FRONT:ASSY	1
20	N0014171	LEVER:PRESSURE RELEASE:FRONT	1
21	N0014192	SPRING:PRESSURE RELEASE:FRONT	1
22	N0014112	ARM:GRIP:PRESSURE	1
23	N0014053	THERMISTOR:FUSING:INSIDE	2

Index No.	Part No.	Description	Q'ty
101	07200040E	E-RING M4	2
102	08046123	HEXA BOLT M3*8	6
103	04513008N-K	SCREW:TAP:M3.0X8	4
104	04503010N-K	SCREW:HEXA:W.F:M3.0*10:T2	2
105	09543012N	SCREW:ROUND:M3.0*12:MACH	2

16. PAPER EXIT 1

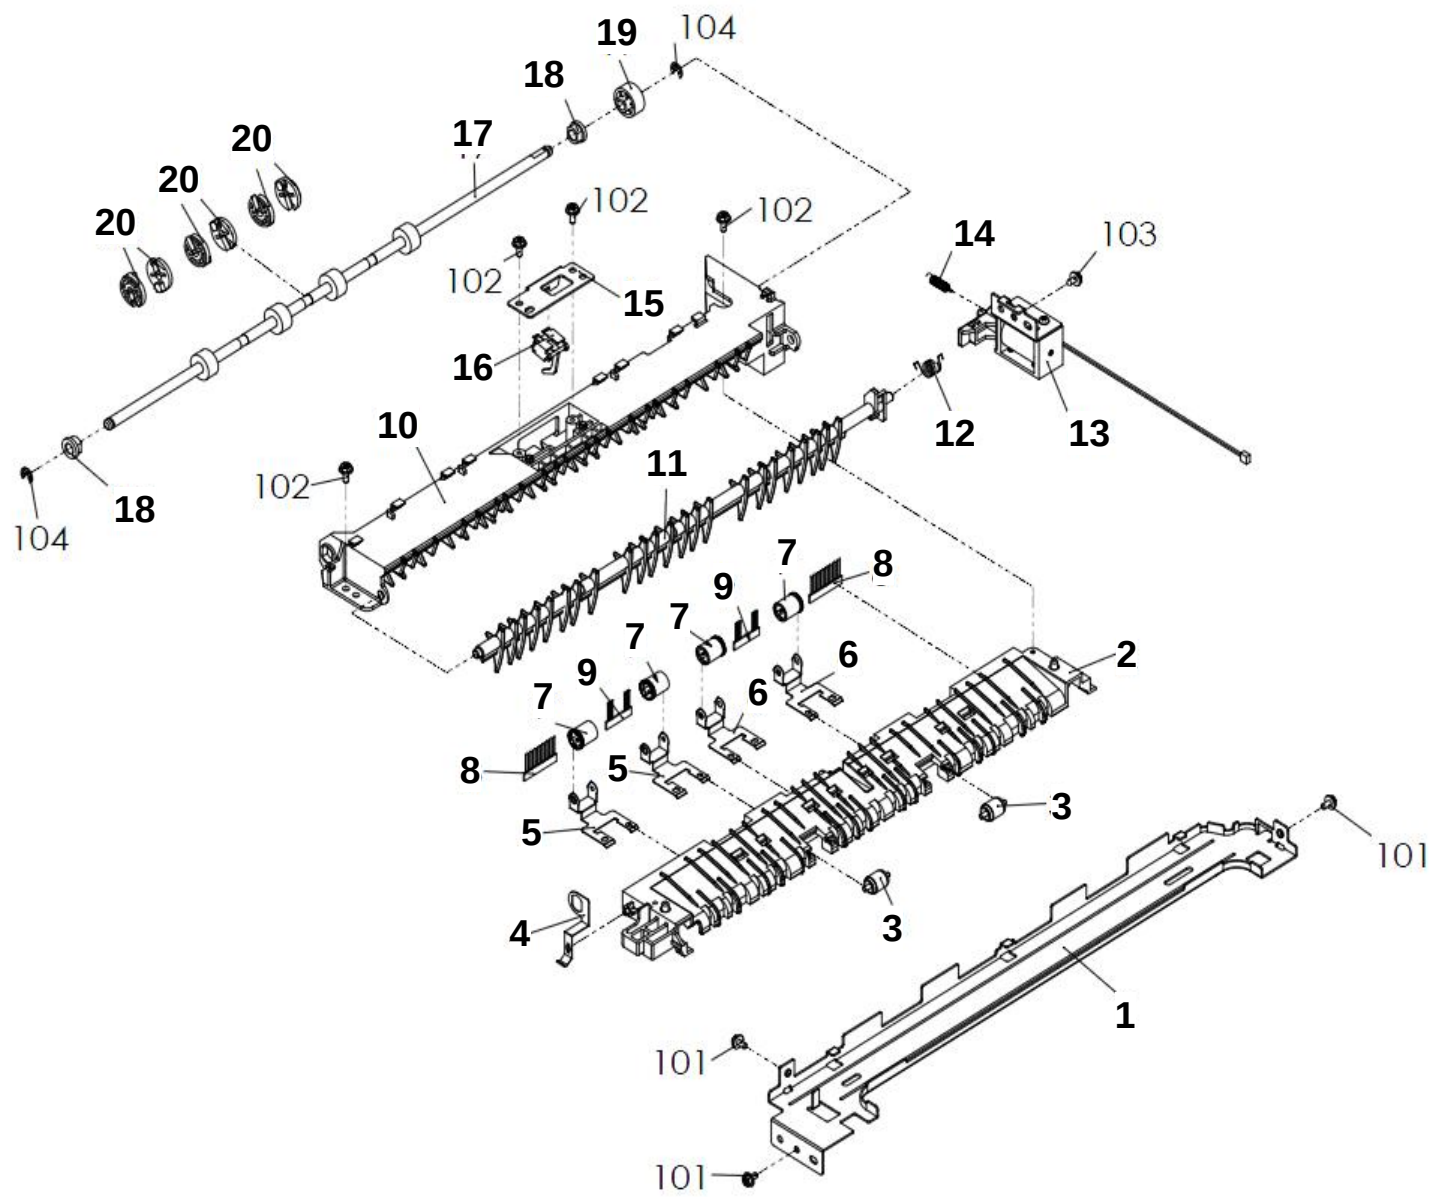


16. PAPER EXIT 1

Index No.	Part No.	Description	Q'ty
1	N0014470	EXIT_STAY	1
2	N0014451	GUIDE PLATE:LOWER:EXIT	1
3	N0014466	ROLLER:PI10:EXIT	2
4	N0014494	GROUND PLATE:ROLLER:EXIT	1
5	N0014461	HOLDER:FRONT:EXIT	2
6	N0014462	HOLDER:REAR:EXIT	2
7	N0014465	ROLLER:PI11:EXIT	4
8	N0014492	ANTISTATIC BRUSH:L27:EXIT	2
9	N0014491	ANTISTATIC BRUSH:L21:EXIT	2
10	N0014421	GUIDE PLATE:MIDDLE:EXIT	1
11	N0014441	GATE PAWL:EXIT	1
12	N0014449	SPRING:GATE PAWL:EXIT	1
13	N0014480	DC SOLENOID:ASSY:EXIT	1
14	N0014484	SPRING:DC SOL:EXIT	1
15	N0014431	BKT:PHOTO INTERRUPTOR:EXIT	1
16	AW020181	PHOTO INTERRUPTOR:DUPLEX	1
17	N0014413	SHAFT:ROLLER:EXIT	1
18	08053480	BUSHING:PHI 6	2
19	N0014412	GEAR:EXIT	1
20	N0014414	RING:PI19:EXIT	6

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	3
102	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	4
103	04543006Q-K	TAPPING SCREW:M3*6:T3	1
104	07200040E	E-RING M4	2

17. PAPER EXIT 2

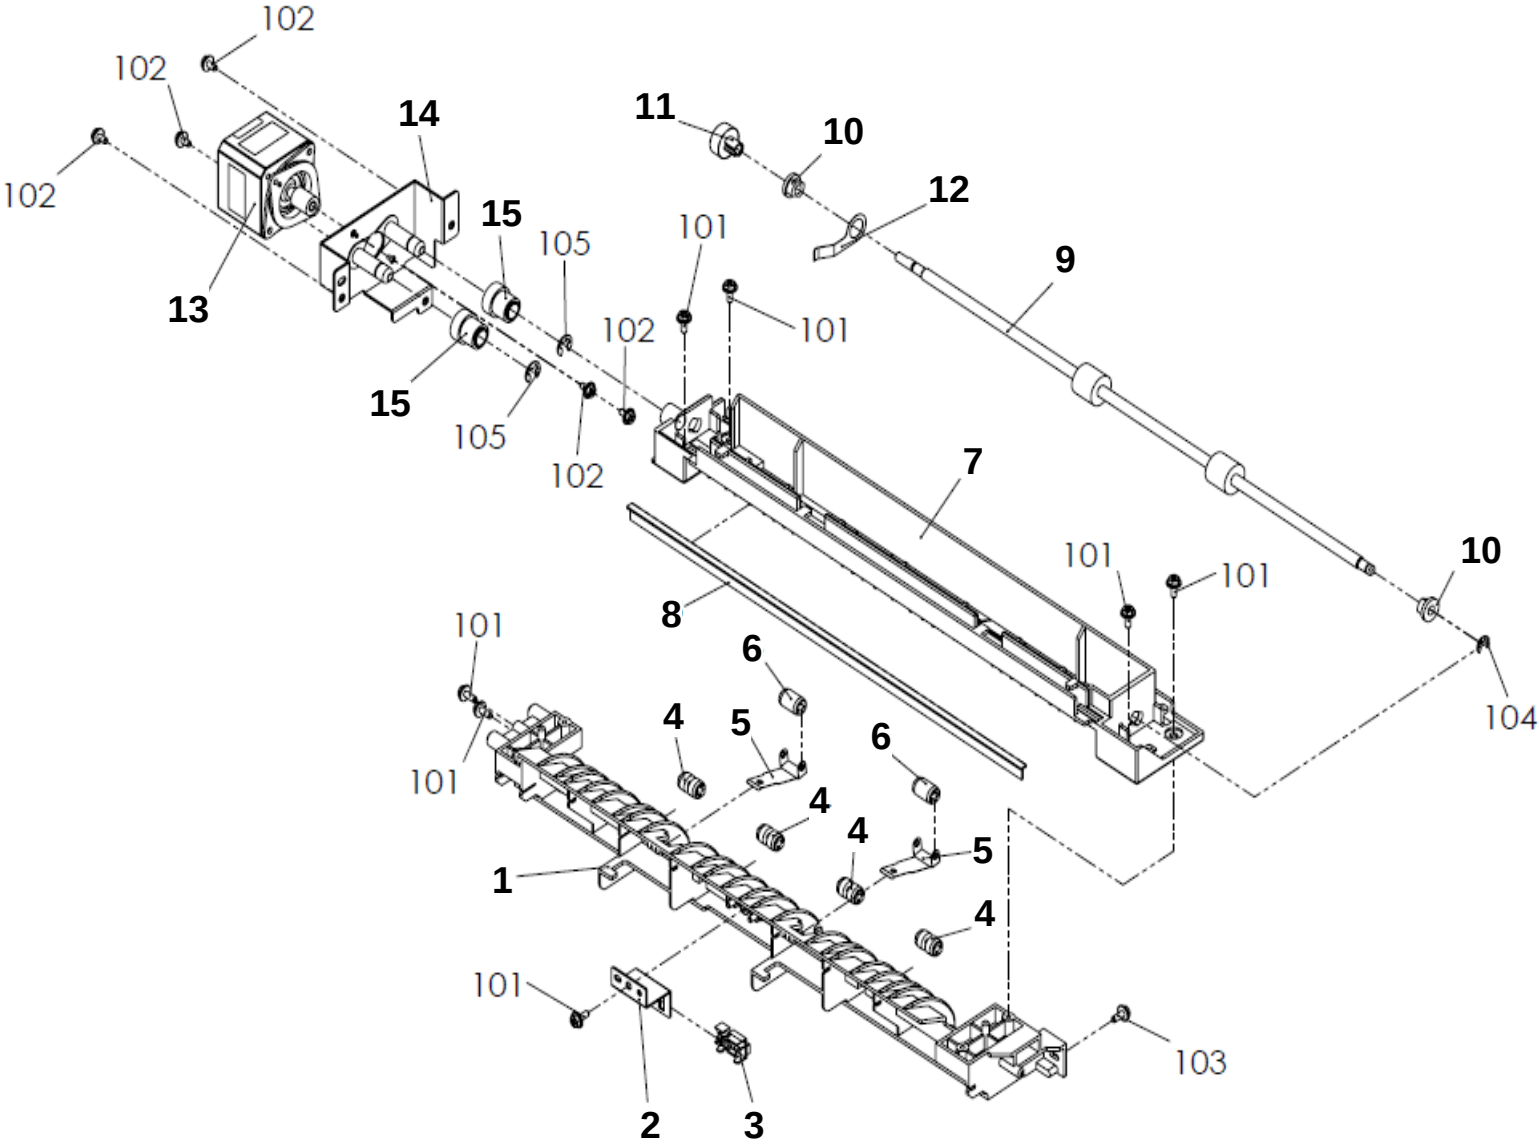


17. PAPER EXIT 2

Index No.	Part No.	Description	Q'ty
1	N0013940	GUIDE PLATE:MIDDLE:REVERSE	1
2	N0013951	BKT:PHOTO REFLECTION SENSOR:REVERSE	1
3	N0014444	PAPER SENSOR	1
4	N0013981	EXIT ROLLER : UPPER	4
5	N0013987	HOLDER:MIDDLE:REVERSE	2
6	N0013986	EXIT ROLLER : MIDDLE	2
7	N0013960	GUIDE PLATE:UPPER:REVERSE	1
8	N0013989	ANTI STATIC BRUSH:EXIT	1
9	N0013971	ROLLER:PI16:REVERSE	1
10	N0013978	BUSING:PI 5	2
11	N0013976	GEAR:ROLLER:REVERSE	1
12	N0013979	GROUND PLATE:ROLLER:REVERSE	1
13	N0014710	HB STEPPING 42	1
14	N0013990	BKT:STEP MOTOR:ASSY:REVERSE	1
15	N0013977	GEAR:ILDER:REVERSE	2

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	7
102	04513006N-K	SCREW:FLANGE:M3.0*6	5
103	04513008N-K	SCREW:TAP:M3X8	1
104	07200040E	E-RING M4	1
105	07200050E	E-RING PIE5(W/T)	2

18. DUPLEX UNIT 1

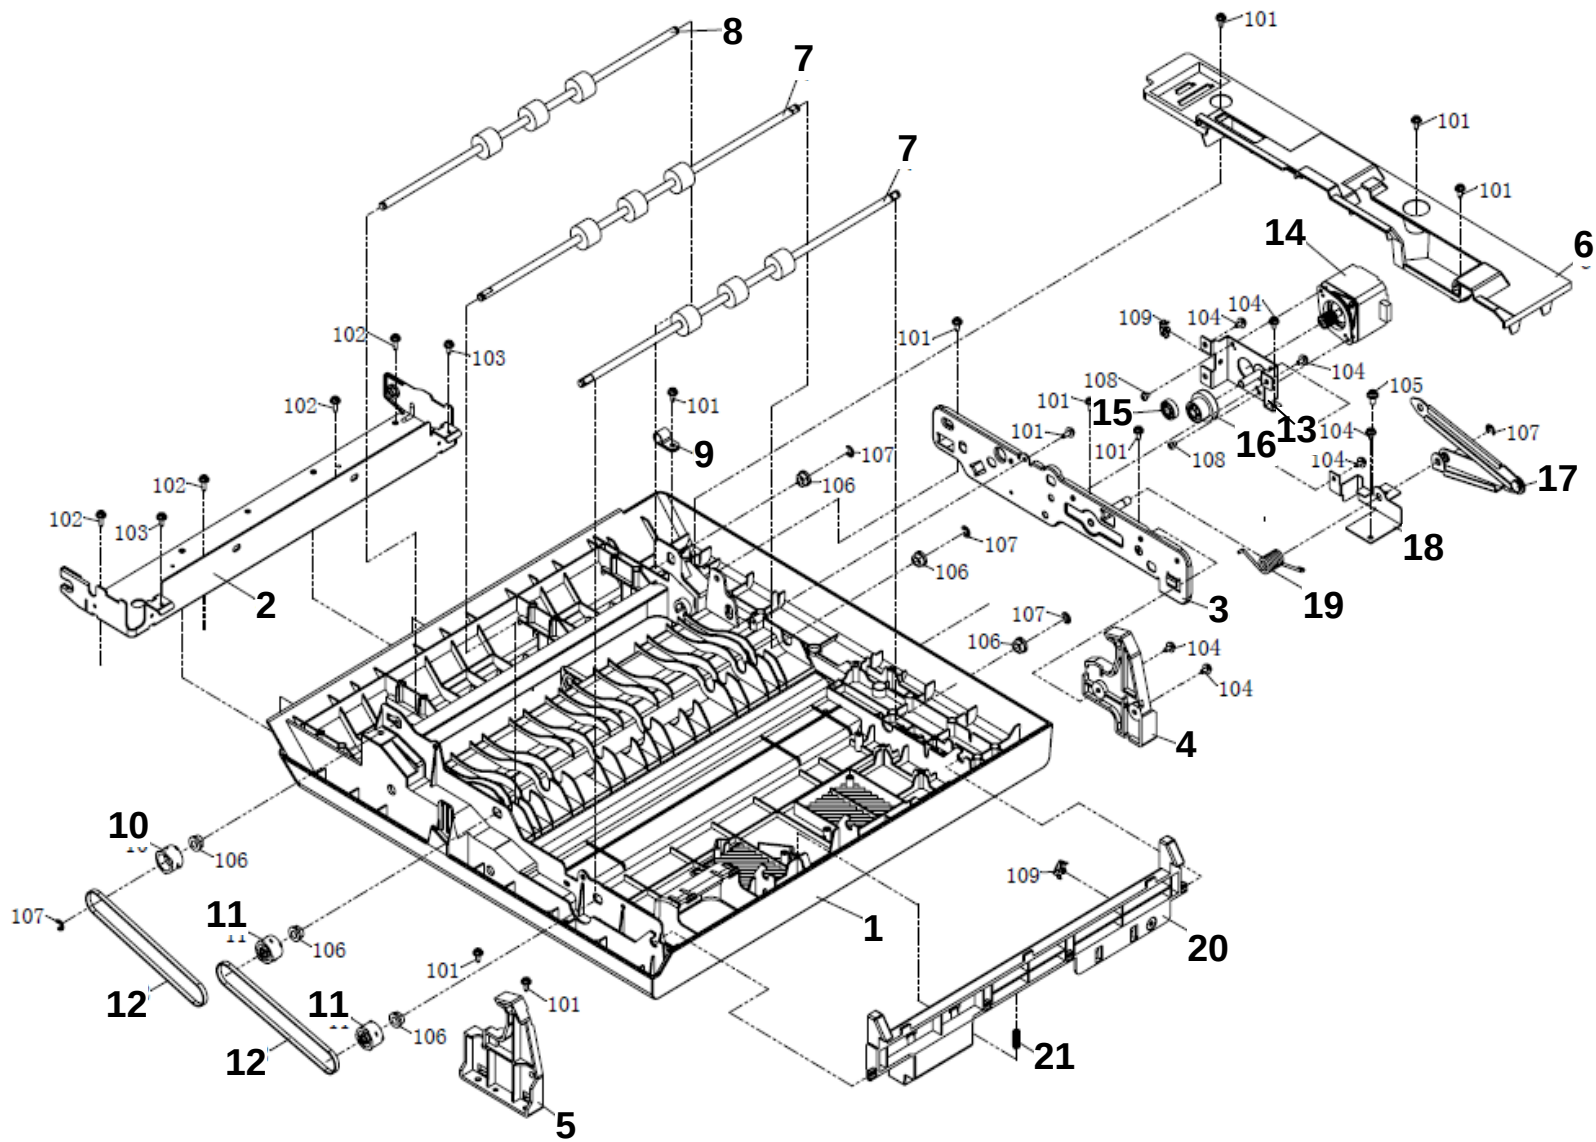


18. DUPLEX UNIT 1

Index No.	Part No.	Description	Q'ty
1	N0014711	MAIN COVER:DUPLEX UNIT	1
2	N0014532	STAY:LOWER:FRAME:DUPLEX	1
3	N0014531	STAY:REAR:FRAME:ASSY:DUPLEX	1
4	N0014582	ARM:PRESSURERELEASE:FUSING:REAR	1
5	N0014581	ARM:PRESSURE RELEASE:FUSING:FRONT	1
6	N0014712	REAR COVER:DUPLEX UNIT	1
7	N0014541	TRANSPORT ROLLER:ENTERANCE:DUPLEX	2
8	N0014543	TRANSPORT ROLLER:EXIT:DUPLEX	1
9	11050009	NYLON CLAMP:5N	1
10	B0434624	TIMING:PULLEY	1
11	D0104569	PULLEY:30T:RIGHT	2
12	N0014544	TIMINGBELT:S2M:148T	2
13	N0014551	BRACKET:ASSY:DRIVE:STEPPING MOTOR	1
14	N0014710	HB STEPPING 42	1
15	N0014555	GEAR:PULLEY:TRANSPORT	1
16	N0014554	IDLE GEAR:PULLEY:TRANSPORT	1
17	N0014573	LINK:REAR:ASSY:DUPLEX	1
18	N0014575	BRKT:LINK:REAR:DUPLEX	1
19	N0014579	TORSION SPRING:LINK:DUPLEX	1
20	N0014561	PAWL:LOCKING:DUPLEX	1
21	N0014563	PRESSURE SPRING:LOCKING:5.3N	1

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	9
102	04503012N	SCREW:M3.0*12	4
103	04513008N-K	SCREW:TAP:M3X8	2
104	04513006N-K	SCREW:FLANGE:M3.0*6	7
105	04504008N	SCREW:HEXA:W.F:M4*8:T2	1
106	08053480	BUSHING:PHI 6	6
107	07200040E	E-RING M4	4
108	03130040N	M3X4 MACHINE SCREW	2
109	11050511	CLAMP:HARNESS CLAMP: LWS-0306ZC	2

19. DUPLEX UNIT 2

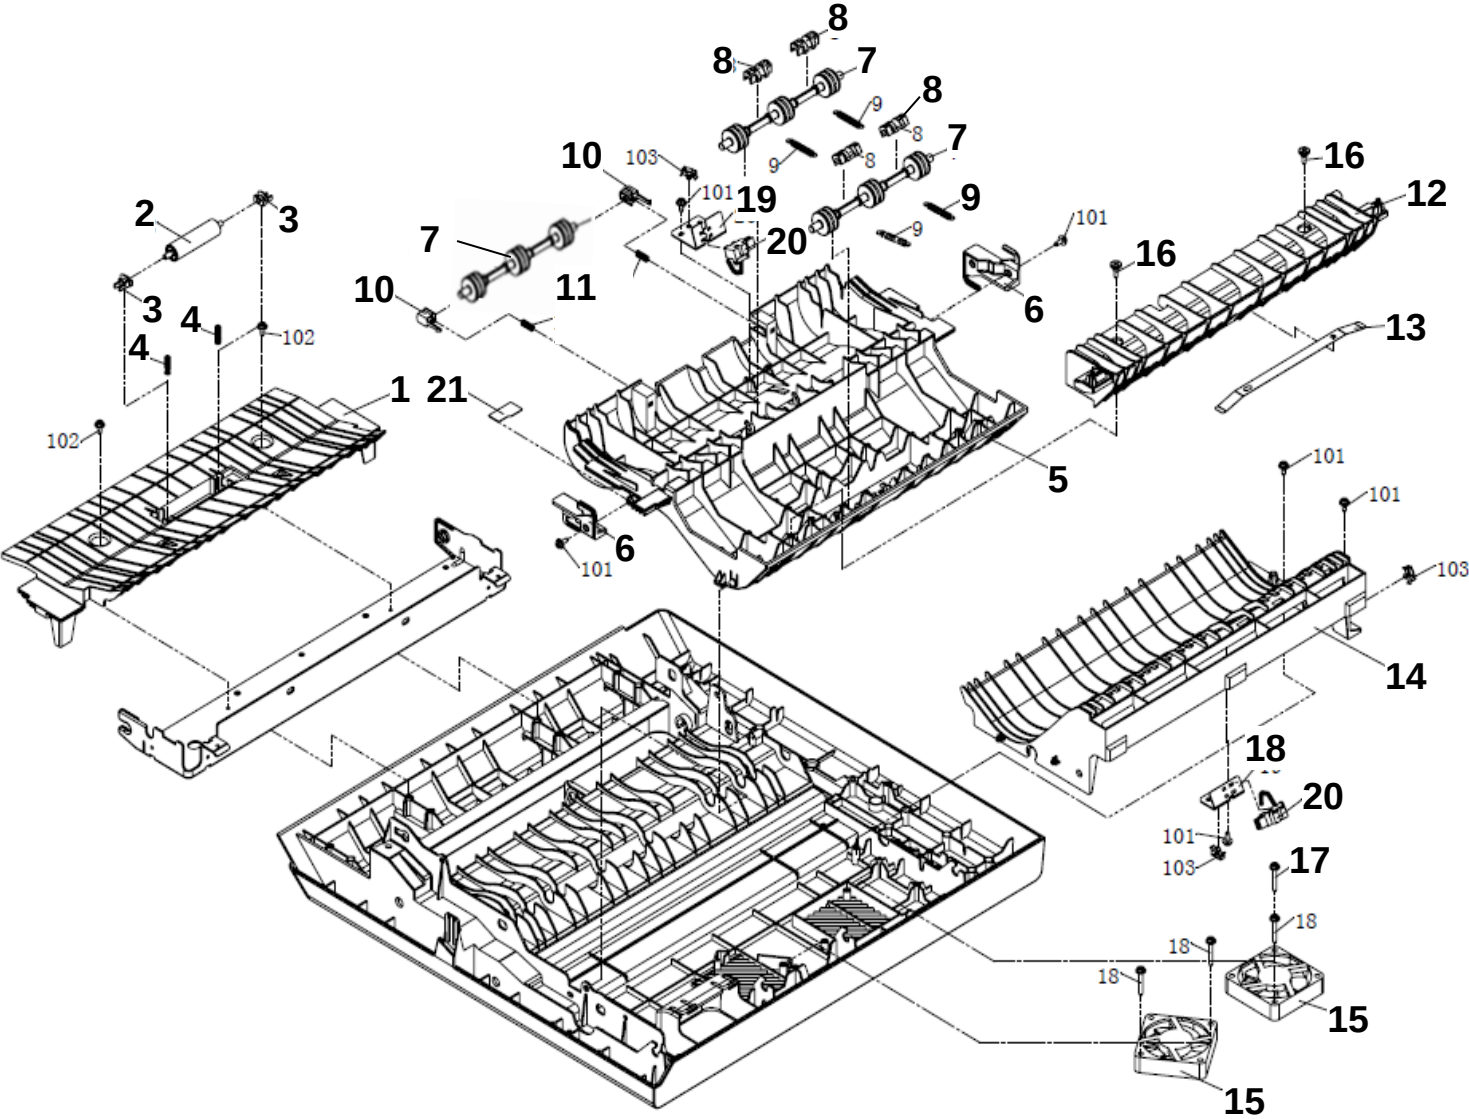


19. DUPLEX UNIT 2

Index No.	Part No.	Description	Q'ty
1	N0014811	GUIDE PLATE:VERTICALTRANSPORT	1
2	B0902742	ROLLER:PULL OUT:OPTION TRAY:SW01	1
3	D0104268	BUSHING:MM4:VERTICAL TRANSPORT	2
4	N0014812	PRESSURE SPRING:VERTICAL TRANSPORT	2
5	N0014511	GUIDE PLATE:DRIVEN:DUPLEX	1
6	N0014519	HOO:TRANSFER UNIT OPEN:DUPLEX	2
7	N0014515	TRANSPORTROLLER:DRIVEN:MM20	3
8	N0014516	BUSHING:MM6	4
9	N0014517	SPRING:PRESSURE	4
10	N0014536	BUSHING:DRIVEN:EXIT:DUPLEX	2
11	N0014528	SPRING:PRESSURE:EXIT:DUPLEX	2
12	N0014513	GUIDE PLATE:ENTERANCE:DRIVEN	1
13	B0394485	SPRING PLATE:GUIDE PLATE:EXIT:RIGHT LOWER	1
14	N0014521	GUIDE PLATE:ENTERANCE:DRIVE	1
15	N0014583	FAN:60X60X15:DUPLEX	2
16	N0014518	STEPPED SCREW:MM5:DUPLEX	2
17	N0014584	SCREW:M3X23	4
18	N0014911	BRACKET:INLET SENSOR:DUPLEX	1
19	N0014912	BRACKET:EXIT SENSOR:DUPLEX	1
20	D3694755	PHOTO INTERRUPTOR:DUPLEX	2
21	N0014525	DECAL:ZJAM:DUPLEX	1

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	6
102	04513008N-K	SCREW:TAP:M3X8	2
103	11050511	CLAMP:HARNESS CLAMP: LWS-0306ZC	3

20. DUPLEX UNIT 3

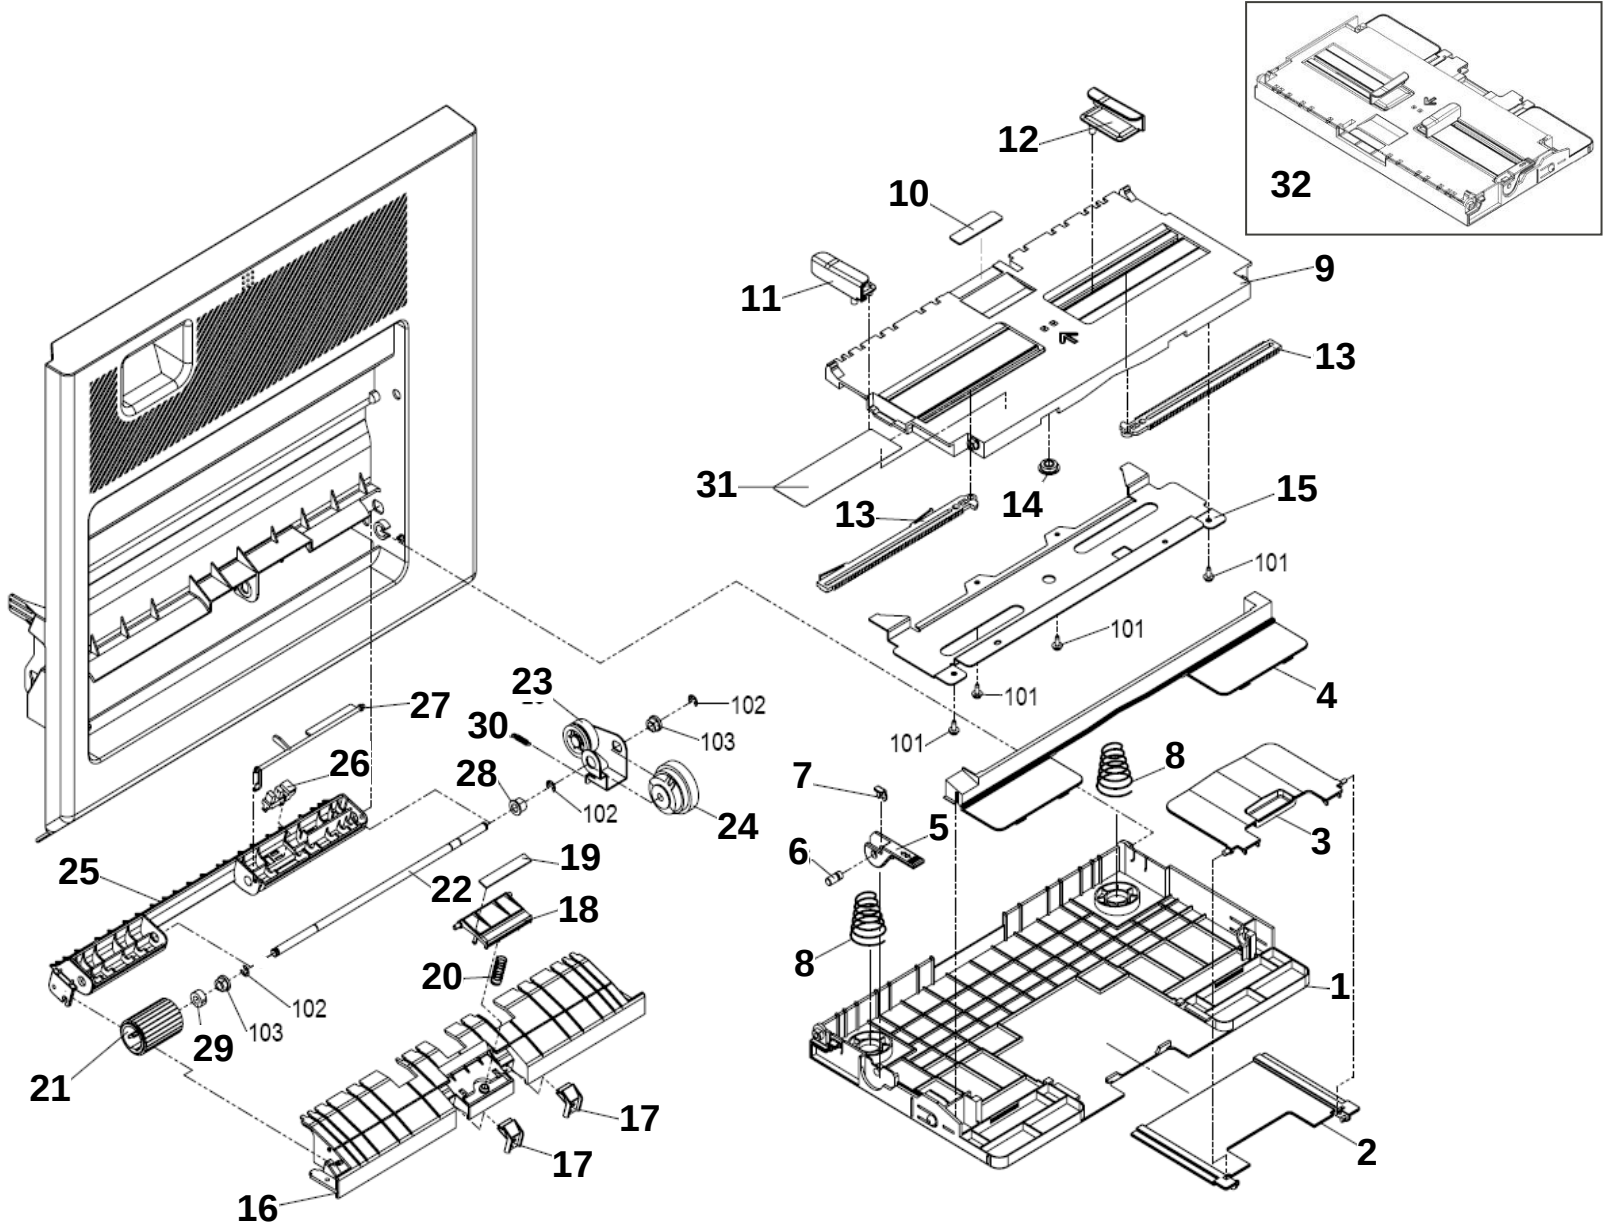


20. DUPLEX UNIT 3

Index No.	Part No.	Description	Q'ty
1	N0014603	BASE TABLE:MANUAL FEED:DUPLEX	1
2	N0014654	EXTENSOIN TRAY:1ST:MANUAL FEED	1
3	N0014655	EXTENSION TRAY:2ND:MANUAL FEED	1
4	N0014658	COVER:BASE:MANUAL FEED	1
5	N0014605	LEVER:MANUAL FEED	1
6	B2592786	SHAFT:LEVER	1
7	54472681	SANP RING	1
8	AA063643	SPRING:BASE:2.6N	2
9	N0014611	BASE:MANUALFEED	1
10	N0014625	PAD:BASE:MANUAL FEED	1
11	N0014613	SIDE FENCE:FRONT:MANUAL FEED	1
12	N0014614	SIDE FENCE:REAR:MANUAL FEED	1
13	N0014616	RACK:SIDE FENCE:REAR	2
14	D0102639	GEAR:SIDE FENCE	1
15	N0014619	STAY:TRAY BOTTOM PLATE	1
16	N0014602	LOWER GUIDE:MANUAL FEED	1
17	N0014656	STOPPER:FRICTION PAD:MANUAL FEED	2
18	N0014651	HOLDER:FRICTION PAD:MANUAL FEED	1
19	G0302670	FRICTION PAD:PUR	1
20	N0014653	PRESSURE SPRING:SEPARATION	1
21	N0014620	ROLLER:ASSY:MANUAL FEED	1
22	N0014624	SHAFT:ROLLER:MANUAL FEED	1
23	N0014632	BRACKET:LINK:ASSY	1
24	N0012616	CLUTCH(FEED)	1
25	N0014601	UPPER GUIDE:MANUAL FEED	1
26	GW020020	PHOTO INTERRUPTOR:LG248NL1	1
27	N0014640	FEELER:MANUAL FEED	1
28	N0014628	BUSHING:PI 6	1
29	D0192894	ONE WAY CLUTCH:6	1
30	N0014633	TENSION SPRING:LINK	1

Index No.	Part No.	Description	Q'ty
31	N0014618	DECAL:MANUAL FEED:PAPER SET	1
32	N0014660	TABLE:ASSY:MANUAL FEED:NEST	1
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	4
102	07200040E	E-RING M4	3
103	08053480	BUSHING:PHI 6	2

21. DRIVER UNIT

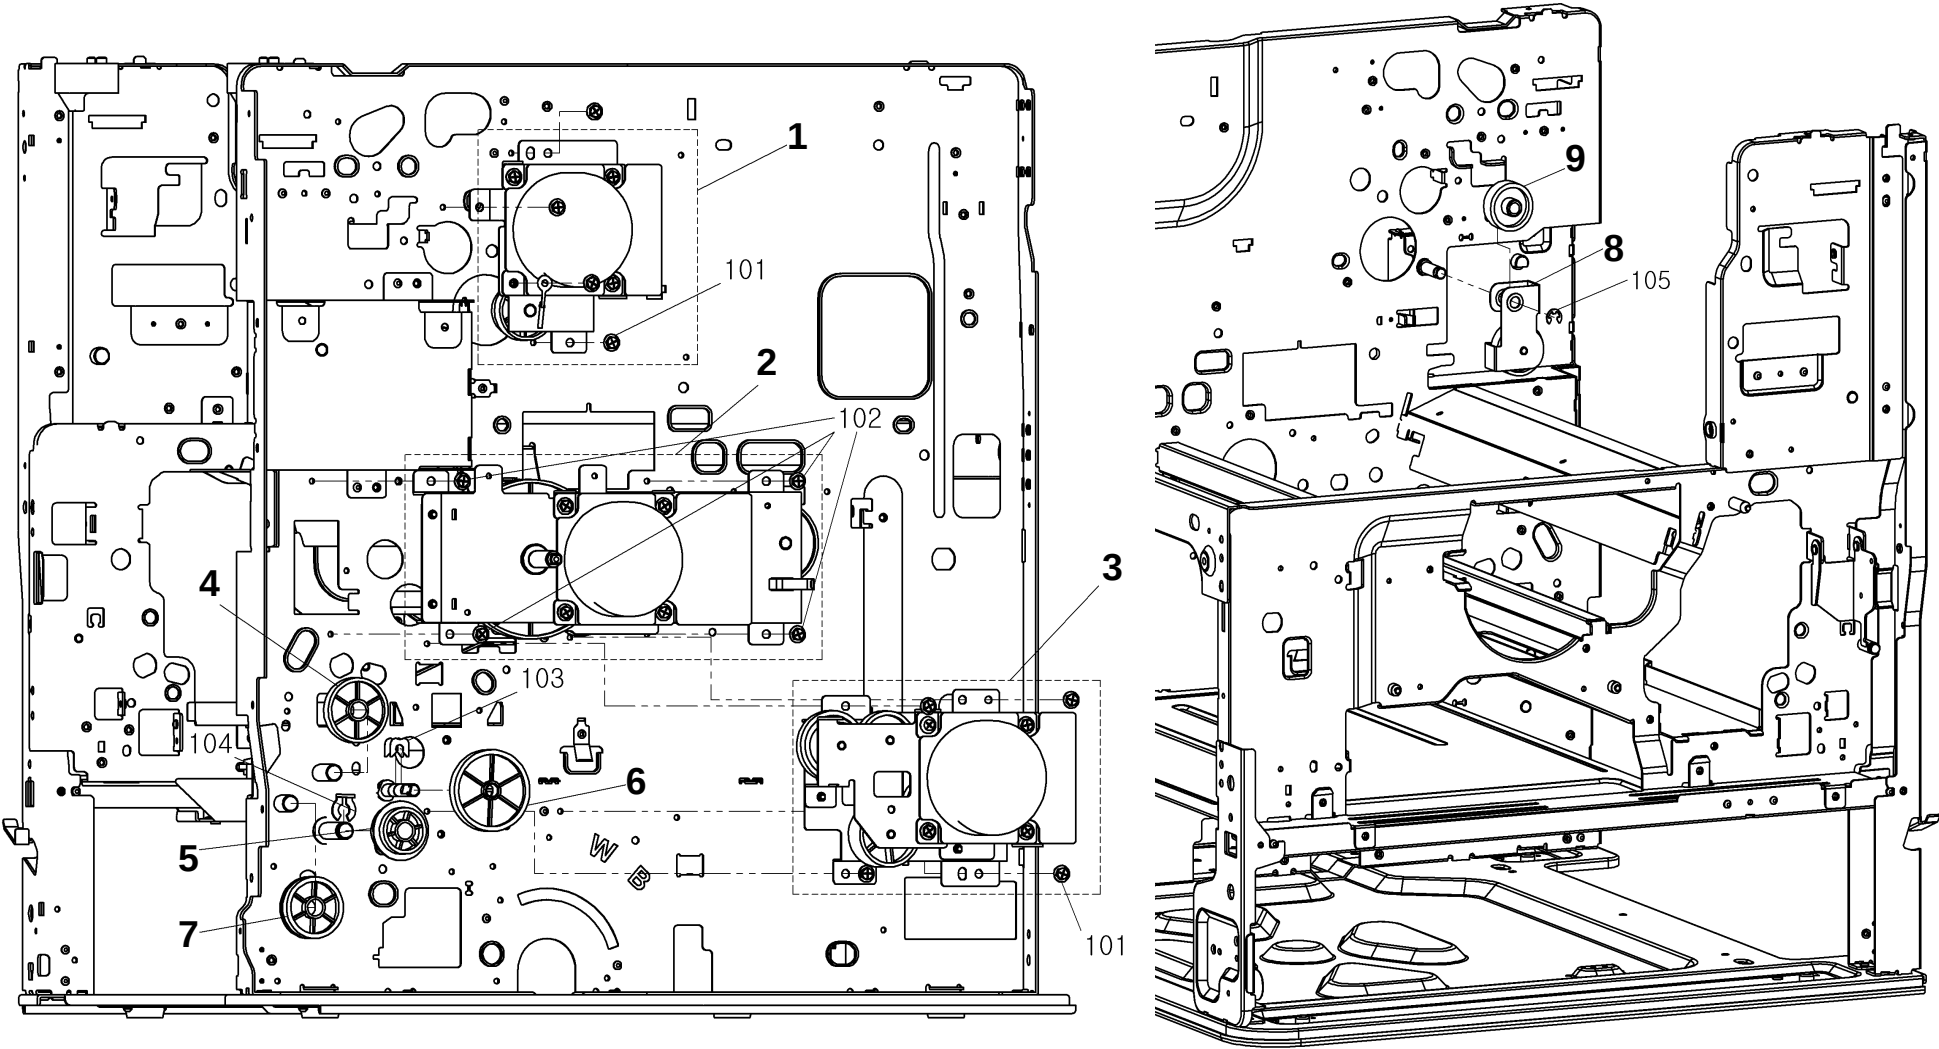


21. DRIVER UNIT

Index No.	Part No.	Description	Q'ty
1	N0011038	Fuse:Exit:Drive:Assy	1
2	N0011037	Main :Motor: Assy	1
3	N0011039	Feed Unit :Drive:Assy	1
4	N0011168	GEAR:BYPASS:TRANSFER	1
5	N0011169	GEAR:TRANSFER	1
6	N0011172	GEAR:FEED:2ND	1
7	N0011174	GEAR:BYPASS	1
8	N0011045	BKT:FUSE:DRIVE:SUB ASSY	1
9	N0011166	GEAR:FUSE:2ND	1

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	8
102	04543006Q-K	TAPPING SCREW:M3*6:T3	4
103	0805 0089	E-RING PI 4	1
104	52152621	SNAP RING:M6	2
105	07200040E	E-RING PIE4	1

22. TRANSFER UNIT

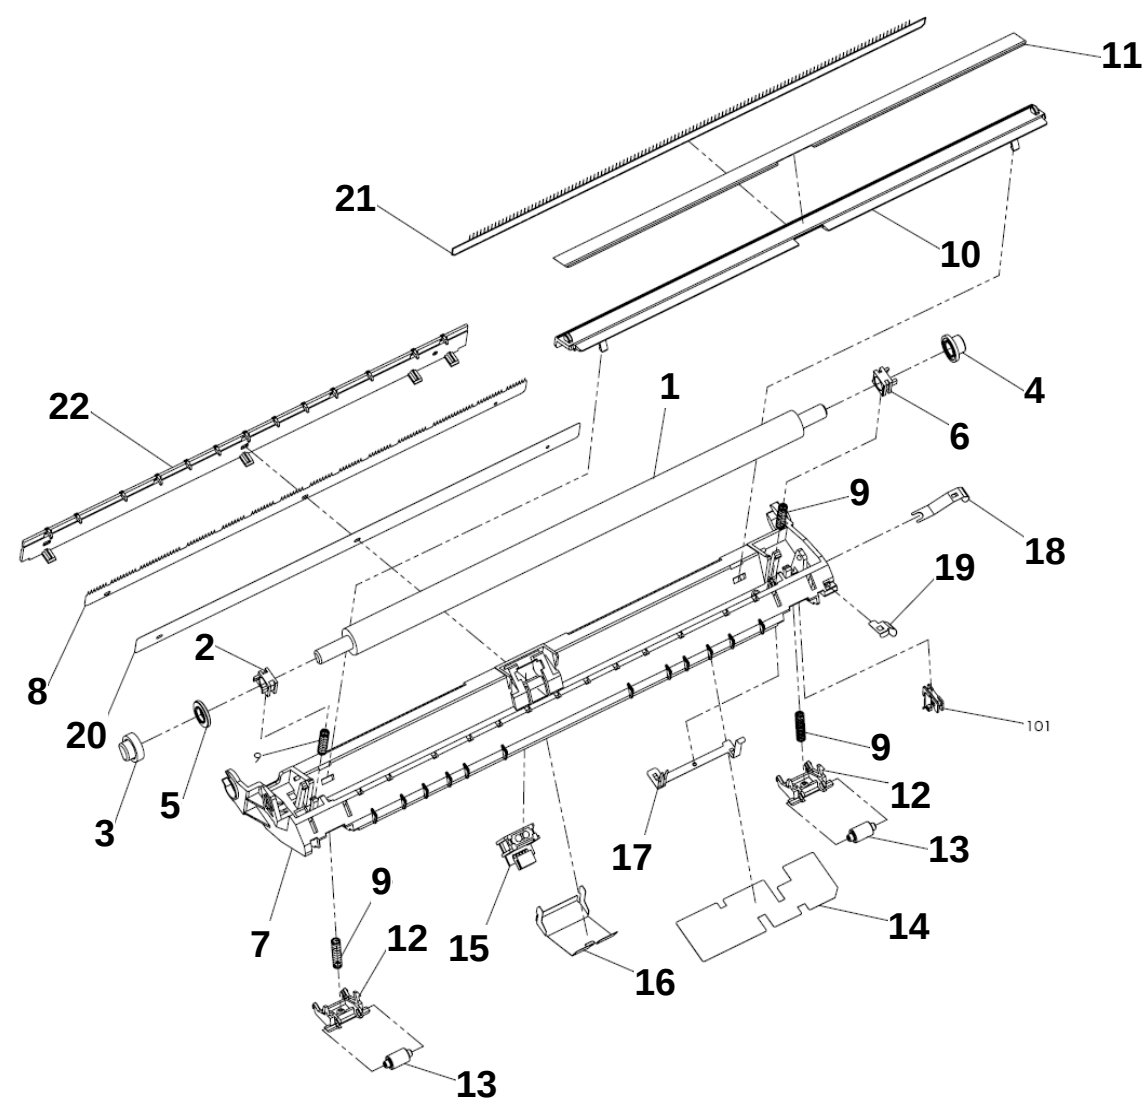


22. TRANSFER UNIT

Index No.	Part No.	Description	Q'ty
1	N0013850	TRANSFER_ROLLER_PI_16_ASSY	1
2	N0013852	TRANSFER_BUSHING_TRNASFER_ROLLER_FRONT	1
3	N0013854	TRANSFER_GEAR_TRANSFER_ROLLER	1
4	N0013855	TRANSFER_KORO_POSITION_DECISION_TRANSFER_ROLLER_REAR	1
5	N0013856	TRANSFER_KORO_POSITION_DECISION_TRANSFER_ROLLER_FRONT	1
6	N0013853	BUSHING : TRNASFER ROLLER : REAR	1
7	N0013820	TRANSFER_GUIDE_PLATE_FRONT	1
8	B0393861	EARTH PLATE	1
9	AA063607	COMP.SPRING PRESS.: TRANS.ROLLER :REAR	2
10	N0013831	TRANSFER_GUIDE_PLATE_UPPER	1
11	N0013868	SHEET:QUENCHING:TRANSFER	1
12	N0013841	COVER : PRESSURIZATION : TRANSFER UNI	2
13	N0013842	KORO : TRNASFER UNI	2
14	N0013862	COVER:HARNESS	1
15	N0013901	P-SENSOR ASSY	1
16	B0393891	COVER:P-SENSOR	1
17	N0013874	TRANSFER_TERMINAL_DISCHARGE	1
18	N0013875	TRANSFER_TERMINAL_TRANSFER_ROLLER	1
19	N0013876	TRANSFER:TERMINAL:QUENCHING:FRONT	1
20	N0013823	TRANSFER:MYLAR:SEPARATION	1
21	N0013869	DISCHARGE BRUSH:TRANSFER	1
22	D0103860-SQ	HOLDER : SEPARATION	1

Index No.	Part No.	Description	Q'ty
101	11050522	CLAMP:LES-0510	1

23. ELECTRICAL SECTION 1

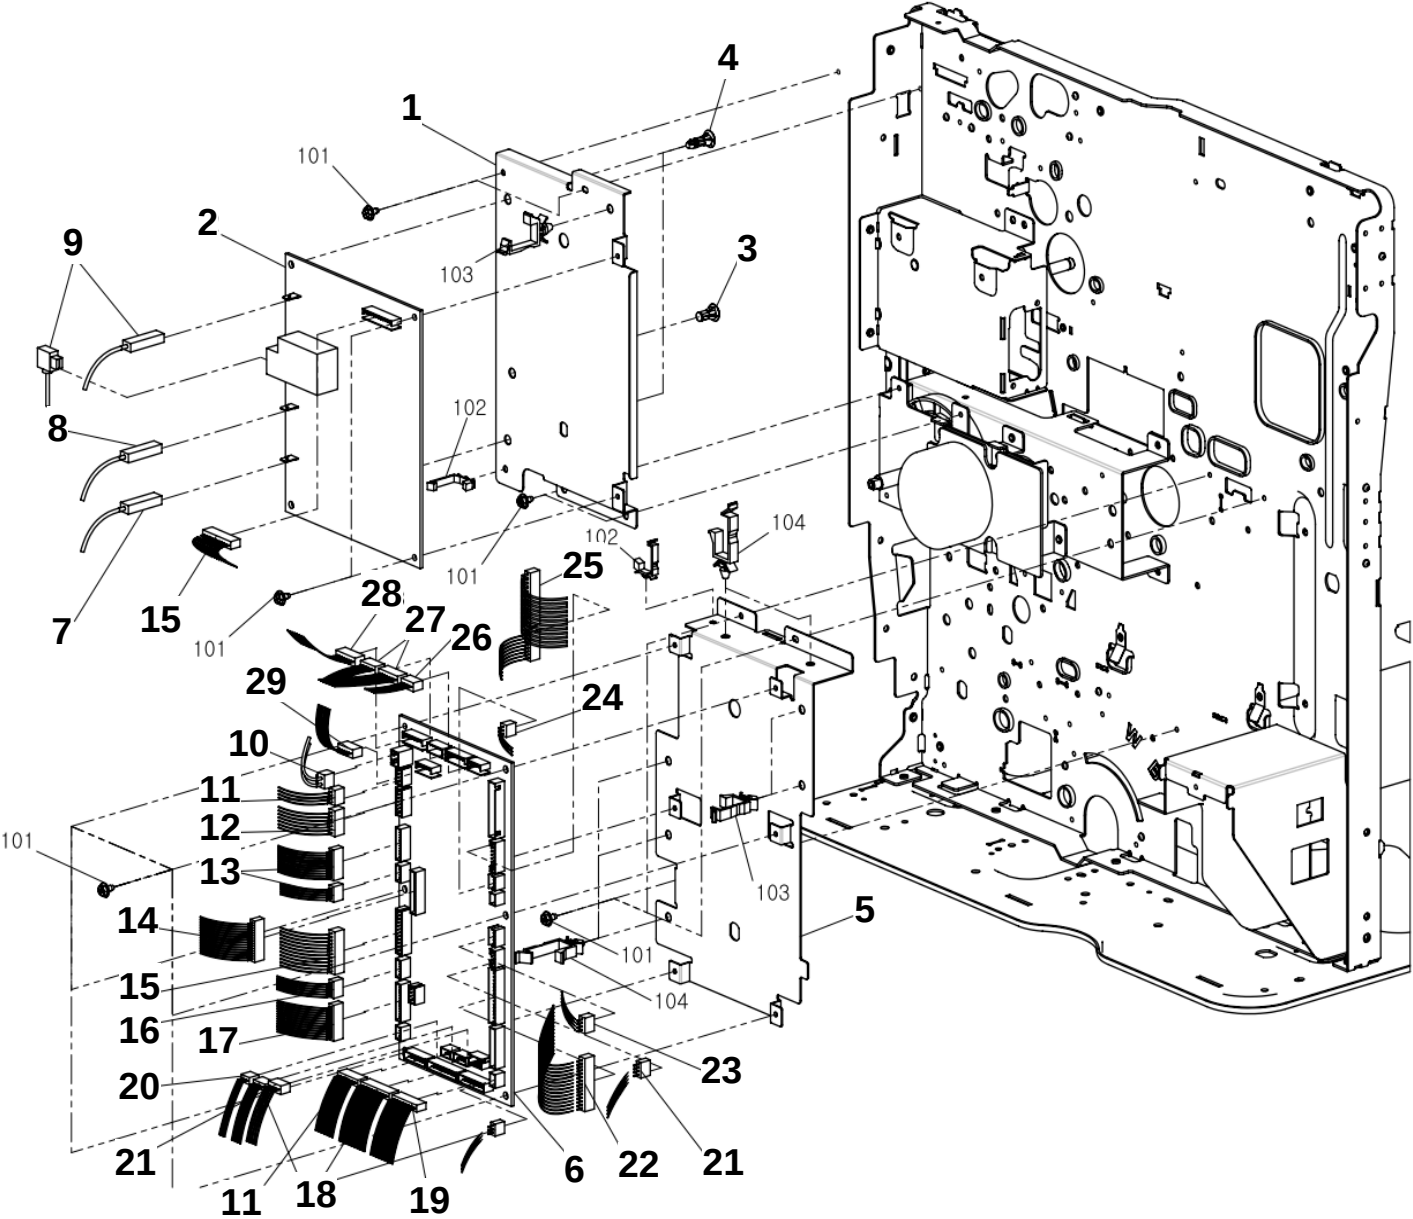


23. ELECTRICAL SECTION 1

Index No.	Part No.	Description	Q'ty
1	N0015834	BKT:HVPS	1
2	N0015081	HVPS:NEST	1
3	N0015918	BOARD SUPPORT:DACBS 10R	1
4	N0015917	BUTTON SUPPORT:DABS 10R	2
5	N0015833	BKT:EGB	1
6	NC025010	PCB : EGB	1
7	N0015245	M/H ASSY : HIGH VOLTAGE : B : R-C	1
8	N0013461	RECETACLEL:CHARGE:ASSY	1
9	N0015264	M/H ASSY : HIGH VOLTAGE LINE	1
10	N0015225	M/H ASSY : INTERLOCK_SW	1
11	N0015212	M/H ASSY : DUPLEX : EGB_I/F	1
12	N0015295	M/H ASSY : DUPLEX_MOTOR	1
13	N0015206	M/H ASSY : REVS&XEXIT&DOOR_ASSY	1
14	N0015238	M/H ASSY : EGB_CTL I/F	1
15	N0015202	M/H ASSY : HVPS	1
16	N0015257	M/H ASSY : FUSE_I/F : EU	1
17	N0015242	M/H ASSY : 1BIN_I/F	1
18	N0015213	M/H ASSY : FEED_ASSY	1
19	N0015217	M/H ASSY : PAPER_SIZE_ASSY	1
20	N0015218	M/H ASSY : PAPER_EXIT_ASSY	1
21	N0015294	M/H ASSY : PCU_I/F	1
22	N0015267	M/H ASSY : FINISHER_I/F	1
23	N0015237	M/H ASSY : PURE_TONER_I/F	1
24	N0015208	M/H ASSY : FAN1	1
25	N0015227	M/H ASSY : PSU_POWER	1
26	N0015255	M/H ASSY : SDC_I/F	1
27	N0015219	M/H ASSY : MAIN&FEED_MOTOR	1
28	N0015220	M/H ASSY : FUSE_MOTOR	1
29	N0015241	M/H ASSY : PM_I/F	1

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	15
102	11050516	CLAMP:LWSM-0511	2
103	11050487	CLAMP:LWS-0511Z	3
104	11050488	CLAMP:LWS-1211	5

24. ELECTRICAL SECTION 2

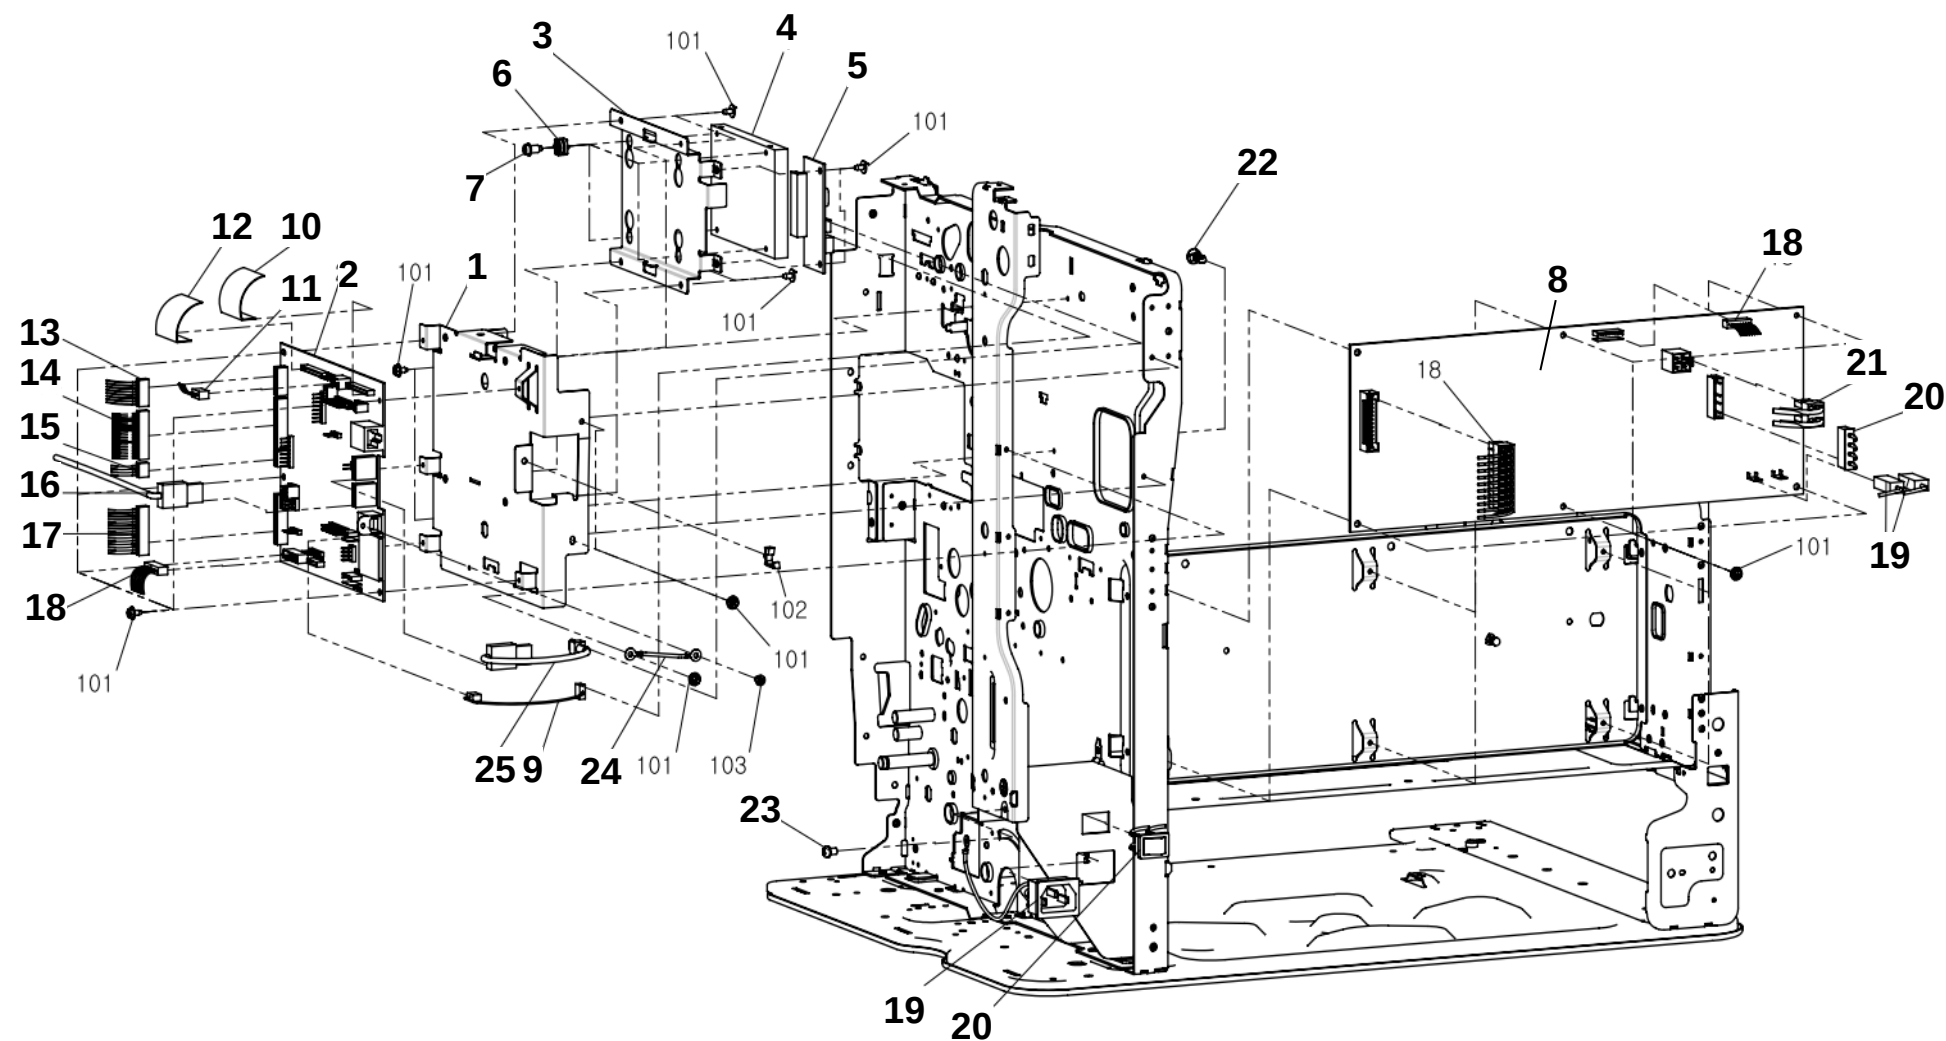


24. ELECTRICAL SECTION 2

Index No.	Part No.	Description	Q'ty
1	N0015831	BKT:CTL	1
2	N7125100-OA	PCB : CTL : NEST-S	1
3	N0015835	BKT:HDD	1
4	N7125905	HDD:320G:2.5INC	1
5	N0015090	PCB : HDD	1
6	N0015921	GROMMET:HDD	4
7	AA143848	STEP BOLT:HDD	4
8	N0015087	PSU : NEST : 220V	1
9	N0015289	M/H ASSY : CTL-HDD POWER	1
10	N0015250	M/H ASSY : UICC : CTL_I/F_CABLE	1
11	N0015256	M/H ASSY : LAMP_CLK	1
12	N0015228	M/H ASSY : SBU_FFC_CABLE	1
13	N0015255	M/H ASSY : SDC_I/F	1
14	N0015231	M/H ASSY : LD_CONTROL_I/F	1
15	N0015240	M/H ASSY : BD_I/F	1
16	N0015288	M/H ASSY : CTL/HUB-OPU_USB CABLE	1
17	N0015238	M/H ASSY : EGB_CTL I/F	1
18	N0015227	M/H ASSY : PSU_POWER	1
19	N0015248	M/H ASSY : POWERCORD_INNET	1
20	N0015239	M/H ASSY : AC : SW	1
21	N0015222	M/H ASSY : FUSE_I/F : NA	1
22	N0015917	BUTTON SUPPORT:DABS 10R	1
23	AA143592	SCR:W/SPRING WASHER	1
24	N0015297	M/H ASSY : EARTH WIRE(CTL/USB)	1
25	N0015286	M/H ASSY : CTL-HDD_USB CABLE	1

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	21
102	11050511	CLAMP:HARNESS CLAMP: LWS-0306ZC	1
103	03530050N	BIND SCREW M3*5	1

25. ARDF - EXTERIOR

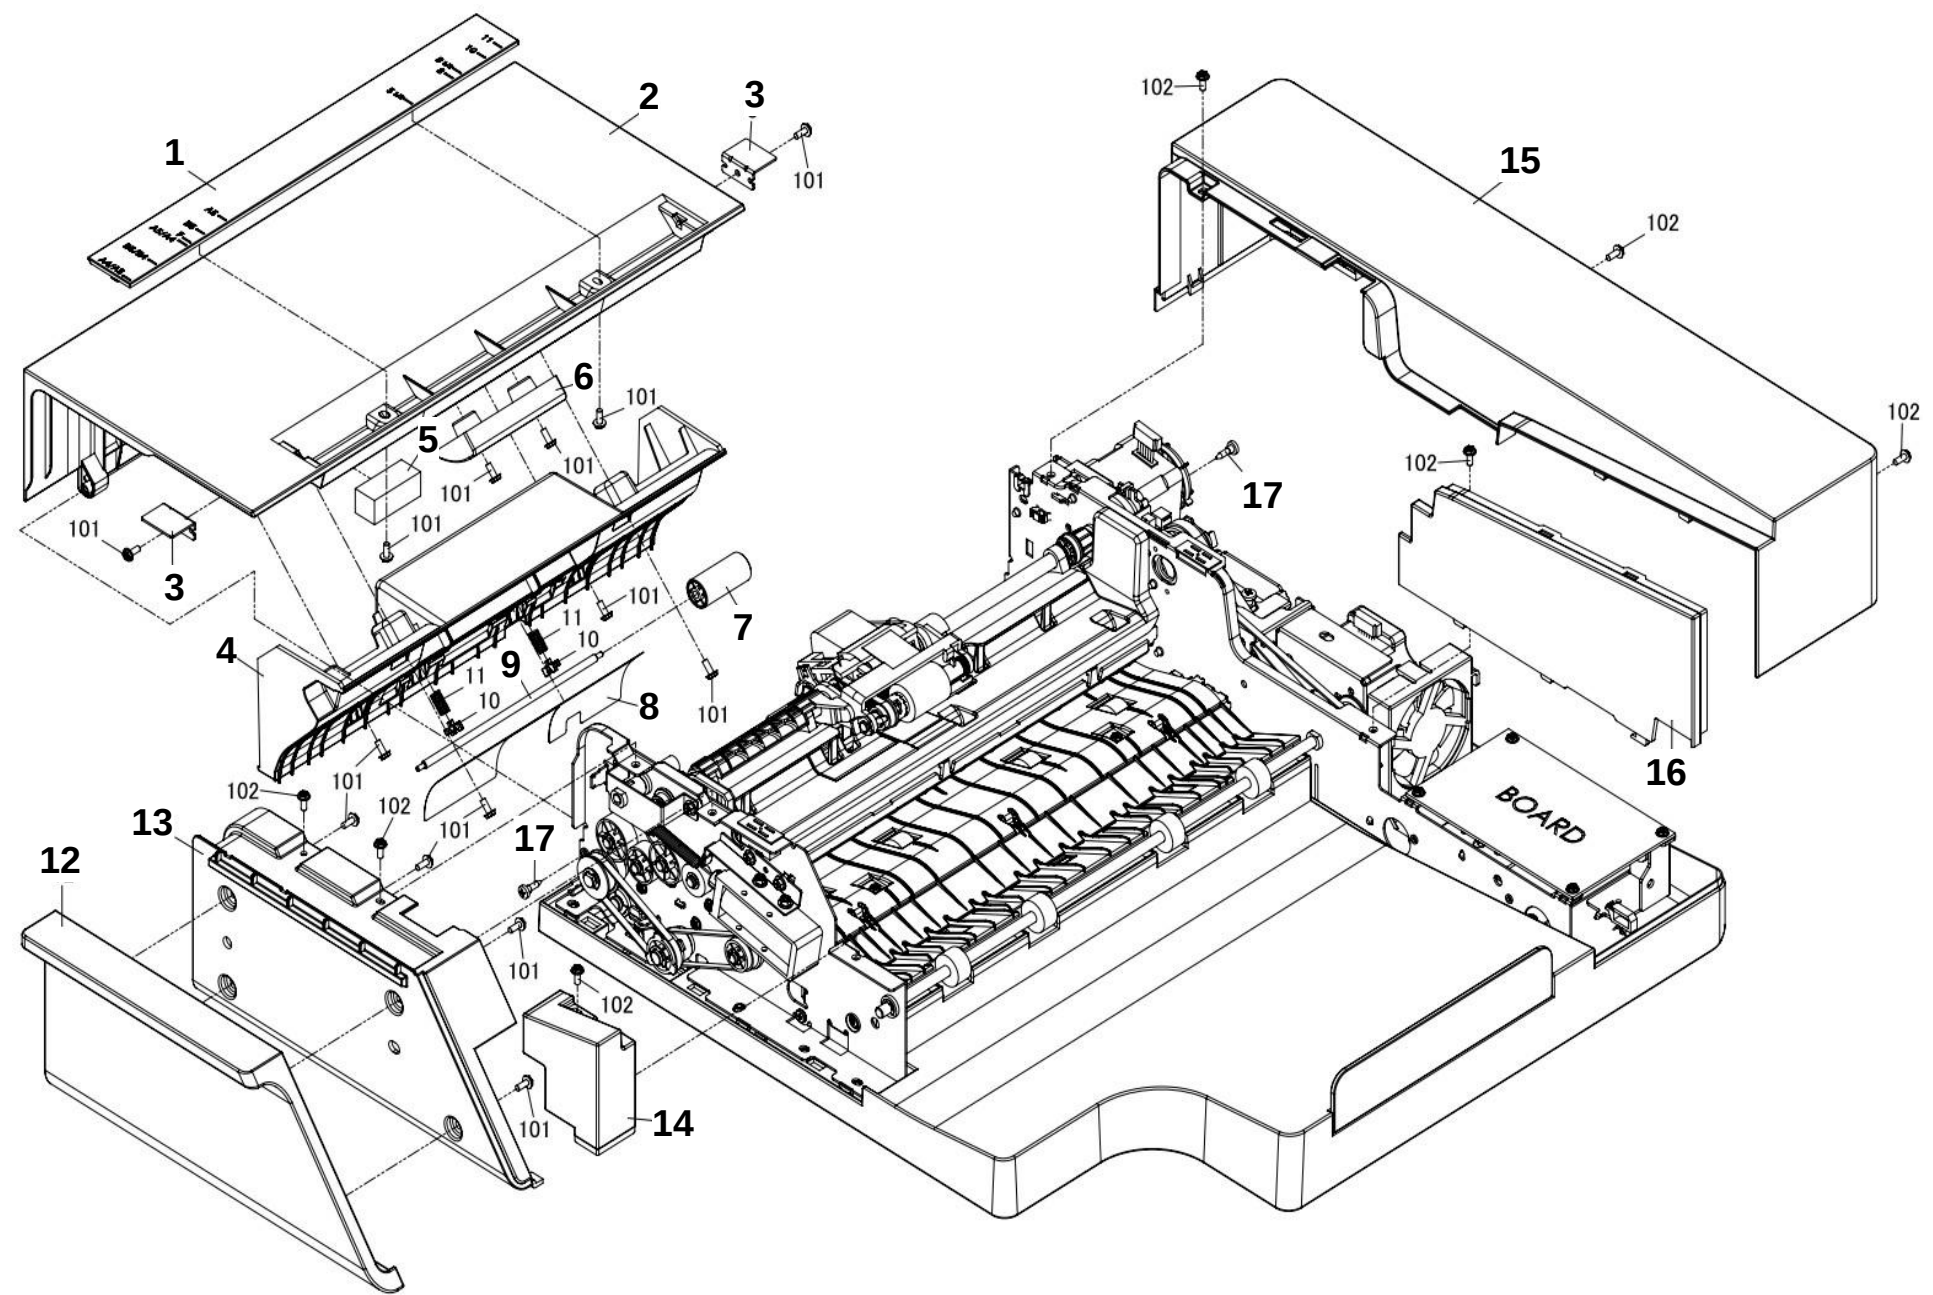


25. ARDF - EXTERIOR

Index No.	Part No.	Description	Q'ty
1	N3304670	COVER:SIZE:INDICATION	1
2	N3304661	COVER:TOP	1
3	N3304668	POSITIONING PLATE: TOP COVER	2
4	N3304663	COVER:TOP:INNER	1
5	N3304671	COVER:TOP:SPONGE	1
6	N3304662	COVER:TOP:DECURL GUIDE	1
7	N3304664	ROLLER:DRIVEN:TRANSPORT:MIDDLE	1
8	N3304675	MYLAR TOP COVER GUIDE	1
9	N3304665	SHAFT:DRIVEN:TRANSPORT	1
10	N3304667	BUSHING:DRIVEN:TRANSPORT	2
11	B0913912	SPRING:TRANSFER:REAR	2
12	N3304731	COVER:FRONT	1
13	N3304732	COVER FRONT INNER	1
14	N3304733	COVER FRONT RIGHT	1
15	N3304741	COVER:REAR	1
16	N3304742	COVER:REAR:INNER	1
17	DFAR4115	STUD:FEED IN	2

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	14
102	04513008N-K	SCREW:TAP:M3X8	7

26. ARDF - PAPER TRAY SECTION

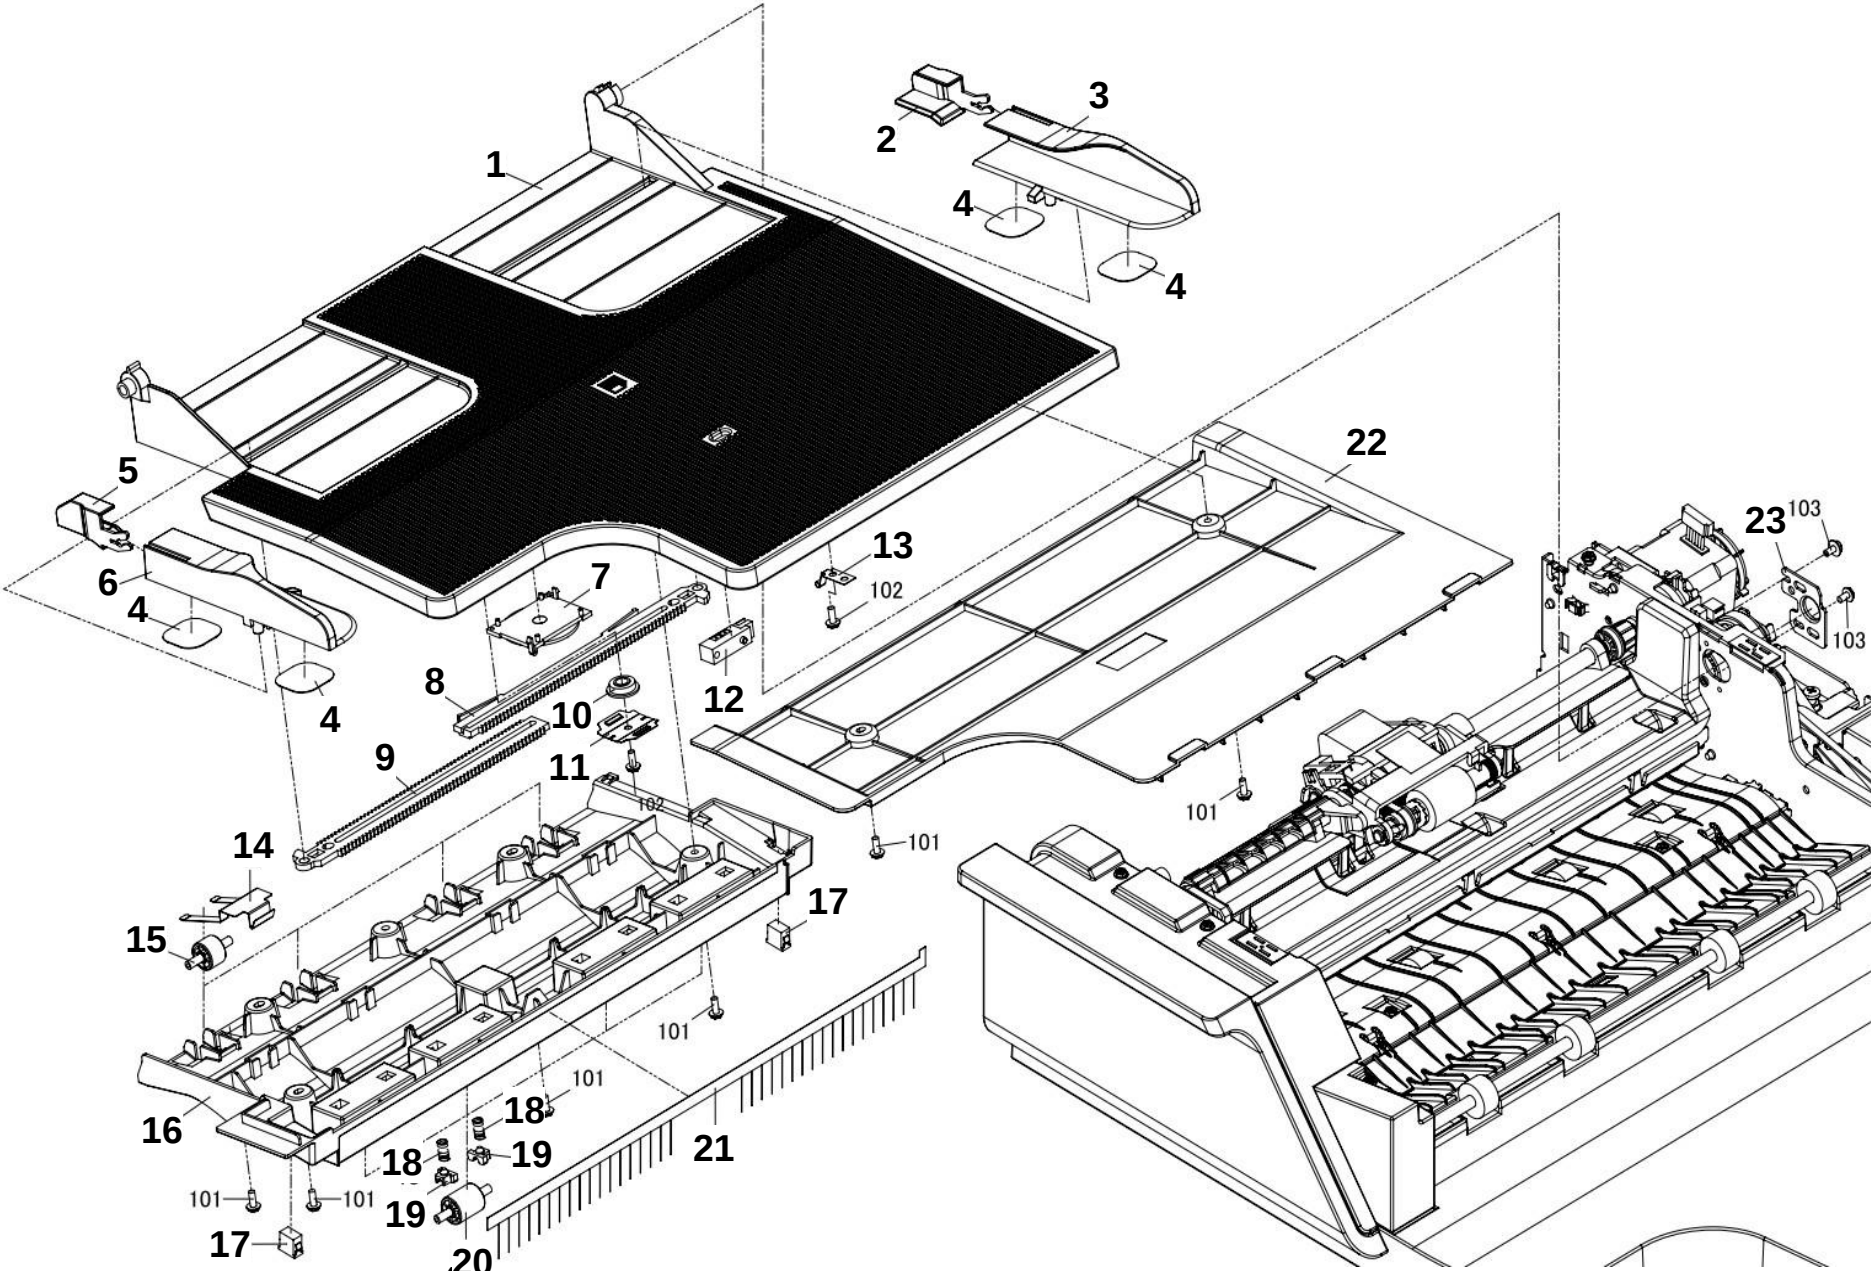


26. ARDF - PAPER TRAY SECTION

Index No.	Part No.	Description	Q'ty
1	N3304630	COVER:TRAY:DOCUMENT	1
2	N3304653	SIDE FENCE:SUPPORT:REAR	1
3	N3304652	SIDE FENCE:REAR	1
4	S0024951	PAD:SIDE FENCE	4
5	N3304643	SIDE FENCE:SUPPORT:FRONT	1
6	N3304642	SIDE FENCE:FRONT	1
7	AW500034	ROTARY SWITCH:PAPER SIZE SENSOR	1
8	N0014616	RACK:SDE FENCE:REAR	1
9	N0014615	RACK:SIDE FENCE:FRONT	1
10	D0102639	GEAR:SIDE FENCE	1
11	N3304639	SPRING PLATE RAIL	1
12	M0100077	PHOTO REPLECTOR SENSOR:PS-117ND1 SR	1
13	N3304633	PLATE:EARTH:DISCHARGE BRUSH	1
14	N3304635	SPRING PLATE:PRESSURE:IDLE ROLLER	4
15	S0024671	ROLLER:IDLE	4
16	N3304631	GUIDE:LOWER:TRAY:DOCUMENT	1
17	N3304636	MAGNET CATCH:EXIT TRAY	2
18	N3306501	SPRING COMPRESS EXIT IDLE	8
19	N3300249	SLIDE BEARING:Ψ4:TRANS.	8
20	S0023420	ROLLER:IDLE:MIDDLE	4
21	N3304638	DISCHARGE BRUSH PAPER EXIT	1
22	N3304632	COVER:LOWER:TRAY:DOCUMENT	1
23	N3301191	ADJUSTMENT PLATE	1

Index No.	Part No.	Description	Q'ty
101	04503008P	SCREW:HEXA:W.F:M3.0*8:T2	6
102	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	2
103	04513006N-K	SCREW:FLANGE:M3.0*6	2

27. ARDF - FEED SECTION 1

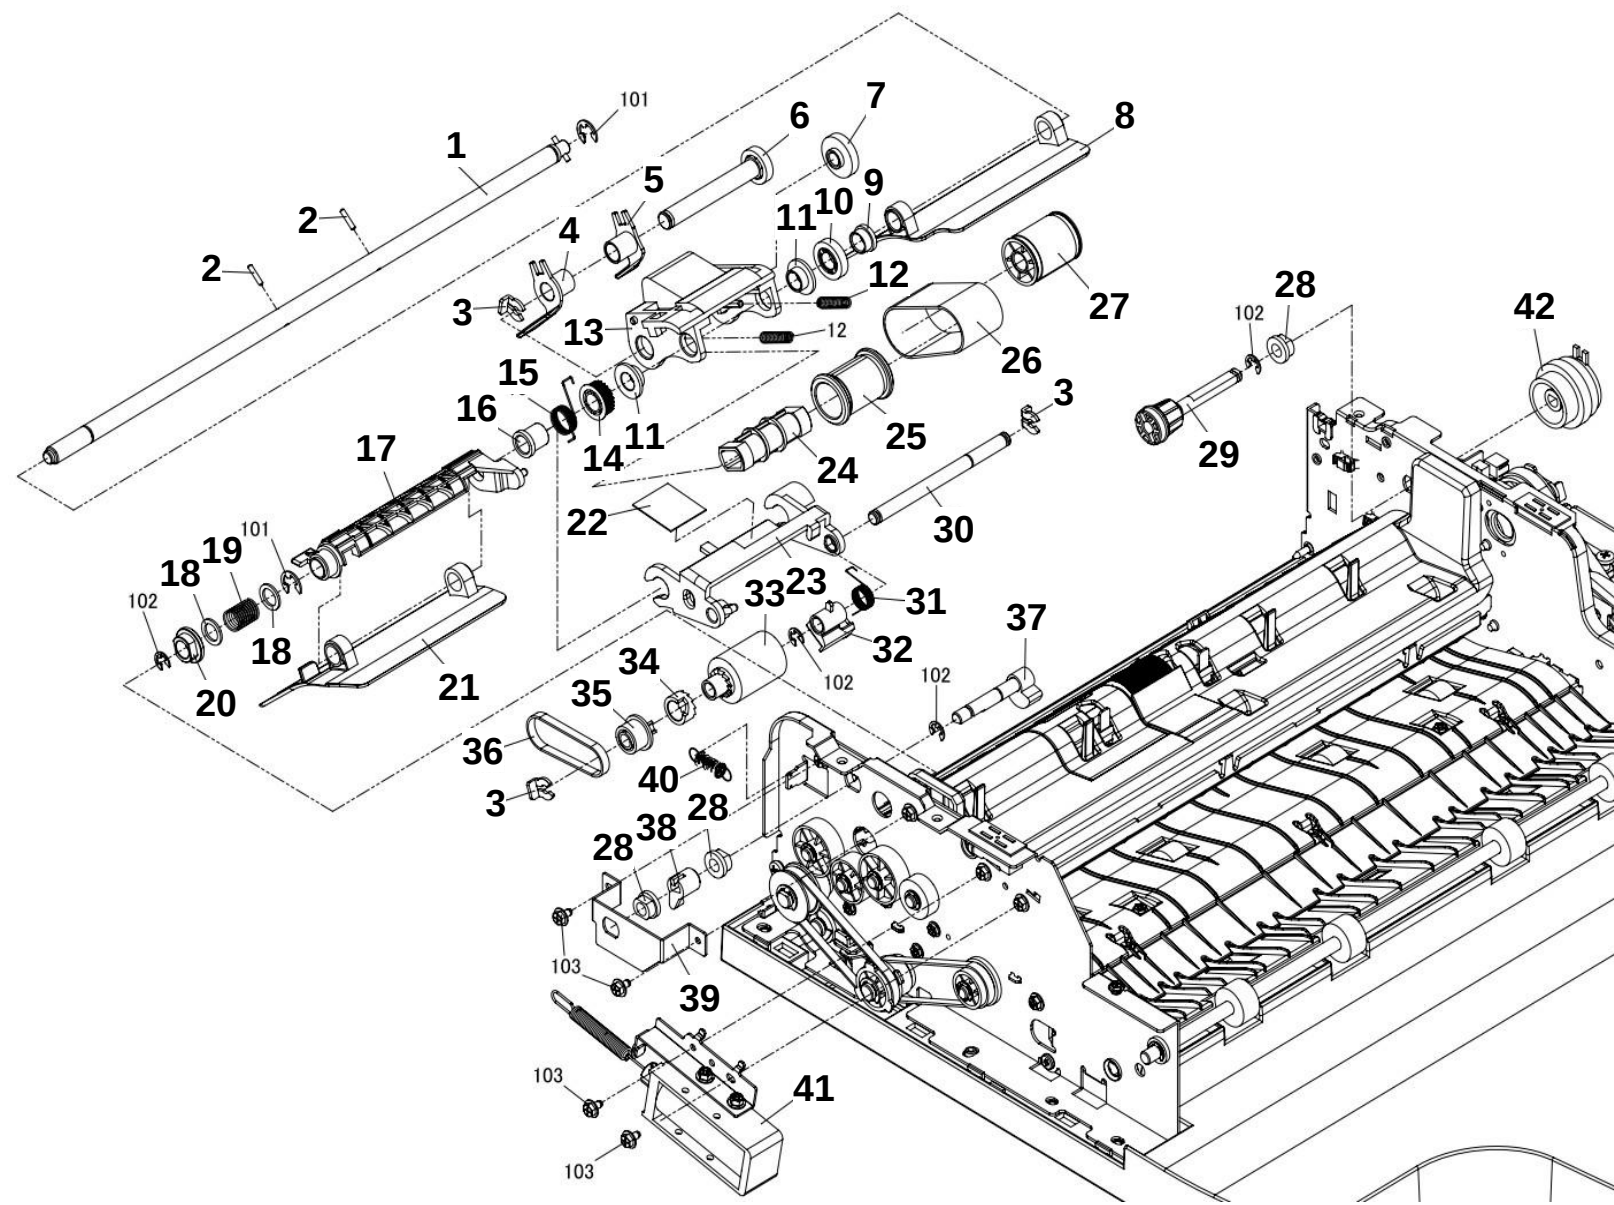


27. ARDF - FEED SECTION 1

Index No.	Part No.	Description	Q'ty
1	N3302160	ASSY:DRIVE SHAFT:FEED	1
2	M0100100	PIN 2X10	2
3	54472681	SANP RING	3
4	N3302549	BUSHING LEFT FEED F	1
5	N3302550	BUSHING LEFT FEED R	1
6	N3302130	ASSY:SHAFT:LEFT:FEED	1
7	N3302121	GEAR:SPUR:22Z:IDLE	1
8	N3302512	GUIDE REAR FEED	1
9	M0111552	BUSHING ARM REAR	1
10	M0101503	GEAR:SPUR:20Z	1
11	N3302141	BUSHING:SEP HUB FEED:RIGHT	2
12	N3301509	SPRING FEED BELT	2
13	N3301508	COVER HOLDER FEED	1
14	M0101515-P	PULLEY:S2M:24T:PICK UP	1
15	M0101534	SPRING:TORSION:PICK UP	1
16	M0111551	BUSHING ARM FRONT	1
17	N3302510	ARM JOINT	1
18	S0022013	SPACER:PHI 8.2	2
19	M0101545	SPRING:COMPRESS:FEED SHAFT	1
20	AA082070	BUSHING-8*16*7	1
21	N3302511	GUIDE FRONT FEED	1
22	M0111544	MYLAR:PICK UP	1
23	M0111554	ARM ONE BODY	1
24	M0101552-P	SHAFT:FEED ROLLER:IDLE	1
25	M0101551-P	HUB:FFED:RIGHT	1
26	N3302142	PAPER FEED BELT	1
27	M0101580-OA	ROLLER:FEED BELT:DRIVE ASSY	1
28	08053480	BUSHING:PHI 6	3
29	N3301420	ASSY SHAFT DRIVE FEED	1
30	M0111535	SHAFT:PICK UP	1

Index No.	Part No.	Description	Q'ty
31	M0101555	SPRING:ACTUATOR:PICK UP	1
32	M0111546	DE-CURL:ACTUATOR:PICK UP	1
33	M0111560	ASSY PULLEY PICK UP	1
34	M0111557	COLLAR PICK ROLLER	1
35	N3302174	PULLEY S2M PICK ROLLER	1
36	N3302180	TIMING BELT B40 S2M110	1
37	N3304351	ASSY:CAM:PICK UP	1
38	M0101903-P	HUB:LEVER:PICK UP	1
39	N3304354	BRACKET ASSY CAM PICK UP	1
40	N3304355	SPRING CAM PICK UP	1
41	N3301800	ASSY:SOLENOID:PICK UP:ADF	1
42	N3302617	CLUTCH 0.25NM Z28	1
101	07200060E	E-RING PIE6(B/K)	2
102	07200040E	E-RING M4	4
103	04543006Q-K	TAPPING SCREW:M3*6:T3	2

28. ARDF - FEED SECTION 2

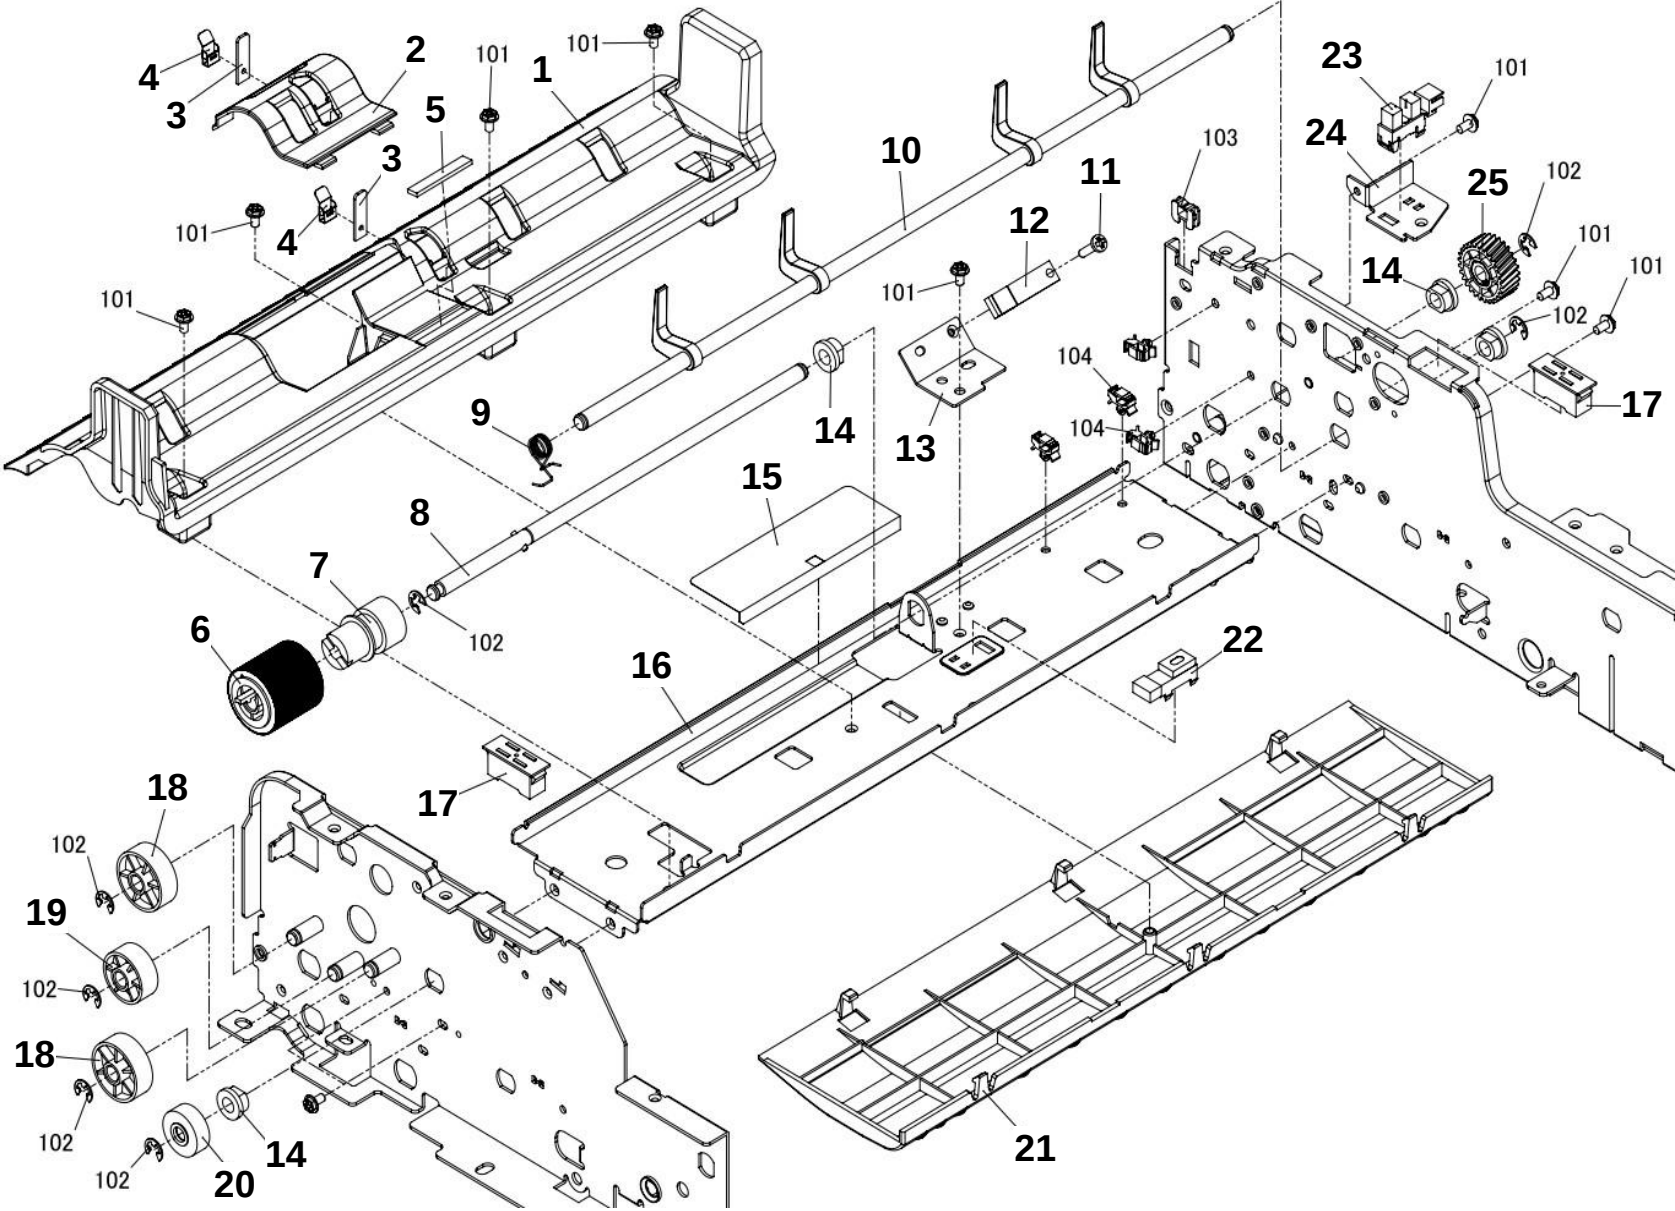


28. ARDF - FEED SECTION 2

Index No.	Part No.	Description	Q'ty
1	N3302513	COVER:UPPER:INNER FEED	1
2	N3302515	COVER:UPPER: S	1
3	N3302503	RUBBER PLATE SEP	2
4	N3302504	BKT:RUBBER PLATE SEP	2
5	N3301413	PAD PICK UP	1
6	N3300310	ASSY SEP ROLLER	1
7	M0110203	SPRUCE TORQUE LIMITER NEW	1
8	N3302210	SHAFT:REVERSE ROLLER:ASSY	1
9	N3302681	TORSION SPRING:STOPPER	1
10	N3302680	ASSY STOPPER DOCUMENT	1
11	03530120Z	PHIL.TRU.HEAD SCREW:M3*12	1
12	M0100077	PHOTO REPLECTOR SENSOR:PS-117ND1 SR	1
13	N3301711	SENSOR BRACKET:UPPER	1
14	08053480	BUSHING:PHI 6	4
15	N3301165	MYLAR DUPLEX GUIDE	1
16	N3301161	STAY:SEPARATION	1
17	N3300513	MAGNET CATCH 25.5N	2
18	N3304331	STOPPER IDLE Z30	2
19	N3304332	STOPPER IDLE Z26	1
20	N3304333	STOPPER DRIVE Z23 ASSY	1
21	N3302514	COVER:LOWER:INNER FEED	1
22	N3300077	PHOTO RELECTOR SENSOR-PS124GD1	1
23	N0012141	PHOTO INTERRUPTER	1
24	N3301321	BRACKET:ON OFF DETECTOR	1
25	M0111620	ASSY GEAR SEPARATION	1

Index No.	Part No.	Description	Q'ty
101	04513006N-K	SCREW:FLANGE:M3.0*6	10
102	07200040E	E-RING M4	7
103	11050328	HARNESS CLAMP:ES0505	1
104	11050511	CLAMP:HARNESS CLAMP: LWS-0306ZC	4

29. ARDF - TRANSFER SECTION

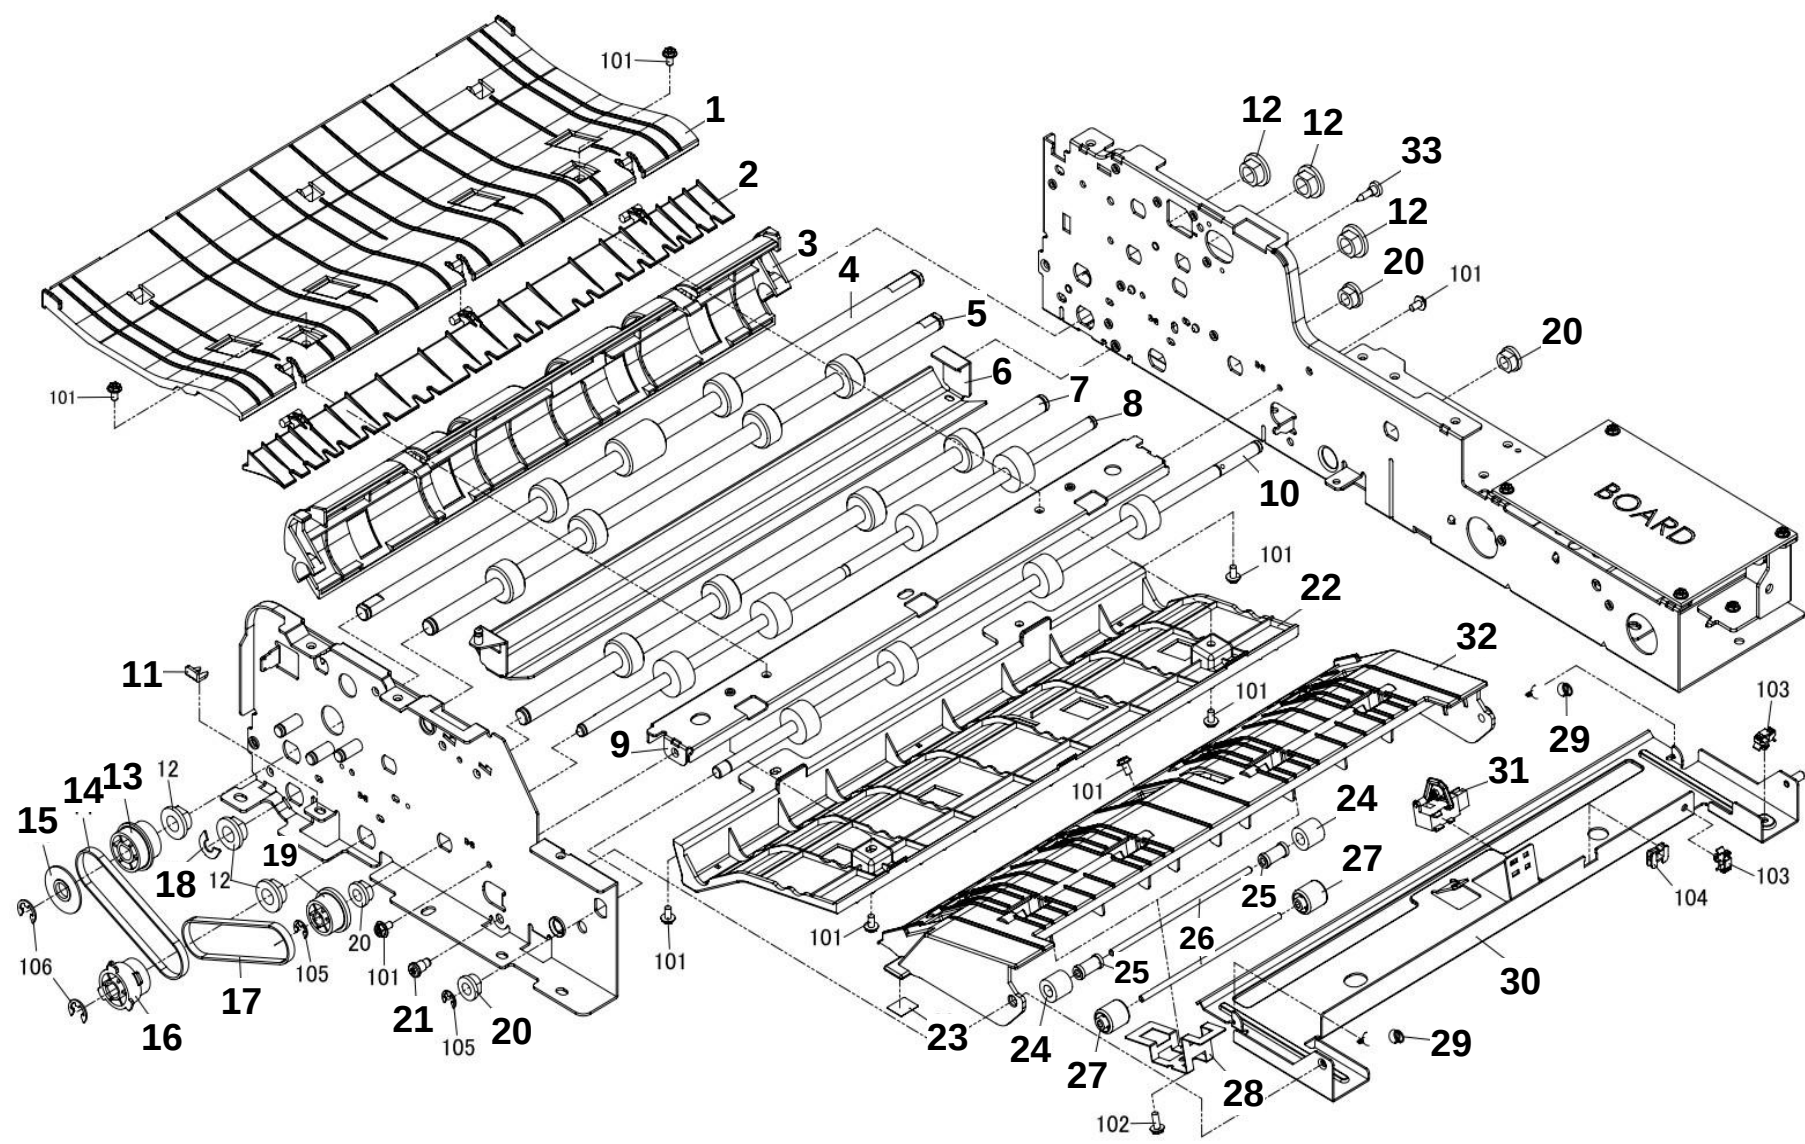


29. ARDF - TRANSFER SECTION

Index No.	Part No.	Description	Q'ty
1	N3303223	GUIDE:UPPER	1
2	N3303224	JUNCTION GUIDE	1
3	N3303242	GUIDE LOWER LEFT	1
4	N3303130	ROLLER:PULL OUT	1
5	N3303110	TRANSPORT ROLLER:ENTRANCE	1
6	N3303510	GUIDE PLATE:SCANNING:ASS'Y	1
7	N3303120	TRANSPORT ROLLER:EXIT	1
8	N3303140	TRANSPORT ROLLER:BRIDGE	1
9	N3301171	STAY RIGHT	1
10	N3303150	REVERSE EXIT ROLLER:DRIVE	1
11	52062686	SNAP RING	1
12	AA082070	BUSHING-8*16*7	6
13	N3304322	TIMING PULLEY:TRANS SUB DRIVE	1
14	N3303653	TIMING BELT B40S2M178	1
15	N3304253	FLANGE PULLEY:24	1
16	N3304123	TIMING PULLEY T32 T28	1
17	N3303654	TIMING BELT B40S2M174	1
18	08050088	E-RING:M6(ZN5)	1
19	N3304124	TIMING PULLEY T28	1
20	08053480	BUSHING:PHI 6	4
21	N3303410	SCREW:CABLE CONNECTOR	1
22	N3303232	GUIDE LOWER RIGHT	1
23	N3303433	DECAL:TRANSPORT GUIDE	1
24	N3303476	RUBBER ROLLER:SCANNING:DRIVEN	4
25	N3303475	ROLLER:SCANNING:DRIVEN	4
26	N3303493	SHAFT:DRIVEN:EXIT	4
27	N3303494	ROLLER:EXIT:DRIVEN	4
28	N3303418	SPRING PLATE EXIT DRIVEN	2
29	N3303426	TENSION SPRING:EXIT:OPEN CLOSE	2
30	N3303431	COVER:GUIDE PLATE:EXIT:SP	1

Index No.	Part No.	Description	Q'ty
31	D3694755	PHOTO INTERRUPTOR: DUPLEX	1
32	N3303432	GUIDE PLATE:EXIT	1
33	DFAR4115	STUD:FEED IN	1
101	04513006N-K	SCREW:FLANGE:M3.0*6	9
102	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	2
103	11050511	CLAMP:HARNESS CLAMP: LWS-0306ZC	2
104	11050328	HARNESS CLAMP:ES0505	1
105	07200040E	E-RING M4	2
106	07200060E	E-RING PIE6(B/K)	2

30. ARDF - DRIVE SECTION

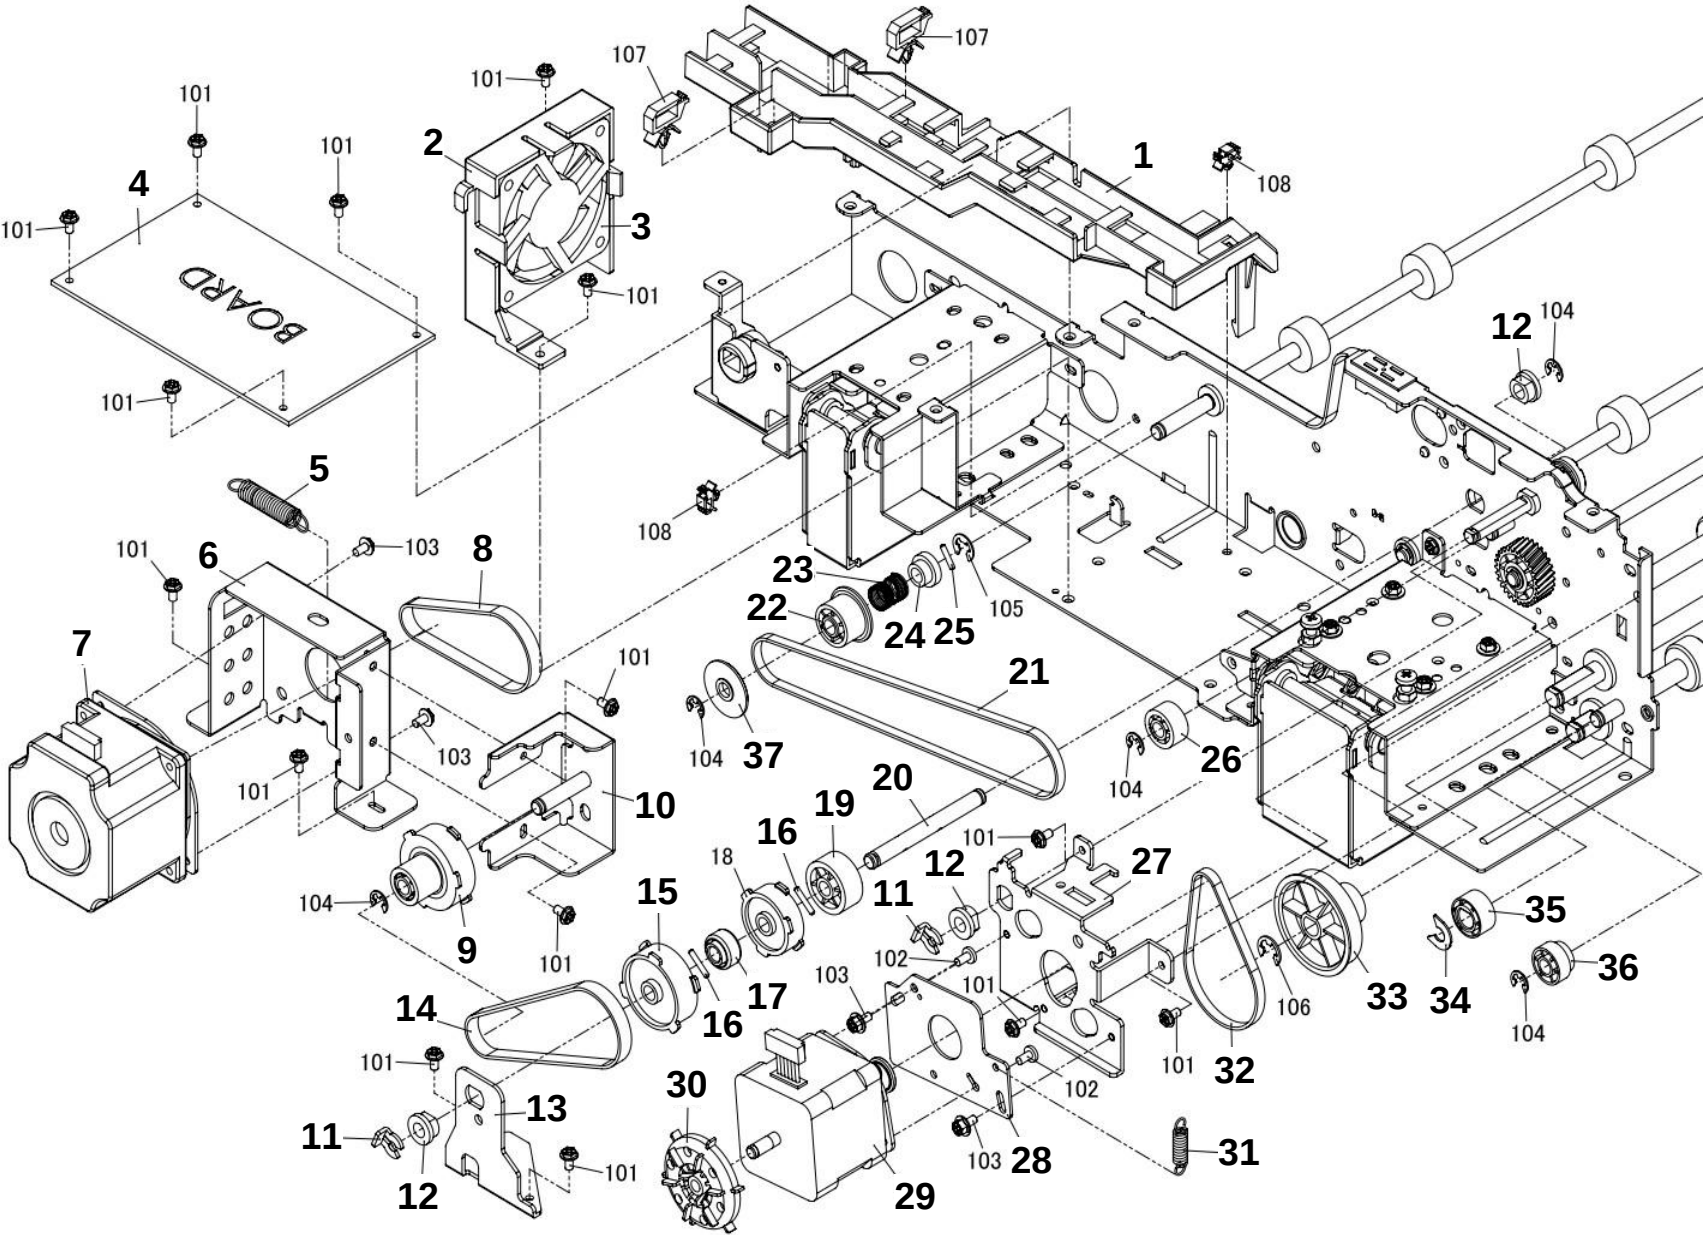


30. ARDF - DRIVE SECTION

Index No.	Part No.	Description	Q'ty
1	N3305751	HARNESSE GUIDE	1
2	N3306110	FAN BRACKET	1
3	D3404003	DC FAN:BRIDGE UNIT	1
4	NC025040	PCB ASSY : SDC : NEST	1
5	N3304119	TENSION SPRING:BRACKET:FEED:MOTOR	1
6	N3304114	BRACKET:MOTOR:PAPER FEED	1
7	N3304121	STEPPING MOTOR:FEED:ASSY	1
8	N3303631	TIMING BELT B60S2M168	1
9	N3304221	TIMING PULLEY:T48/T24:S2M	1
10	N3304115	BKT:MOTOR:PAPER FEED:SLOW DOWN:ASS'Y	1
11	54472681	SANP RING	2
12	8053480	BUSHING:PHI 6	3
13	N3304212	BRACKET DRIVE SUPPORT	1
14	N3303632	TIMING BELT B60S2M212	1
15	N3304236	TIMING PULLEY:PAPER FEED:DRIVE	1
16	N3300120	PARALLEL PIN:2X12	2
17	N3303635	IDLE BUSHING	1
18	N3304237	TIMING PULLEY EXIT-REVERSE DRIVE	1
19	N3304235	GEAR:DRIVE:FEED UNIT:ASS'Y	1
20	N3304268	SHAFT:GEAR:FEED SUB-UNIT:DRIVE	1
21	N3303634	TIMING BELT B40S2M360	1
22	N3304392	PULLEY:T28	1
23	N3303122	SPRING TORSION TORQUE LIM	1
24	S0024333	STOPPER DRIVE Z23 ASSY	1
25	06320100G	PIN	1
26	N3301409	GEAR:IDLE:19Z	1
27	N3304145	BRACKET MOTOR TRANSPORT	1
28	N3304143	BRACKET:SUPPORT:MOTOR:TRANSPORT	1
29	N3304151	STEPPING MOTOR:TRANS:ASSY	1
30	M0112908	FAN TRANSPORT MOTER	1

Index No.	Part No.	Description	Q'ty
31	N3304149	TENSION SPRING TRANSPORT MOTOR	1
32	N3303652	TIMING BELT B40S2M158	1
33	N3304321	TIMING PULLEY TRANS DRIVE	1
34	8050088	E-RING:M6(ZN5)	1
35	N3304324	GEAR REGIST 20Z	1
36	N3302538	GEAR IDLE 19Z	1
37	N3304252	FLANGE PULLEY:23	1
101	04513006N-K	SCREW:FLANGE:M3.0*6	15
102	04130060N	SCREW, S-TIGHT M3X6 BIND HEAD+	2
103	03603006N-B	SCREW:HEXA3*6 3TYPE PC	4
104	07200040E	E-RING M4	5
105	07200050E	E-RING PIE5(W/T)	1
106	07200060E	E-RING PIE6(B/K)	1
107	11050487	CLAMP:LWS-0511Z	2
108	11050511	CLAMP:HARNESSE CLAMP: LWS-0306ZC	2

31. ARDF - FRAME SECTION

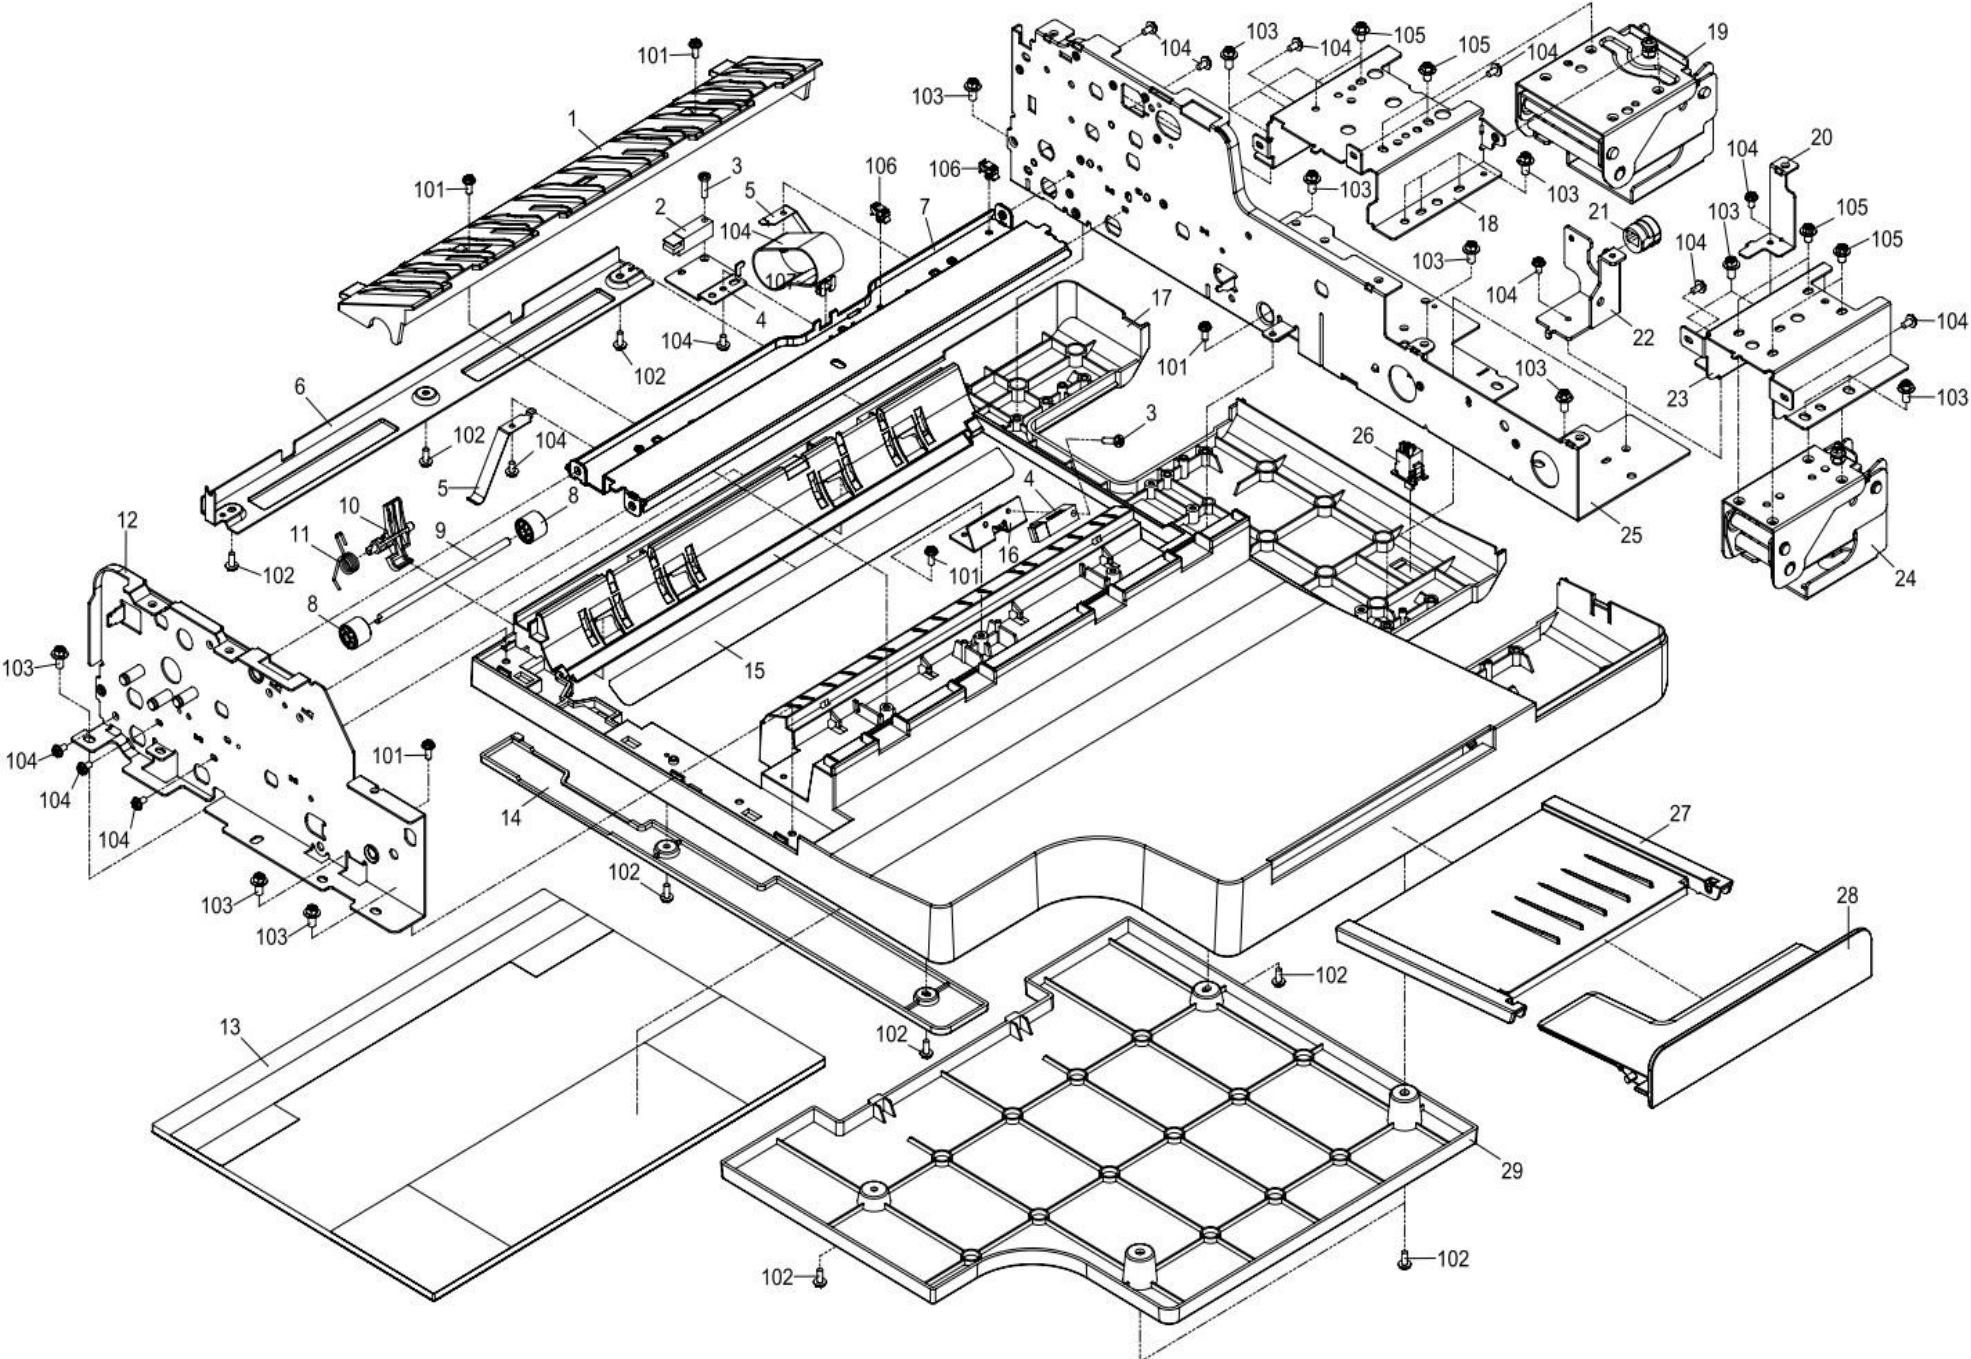


31. ARDF - FRAME SECTION

Index No.	Part No.	Description	Q'ty
1	N3301949	COVER GUIDE EXIT	1
2	M0100077	PHOTO REFLECTOR SENSOR:PS-117ND1 SR	2
3	03530120Z	PHIL.TRU.HEAD SCREW:M3*12	2
4	N3301710	SENSOR BRACKET:LEFT	1
5	N3301322	SPRING PLATE:GUIDE:EXPOSURE GLASS	2
6	N3301912	PLATE:GUIDE:ENTRANCE	1
7	N3301151	STAY LEFT	1
8	N3301917	ROLLER:ENTRANCE:DRIVEN	4
9	N3301918	SHAFT:ENTRANCE:DRIVEN	2
10	N3301919	LEVER:ENTRANCE:DRIVEN	2
11	N3301920	TORSION SPRING:ENTRANCE:DRIVEN	2
12	N3301120	MAIN FRAME FRONT ASSY	1
13	N3303730	CUSHION:WHITE	1
14	N3301960	COVER BASE LOWER FRONT	1
15	N3301913	SHEET:SCANNING:ENTRANCE	1
16	N3301950	BKT : SENSOR EXIT	1
17	N3301946	FRAME:BASE	1
18	N3301131	BRACKET HINGE LEFT	1
19	N3301821	HINGE:LEFT:ASSY:NEST	1
20	N3301154	BRACKET SUPPORT BOARD	1
21	11060101	BUSHING:SR-6P3-4	1
22	N3301153	BRACKET BOARD HARDNESS	1
23	N3301141	BRACKET HINGE RIGHT	1
24	N3301841	HINGE:RIGHT:ASSY:NEST	1
25	N3301180	MAIN FRAME REAR ASSY	1
26	M0112301	ADF OPEN SENSOR	1
27	N3301947	TRAY BASE EXIT	1
28	N3301948	TRAY:BASE:EXIT:OUTER	1
29	N3301961	COVER BASE LOWER RIGHT	1

Index No.	Part No.	Description	Q'ty
101	04503008N-K	SCREW:HEXA:W.F:M3.0*8:T2	5
102	04503008P	SCREW:HEXA:W.F:M3.0*8:T2	9
103	04504008N	SCREW:HEXA:W.F:M4*8:T2	17
104	04513006N-K	SCREW:FLANGE:M3.0*6	14
105	04514006N	SCREW:M4*6	8
106	11050511	CLAMP:HARNESS CLAMP: LWS-0306ZC	2
107	11050328	HARNESS CLAMP:ES0505	1

32. ARDF - DECALS AND DOCUMENTS

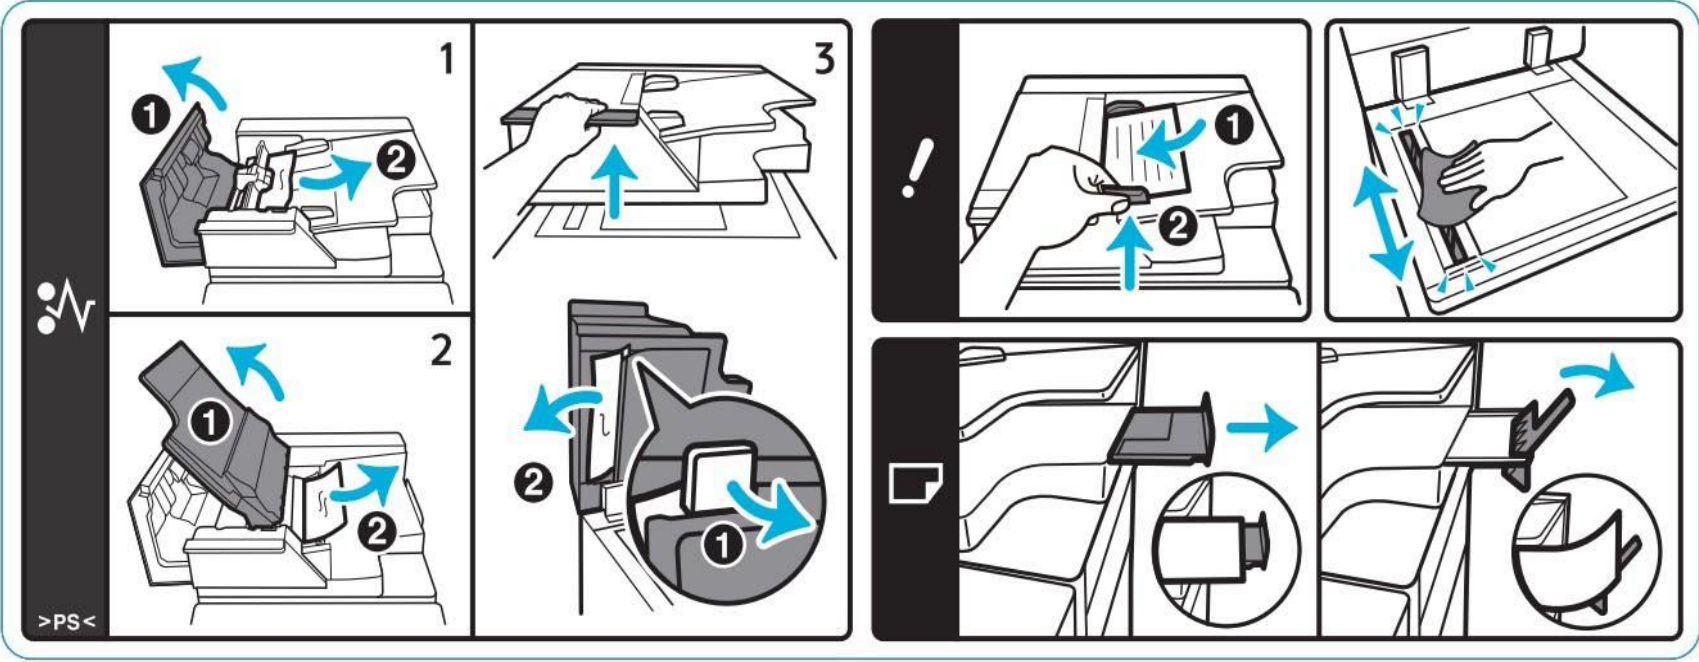1 	2 
3 	

32. ARDF - DECALS AND DOCUMENTS

Index No.	Part No.	Description	Q'ty
1	N3303433	DECAL:TRANSPORT GUIDE	1
2	N3306042	DECAL:SIDE FENCE	1
3	N3306013	DECAL:MISFEED:HANDLE	1

Index No.	Part No.	Description	Q'ty